



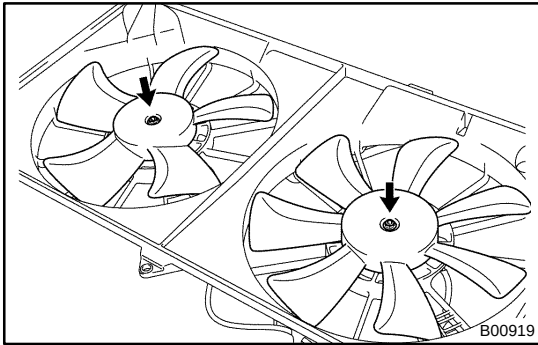

DISASSEMBLY

1. REMOVE FANS

- (a) Remove the nut and fan.
- (b) Remove the 2 fans.

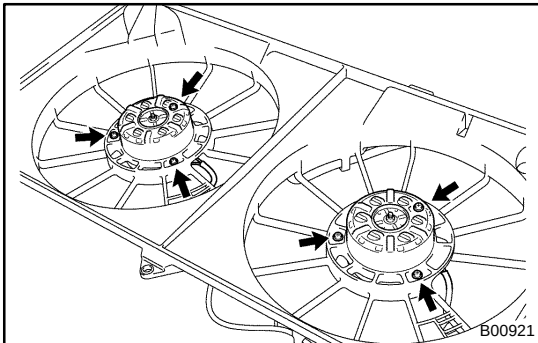

2. REMOVE FAN MOTORS

- (a) Disconnect the wires and connector holders from the fan shroud.
- (b) Remove the 3 screws and fan motor.
- (c) Remove the 2 fan motors.