


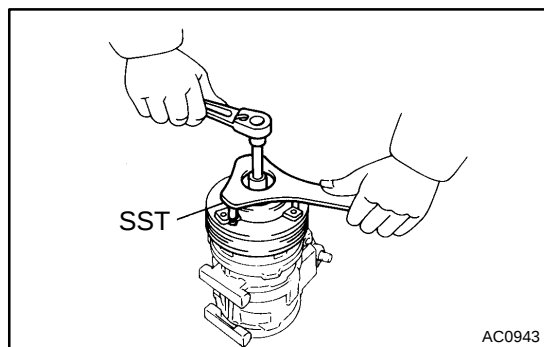


## DISASSEMBLY

### DISASSEMBLE MAGNETIC CLUTCH

(a) Remove the pressure plate.


(1) Using SST and a socket wrench, remove the shaft bolt.

SST 07112-76060

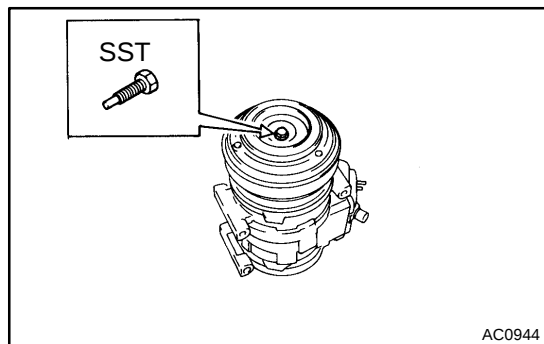


(2) Install SST on the pressure plate.

SST 07112-66040

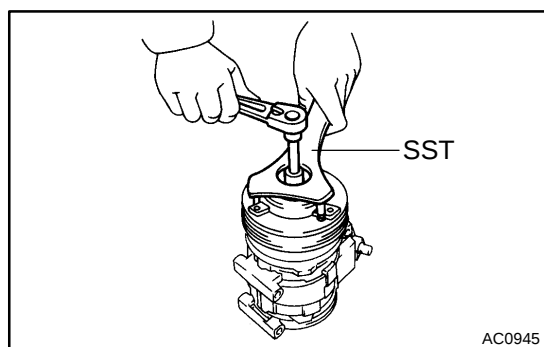


(3) Using SST and a socket wrench, remove the pressure plate.

SST 07112-66040, 07112-76060

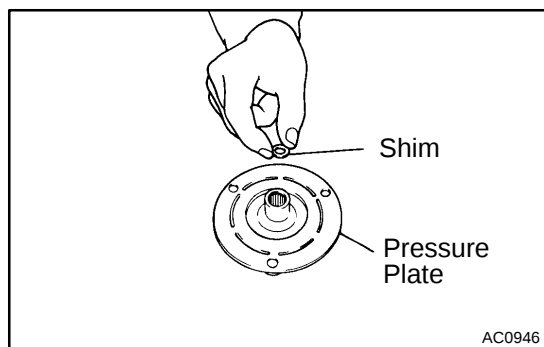


(4) Remove the shims from the pressure plate.

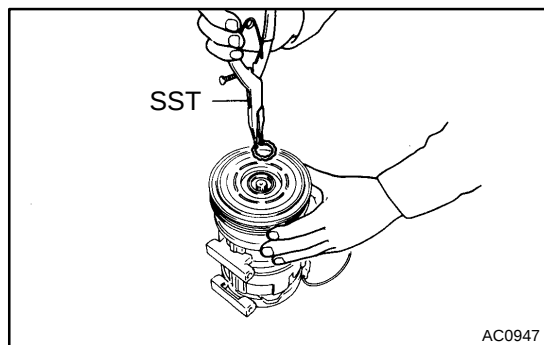

(b) Remove the rotor.


(1) Remove the snap ring.

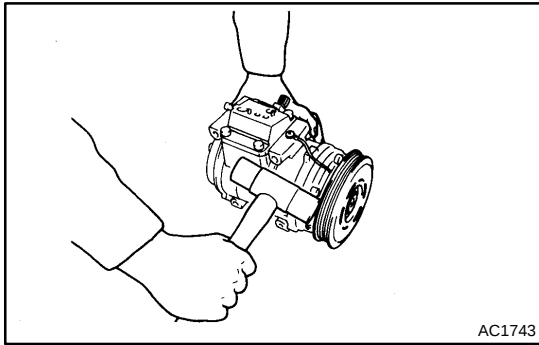

- (2) Using a plastic hammer, tap the rotor off the shaft.


**NOTICE:**

**Be careful not to damage the pulley when tapping on the rotor.**

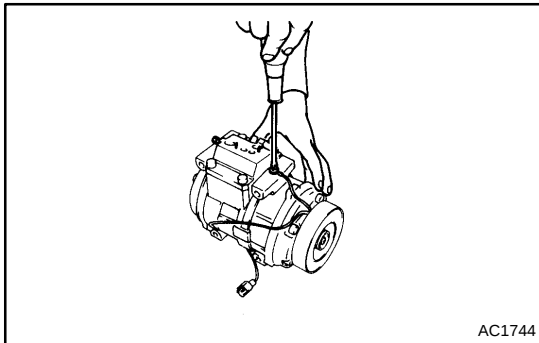


- (c) Remove the stator.

- (1) Disconnect the stator lead wire from the compressor.

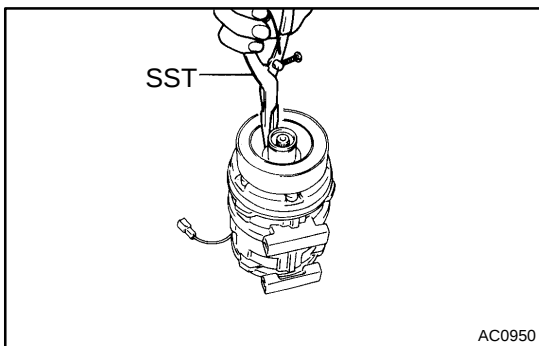

- (2) Remove the snap ring.

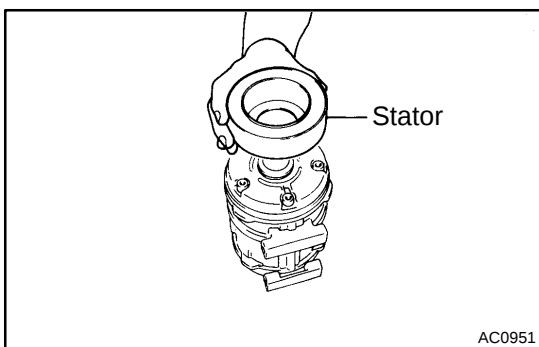

- (3) Remove the stator.