

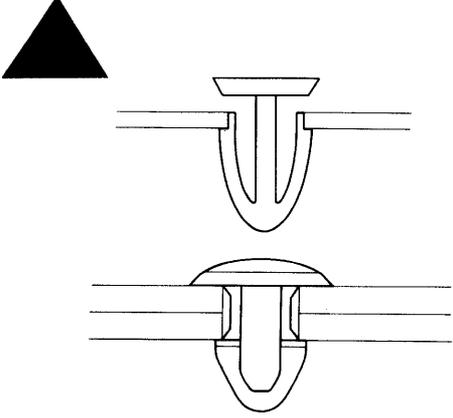
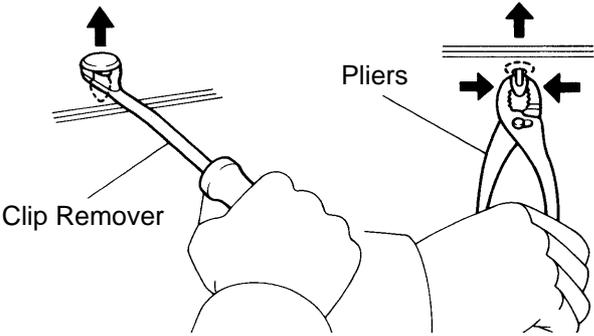
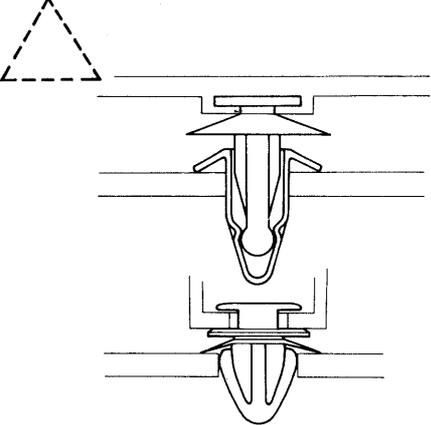
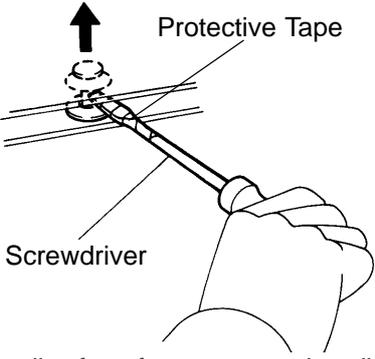
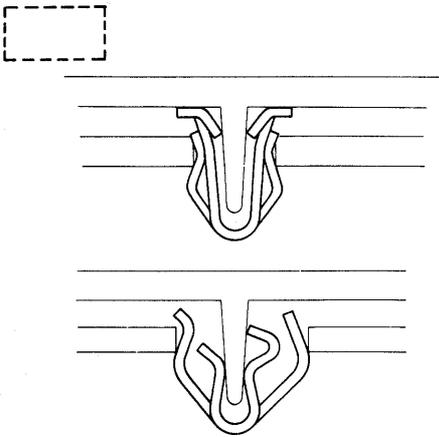
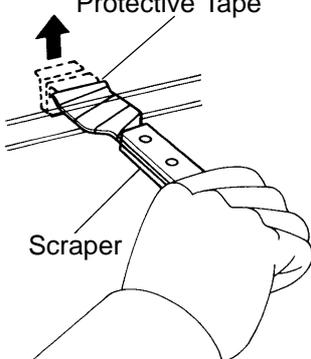
CLIP REPLACEMENT

BO0VU-09

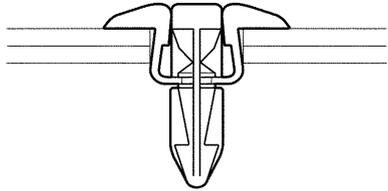
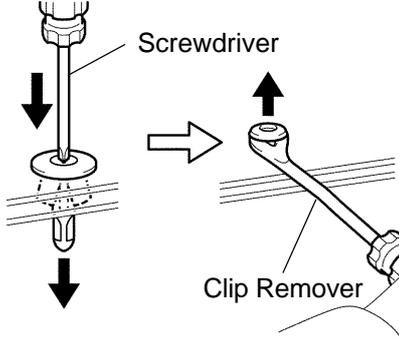
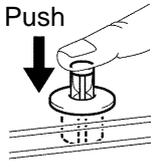
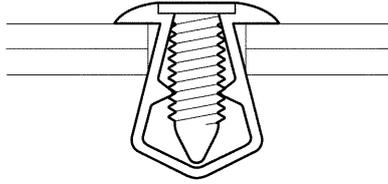
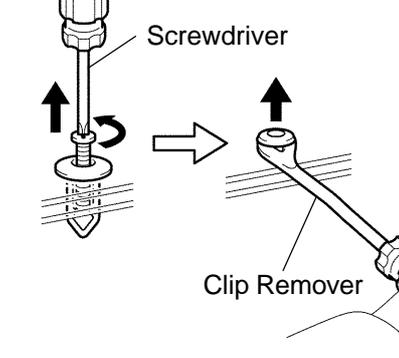
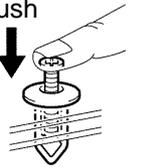
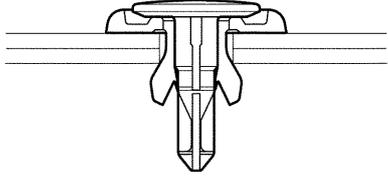
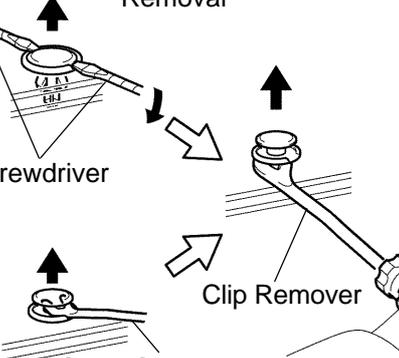
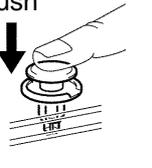
The removal and installation methods of typical clips used in body parts are shown in the table below.

HINT:

If the clip is damaged during the operation, always replace it with a new clip.

Shape (Example)	Removal / Installation
	 <p>Remove clips from front or rear using clip remover or pliers.</p>
	 <p>Remove clips from front or rear using clip remover or pliers.</p>
	 <p>Remove clips from front or rear using clip remover or pliers.</p>

V00005

Shape (Example)	Removal/Installation	
	<p>Removal</p>  <p>Screwdriver</p> <p>Clip Remover</p>	<p>Installation</p>  <p>Push</p> <p>Remove rivet by pushing the center pin through and prying out the rivet shell.</p>
	<p>Removal</p>  <p>Screwdriver</p> <p>Clip Remover</p>	<p>Installation</p>  <p>Push</p> <p>Remove rivet by unscrewing the center pin and prying out the rivet shell.</p>
	<p>Removal</p>  <p>Screwdriver</p> <p>Clip Remover</p> <p>Small Clip Remover</p>	<p>Installation</p>  <p>Push</p> <p>Remove rivet by prying out the pin and then prying out the rivet shell.</p>