


## INSPECTION


### 1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check.  
(See page [DI-607](#) )

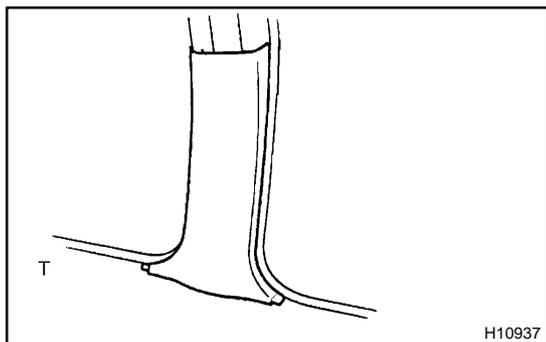


- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.

- Check for cuts and cracks in, or marked discoloration on the center pillar lower garnish.
- Check for cuts and cracks in wire harness, and for chipping in connectors.

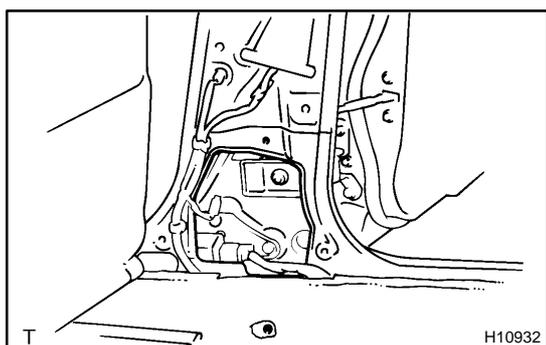

- Check for deformation of the center pillar.

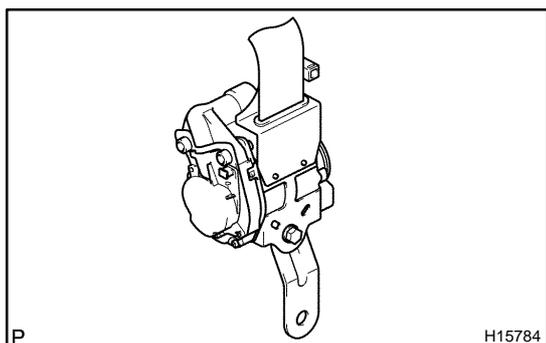

- Check for small cuts and minute cracks in wire harness or marked discoloration on the front seat outer belt.

### CAUTION:

For removal and installation of the front seat outer belt, see page [BO-217](#) and [BO-226](#) .

Be sure to follow the correct procedure.

### 2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check.  
(See page [DI-607](#) )

- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.

- Check for deformation of the center pillar.
- Check for damage on the connector and wire harness.

