

BO4D9-02

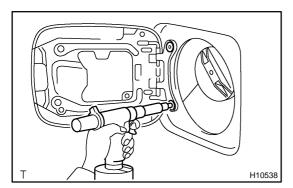

# INSTALLATION


## 1. INSTALL FUEL FILLER OPENING LID

Using a riveter, install the fuel filler opening lid with the 2 rivets to the body.

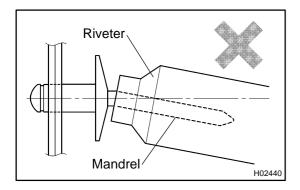


### **NOTICE:**


 Do not prize a riveter. It could damage the riveter and cause loose fitting and mandrel bend.

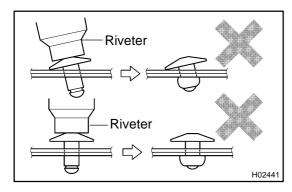

- Do not tilt the riveter when fastening the rivet to the material to avoid loose fitting.
- Do not allow gap spacing between the rivet head and the material.

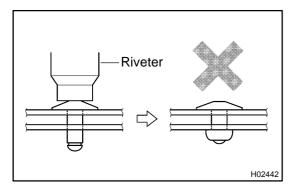

- Do not allow gap spacing between the materials.
- 2. INSTALL FUEL FILLER OPENING SPRING

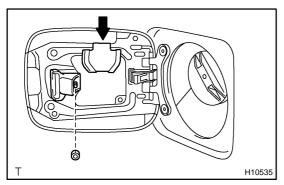


3. INSTALL FUEL FILLER OPENING LID LOCK RETAIN-ER

Install the fuel filler opening lid lock retainer with the nut.

4. INSTALL FUEL TANK CAP HANGER

2005 LEXUS IS300 (RM1140U)

Author: Date: 2306

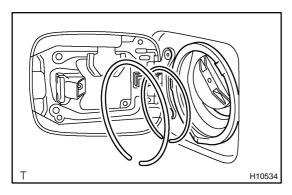

# H19363



- (a) Remove the fuel tank cap.
- (b) Install the fuel filler shield to the body, and put the fuel tank cap back immediately.
- (c) Install the fuel tank cap quickly.


### **CAUTION:**

Always keep the tank cap closed when it is not required to be open. Keep open fire away during the operation.


(d) Install the 2 rings to the fuel filler shield as shown in the illustration.

### 6. INSTALL FUEL LID LOCK CONTROL


(a) Install the retainer to the body from the outside of the vehicle and rotate it right to lock.

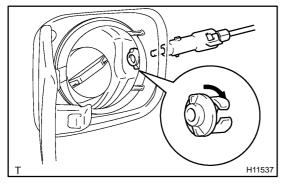

(b) Insert the fuel lid lock control to the retainer and rotate it to the left to lock.

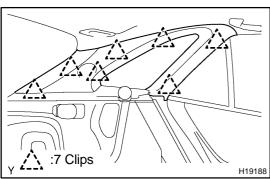

### 7. INSTALL ROOF SIDE INNER GARNISH

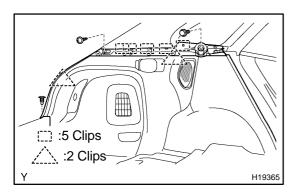


### 8. INSTALL DECK TRIM SIDE PANEL ASSEMBLY

- (a) Install the deck trim side panel assembly then connect the connector.
- (b) Install the screw, bolt and clip.
- (c) Install the 2 floor hooks with the 2 bolts.

2005 LEXUS IS300 (RM1140U)

Author: Date: 2307

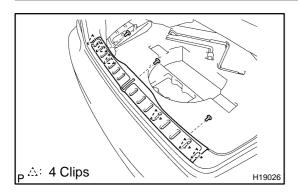

- 9. INSTALL REAR FLOOR FINISH PLATE
- (a) Install the rear floor finish plate.
- (b) Install the 3 clips.
- (c) Install the 2 rope hook assemblies with the 2 bolts.
- 10. INSTALL TONNEAU COVER ASSEMBLY
- 11. INSTALL REAR FLOOR BOARD NO. 3
- 12. INSTALL REAR FLOOR BOARD NO. 2
- 13. INSTALL DECK BOARD NO. 2
- 14. INSTALL DECK FLOOR BOX FRONT
- (a) Install the deck floor box.
- (b) Install the 2 tether anchor brackets with the 2 bolts. Torque: 21 N-m (214 kgf-cm, 15ft-lbf)
- (c) Install the restraint seat tether anchor cover.
- (d) Install the 2 rope hook assemblies with the 2 bolts.
- 15. INSTALL REAR SEAT FLOOR BOARD NO. 4
- (a) Install the rear floor board with the 2 bolts.
- (b) Install the seat back board carpets.
- 16. INSTALL SIDE SEAT BACK ASSEMBLY (See page BO-204)
- 17. INSTALL REAR SEAT CUSHION (See page BO-204)