



REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE DRIVE SHAFT (See page [SA-59](#))
3. REMOVE UPPER SUSPENSION ARM
 - (a) Remove the nut.

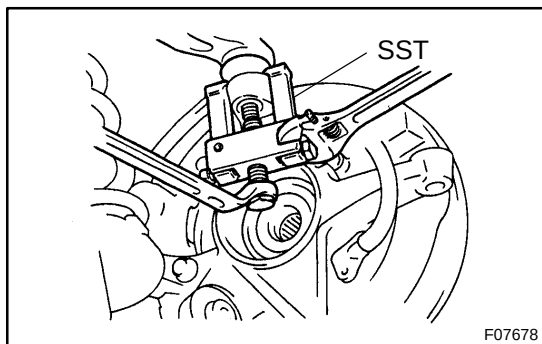

- (b) Using SST, disconnect the upper suspension arm from the axle carrier.
SST 09628-6201 1
 - (c) Support the axle carrier securely.

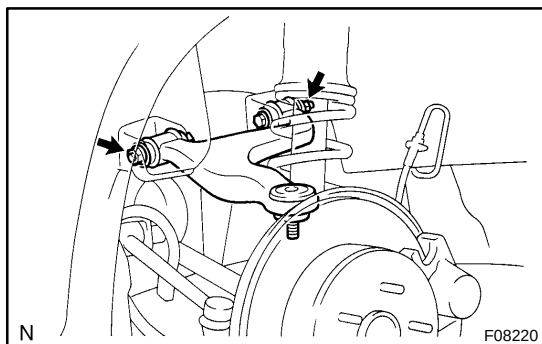

- (d) Remove the 2 nuts, washers, bolts and upper suspension arm from the body.