


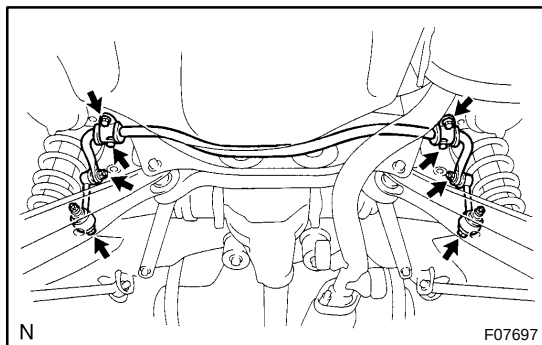

REMOVAL

1. REMOVE STABILIZER BAR

- (a) Remove the 4 nuts, 2 bolts and stabilizer bar links.

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (5 mm) to hold the stud.

- (b) Remove the 4 bolts and stabilizer bar.

2. REMOVE 2 BRACKETS AND BUSHINGS FROM STABILIZER BAR