


INSTALLATION

1. INSTALL 2 BUSHINGS AND BRACKETS TO STABILIZER BAR

HINT:

- Install the bushing to the outside of the paint line on the stabilizer bar.
- Install the bushing to the stabilizer bar so that the cutout of the bushing faces the rear of the vehicle, as shown in the illustration.

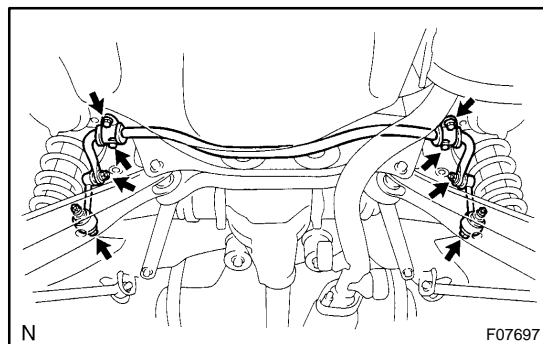

2. INSTALL STABILIZER BAR

- Install the stabilizer bar to the body with the 4 bolts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- Install the 2 stabilizer bar links with the 2 bolts and 4 nuts.
Torque:
Bolt: 30 N·m (305 kgf·cm, 22 ft·lbf)
Nut: 65 N·m (663 kgf·cm, 48 ft·lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (5 mm) to hold the stud.