


DISASSEMBLY

1. REMOVE DUST DEFLECTOR

Using a screwdriver, remove the dust deflector.

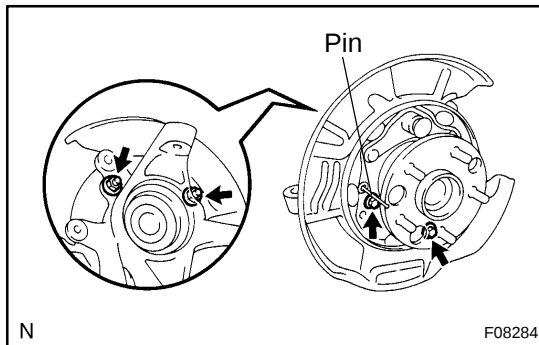

2. REMOVE AXLE HUB

(a) Remove the 2 bolts, nuts and pin.


(b) Mount the axle carrier in a vise.

HINT:

Use a set of soft jaws in the vise to protect the axle carrier.

NOTICE:


Do not tighten the vise too tight.

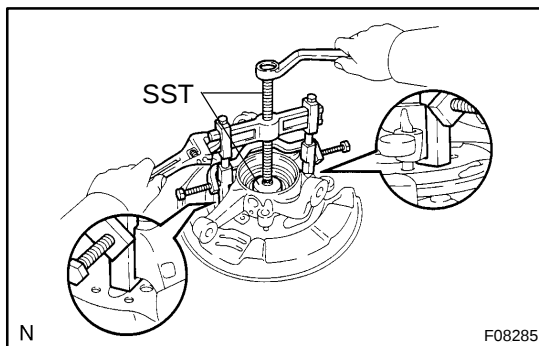

(c) Using SST, remove the axle hub from the axle carrier.

SST 09950- 40011 (09951- 04020, 09952- 04010, 09953- 04030, 09954- 04010, 09955- 04051, 09957-04010, 09958-04011), 09950-60010 (09951-00480)

(d) Remove the backing plate.

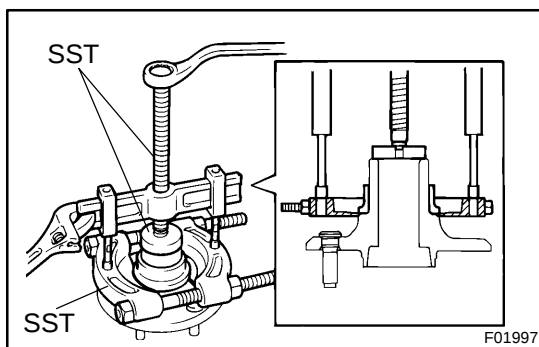

(e) Using SST, remove the bearing inner race from the axle hub.


SST 09950- 00020, 09950- 40011 (09951- 04020, 09953- 04030, 09957- 04010), 09950- 50013 (09952-05010, 09954-05021, 09955-05040), 09950-60010 (09951-00480)

NOTICE:

Be careful not to damage the axle hub.

3. REMOVE BEARING

(a) Using snap ring pliers, remove the snap ring from the axle carrier.

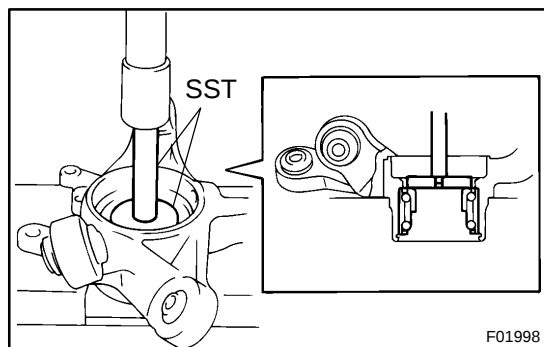

- (b) Using SST and a press, remove the bearing from the axle carrier.

SST 09950-60010 (09951-00650),
09950-70010 (09951-07100)