



## PRECAUTIONS

1. Before working on the fuel system, disconnect the negative terminal from the battery.

HINT: Any diagnostic code retained by the computer will be erased when the battery terminal is removed.

Therefore, if necessary, read the diagnostic code before removing the battery terminal.

2. Do not smoke or work near an open flame when working on the fuel system.
3. Keep gasoline off rubber or leather pans.

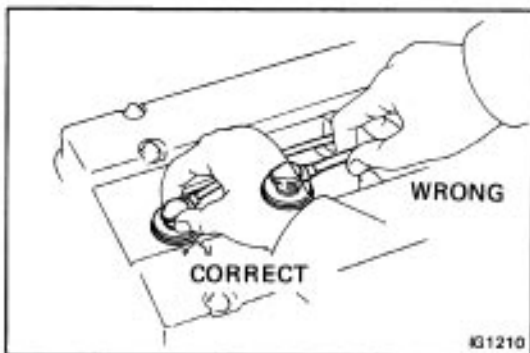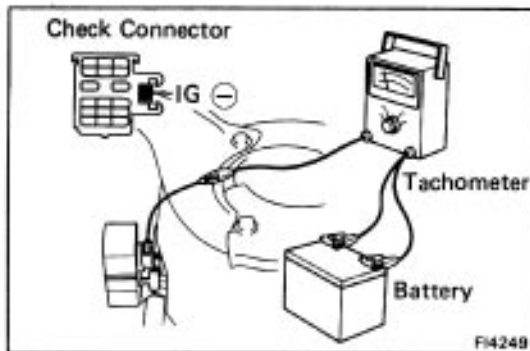

## INSPECTION PRECAUTIONS

## MAINTENANCE PRECAUTIONS

### 1. CHECK CORRECT ENGINE TUNE-UP

### 2. PRECAUTIONS WHEN CONNECTING GAUGE

- (a) Connect the tachometer (+) terminal to the terminal IG (-) of the check connector.
- (b) Use the battery as the power source for the timing light, tachometer, etc.

### 3. IN EVENT OF ENGINE MISFIRE, FOLLOWING PRECAUTIONS SHOULD BE TAKEN

- (a) Check proper connection of battery terminals, etc.
- (b) Handle high-tension cords carefully.
- (c) After repair work, check that the ignition coil terminals and all other ignition system lines are reconnected securely.
- (d) When cleaning the engine compartment, be especially careful to protect the electrical system from water.

### 4. PRECAUTIONS WHEN HANDLING OXYGEN SENSOR(S)

- (a) Do not allow oxygen sensor to drop or hit against an object.
- (b) Do not allow water to come into contact with the sensor or attempt to cool it.