




Engine Control (G16E-GTS)

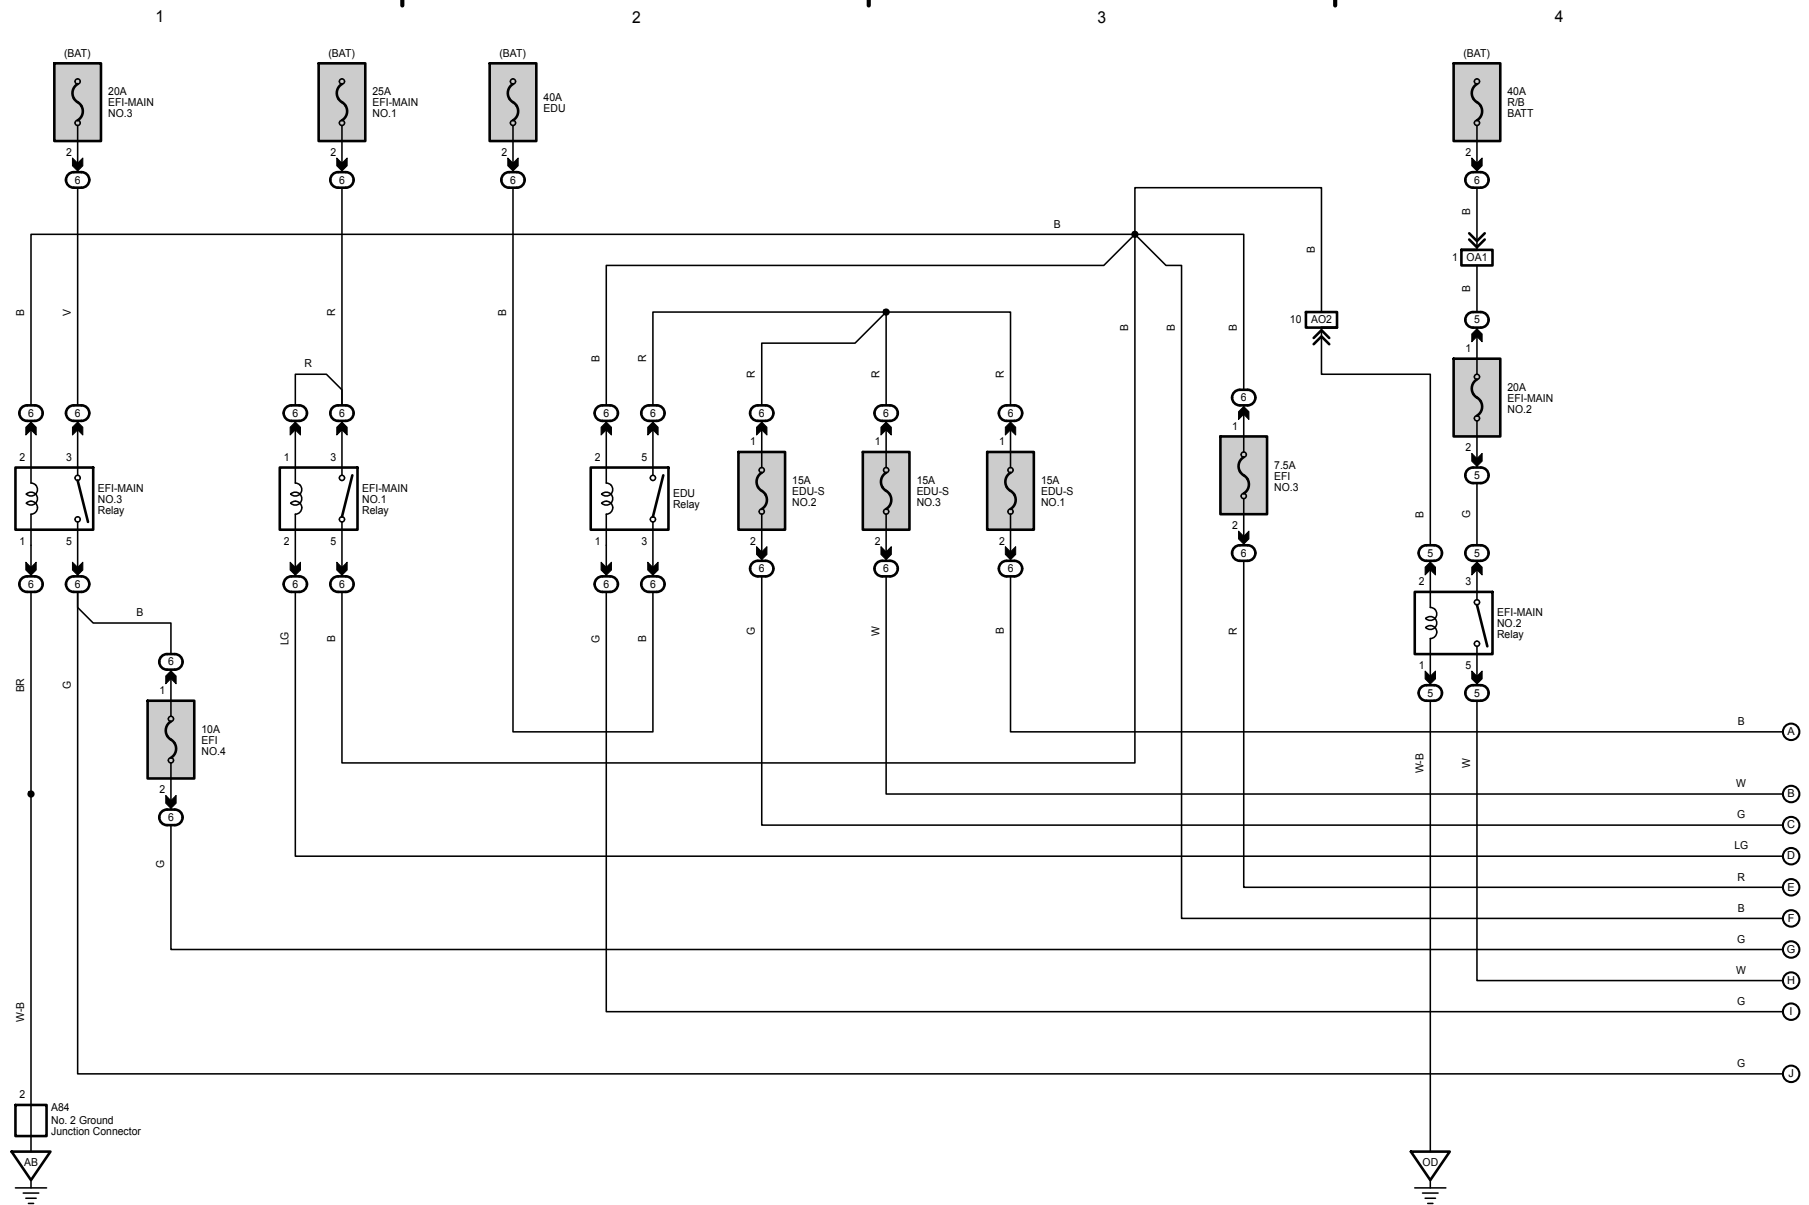


Engine Control (G16E-GTS)

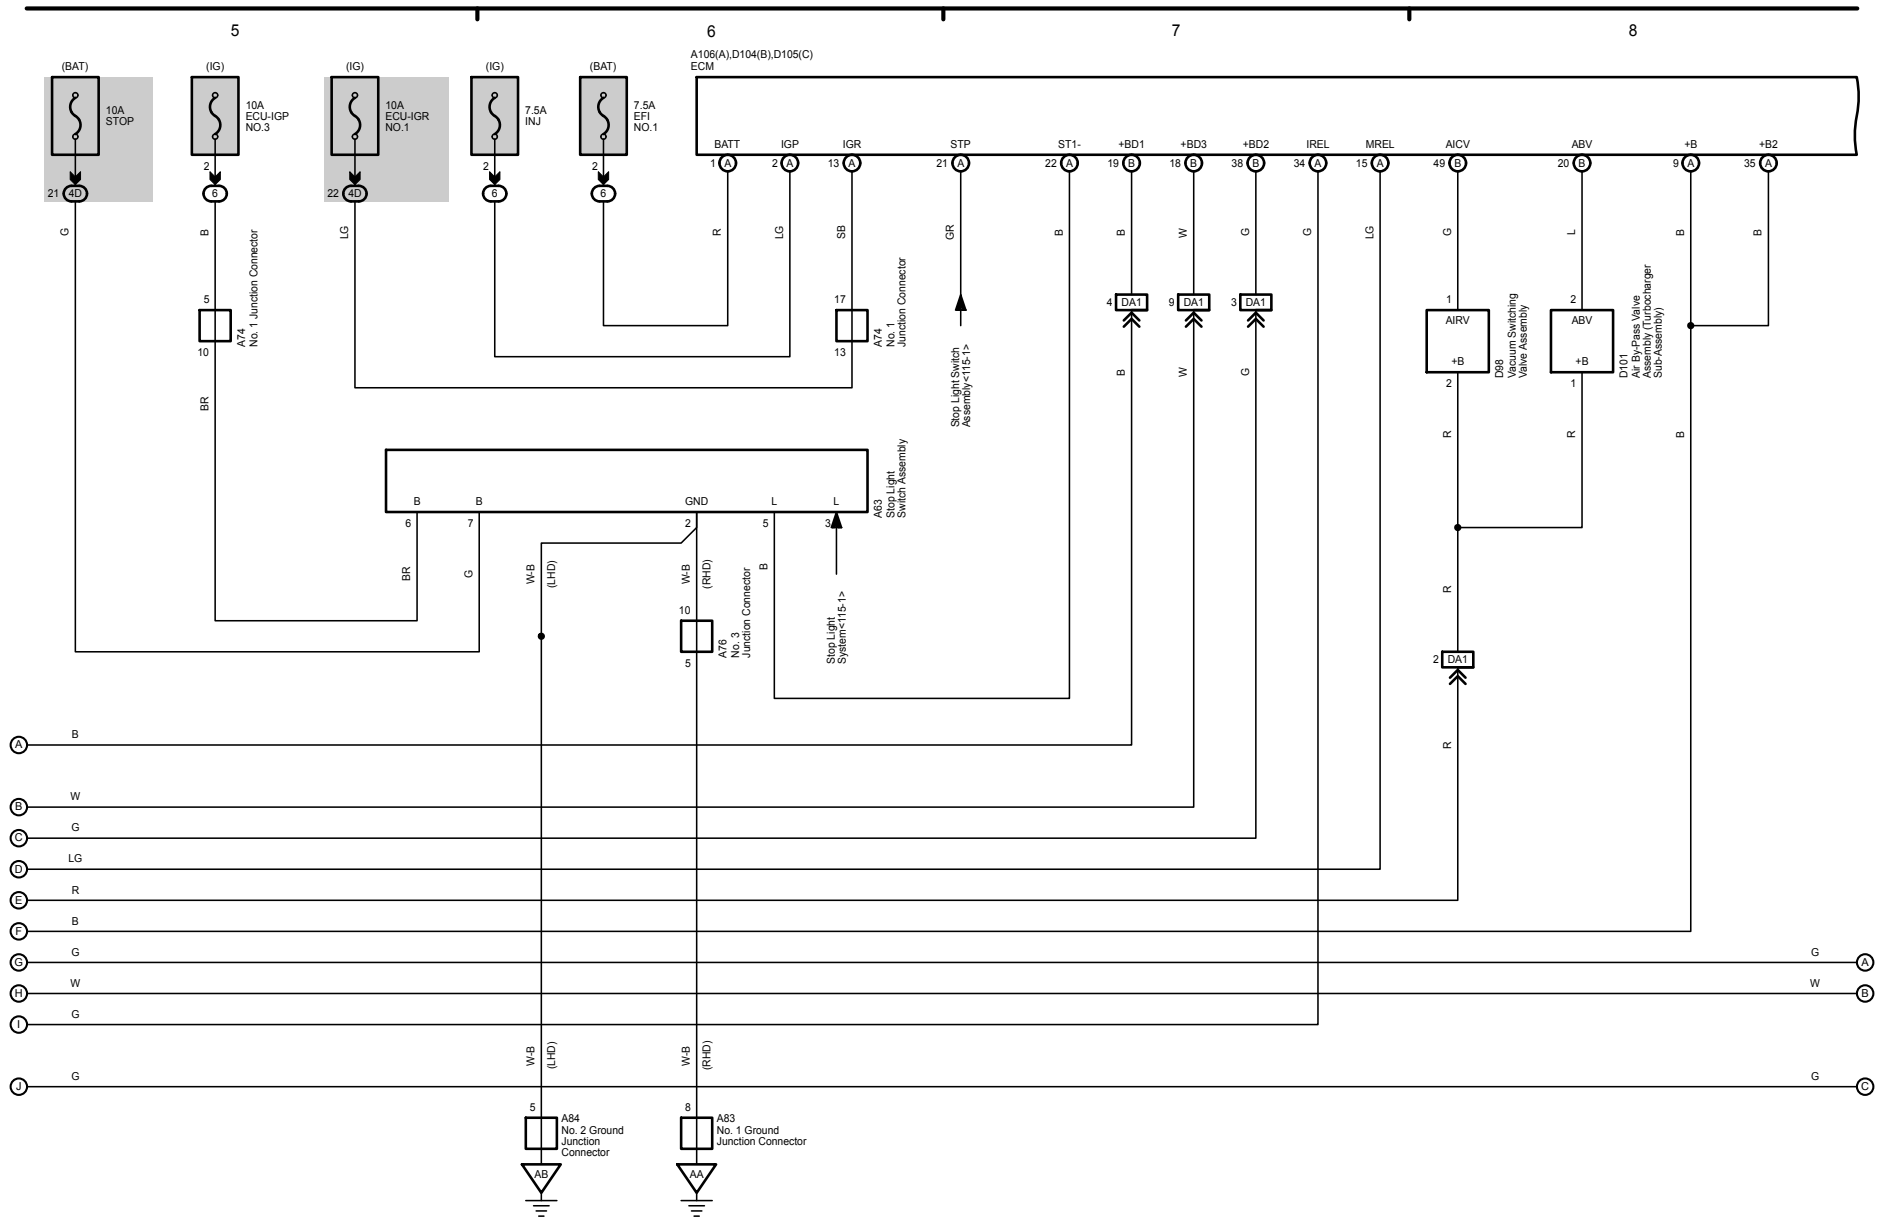


Engine Control (G16E-GTS)

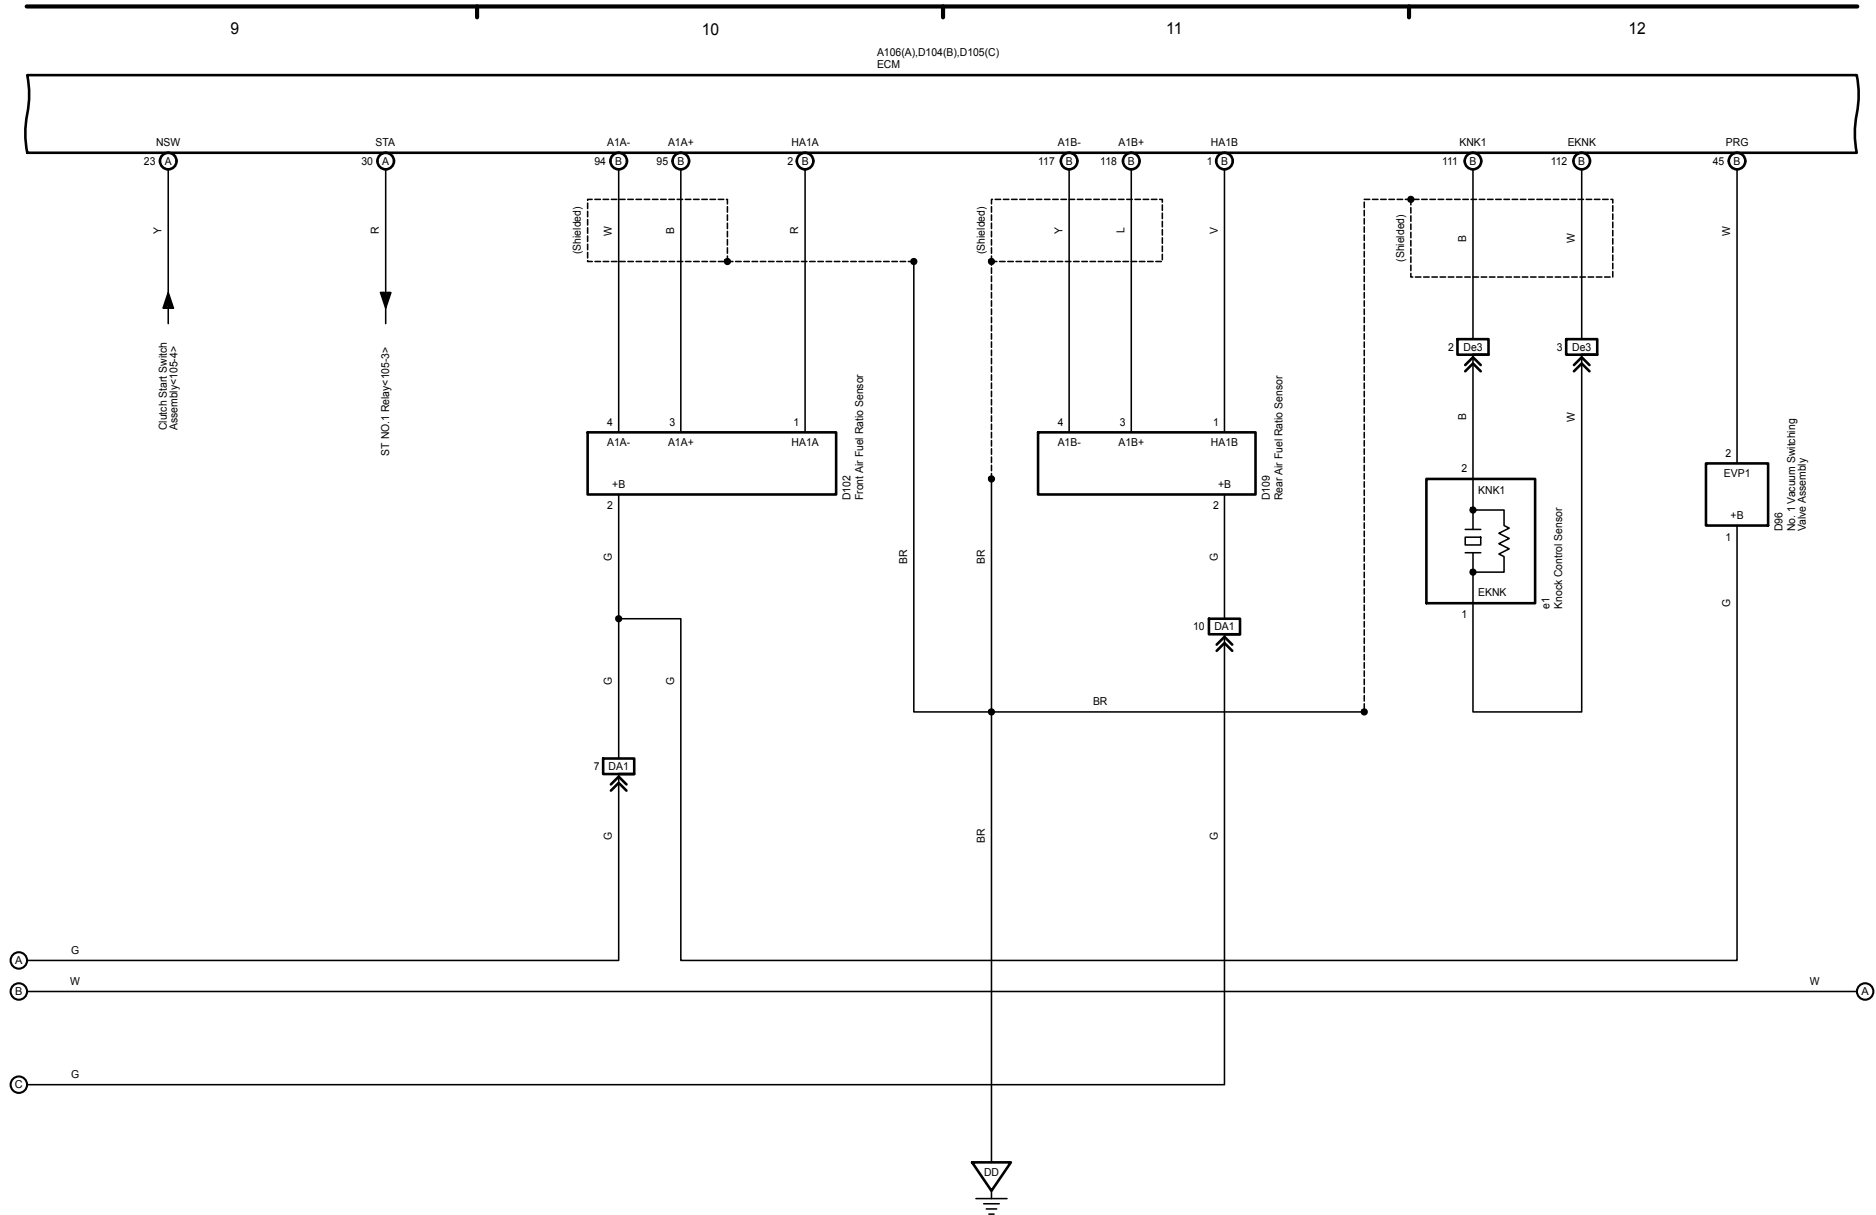


Engine Control (G16E-GTS)

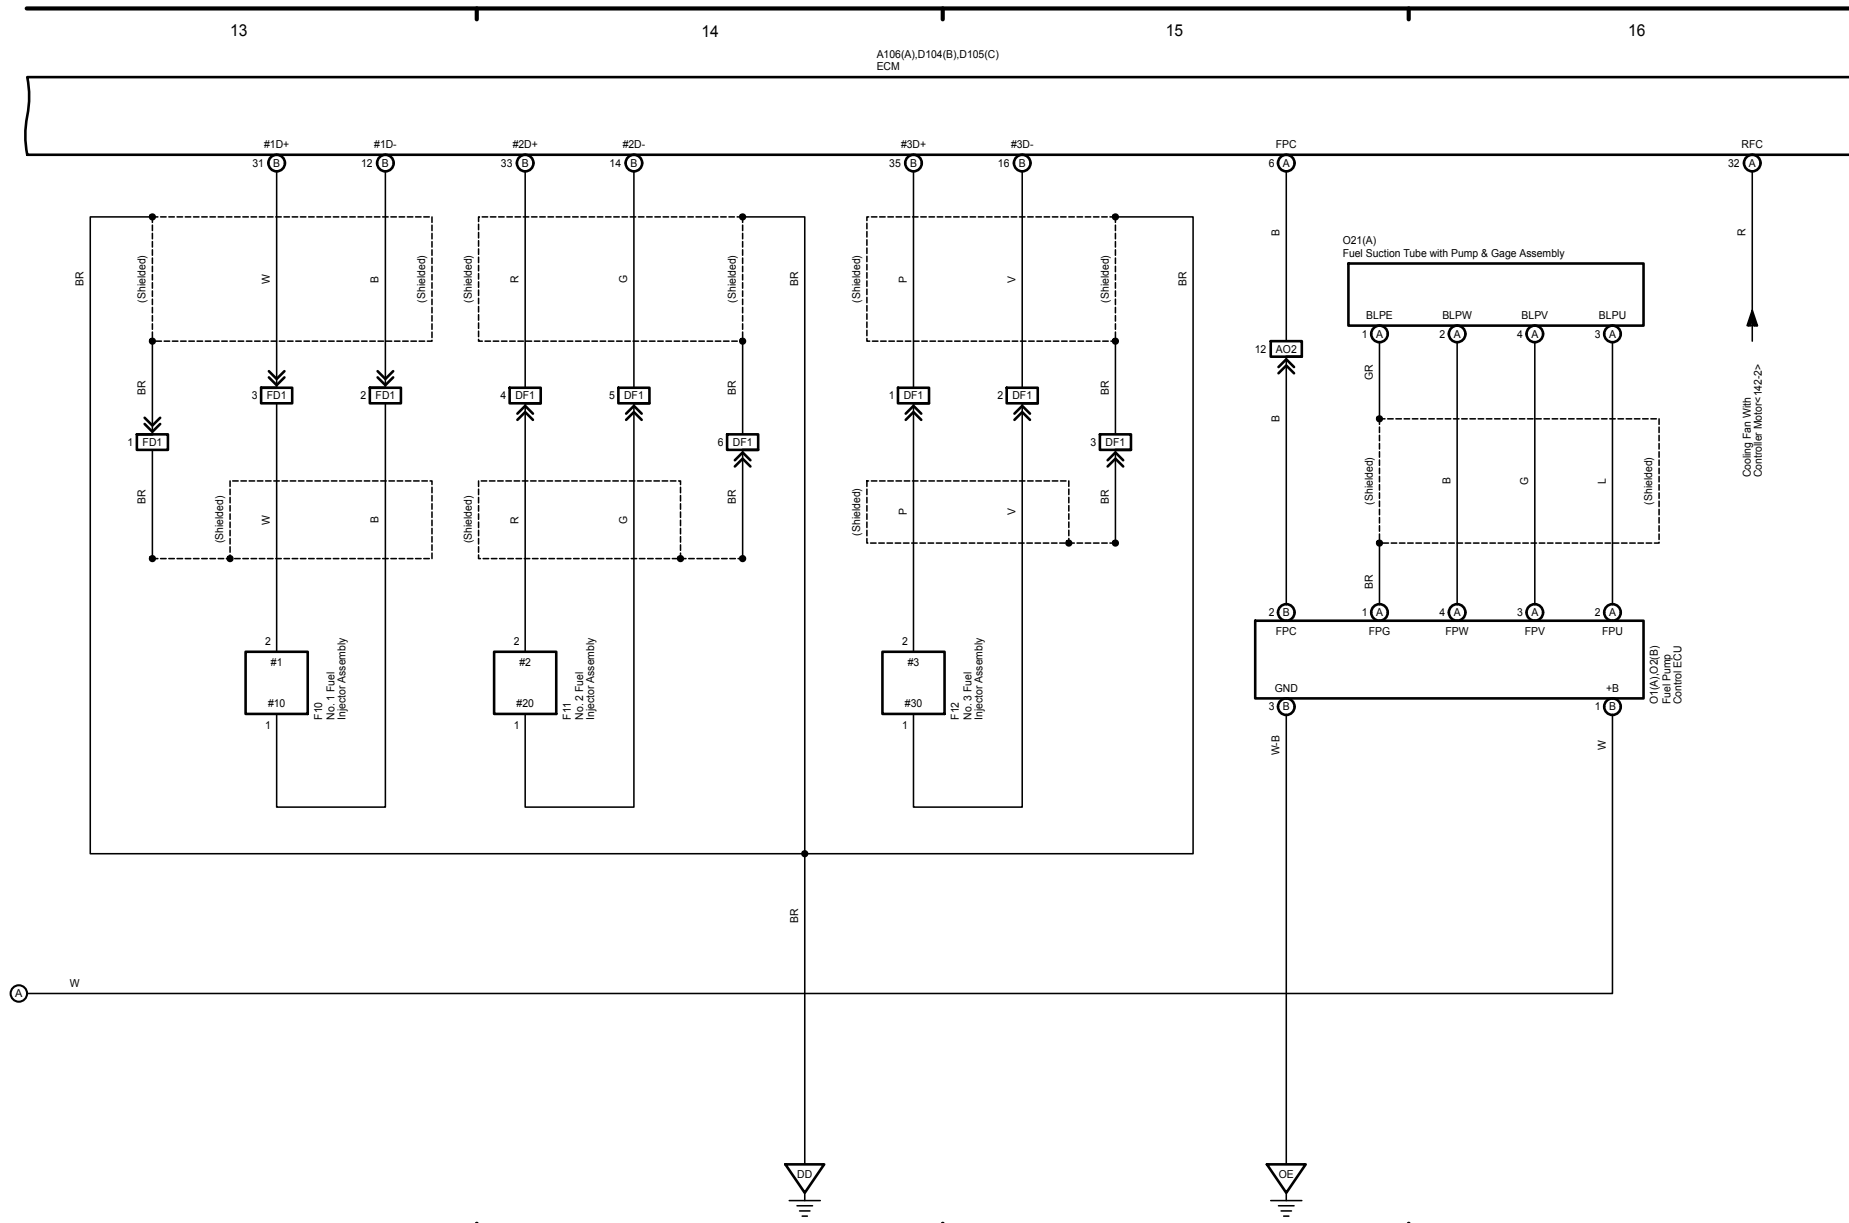


Engine Control (G16E-GTS)

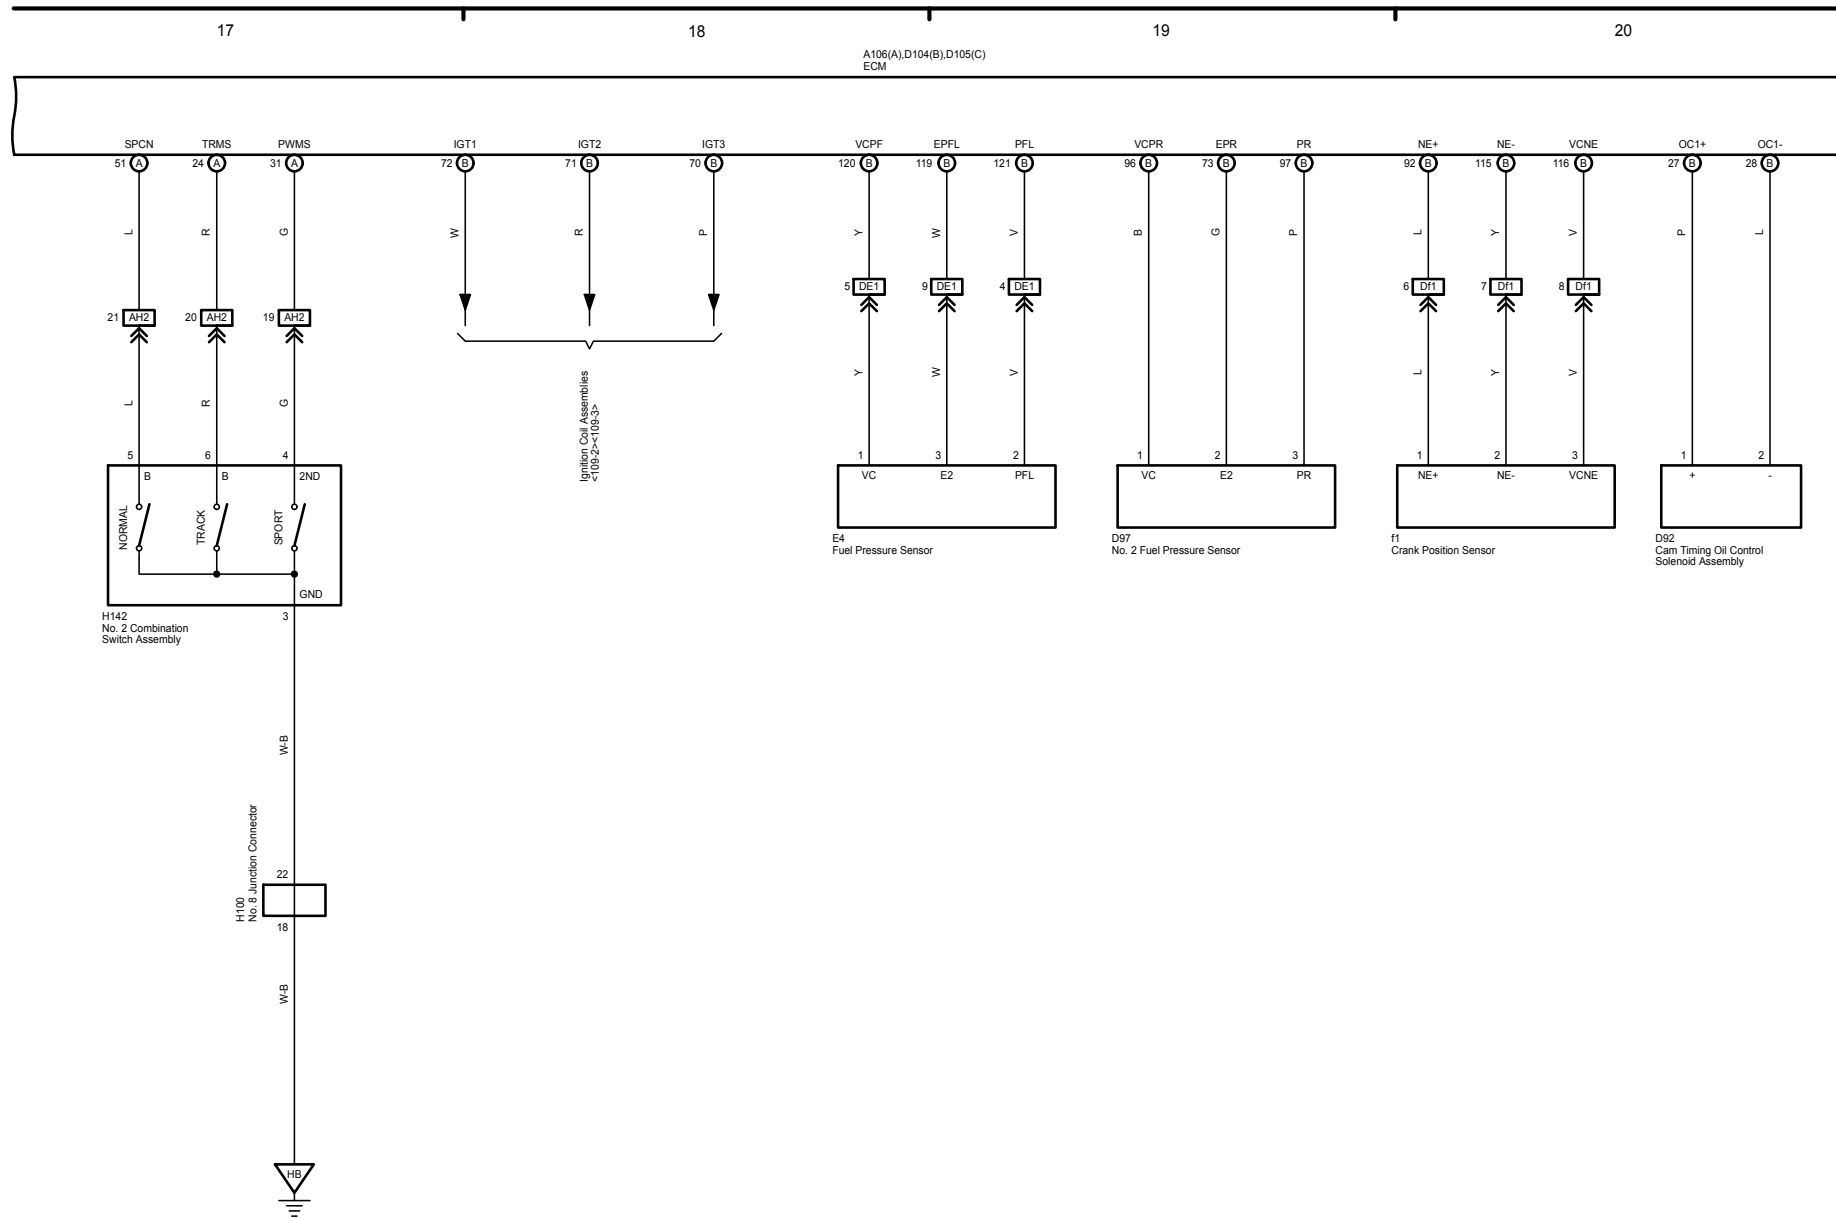


Engine Control (G16E-GTS)

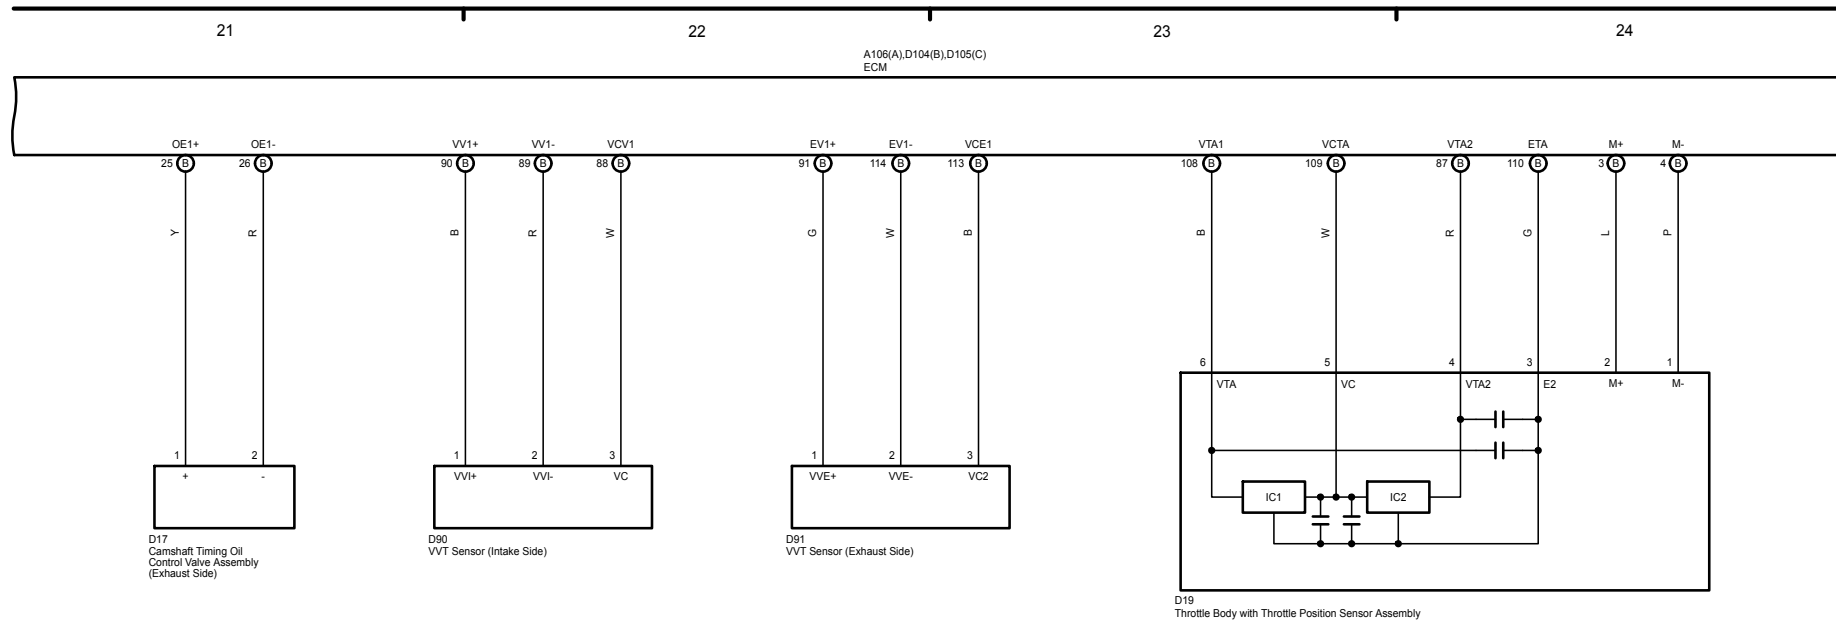


Engine Control (G16E-GTS)

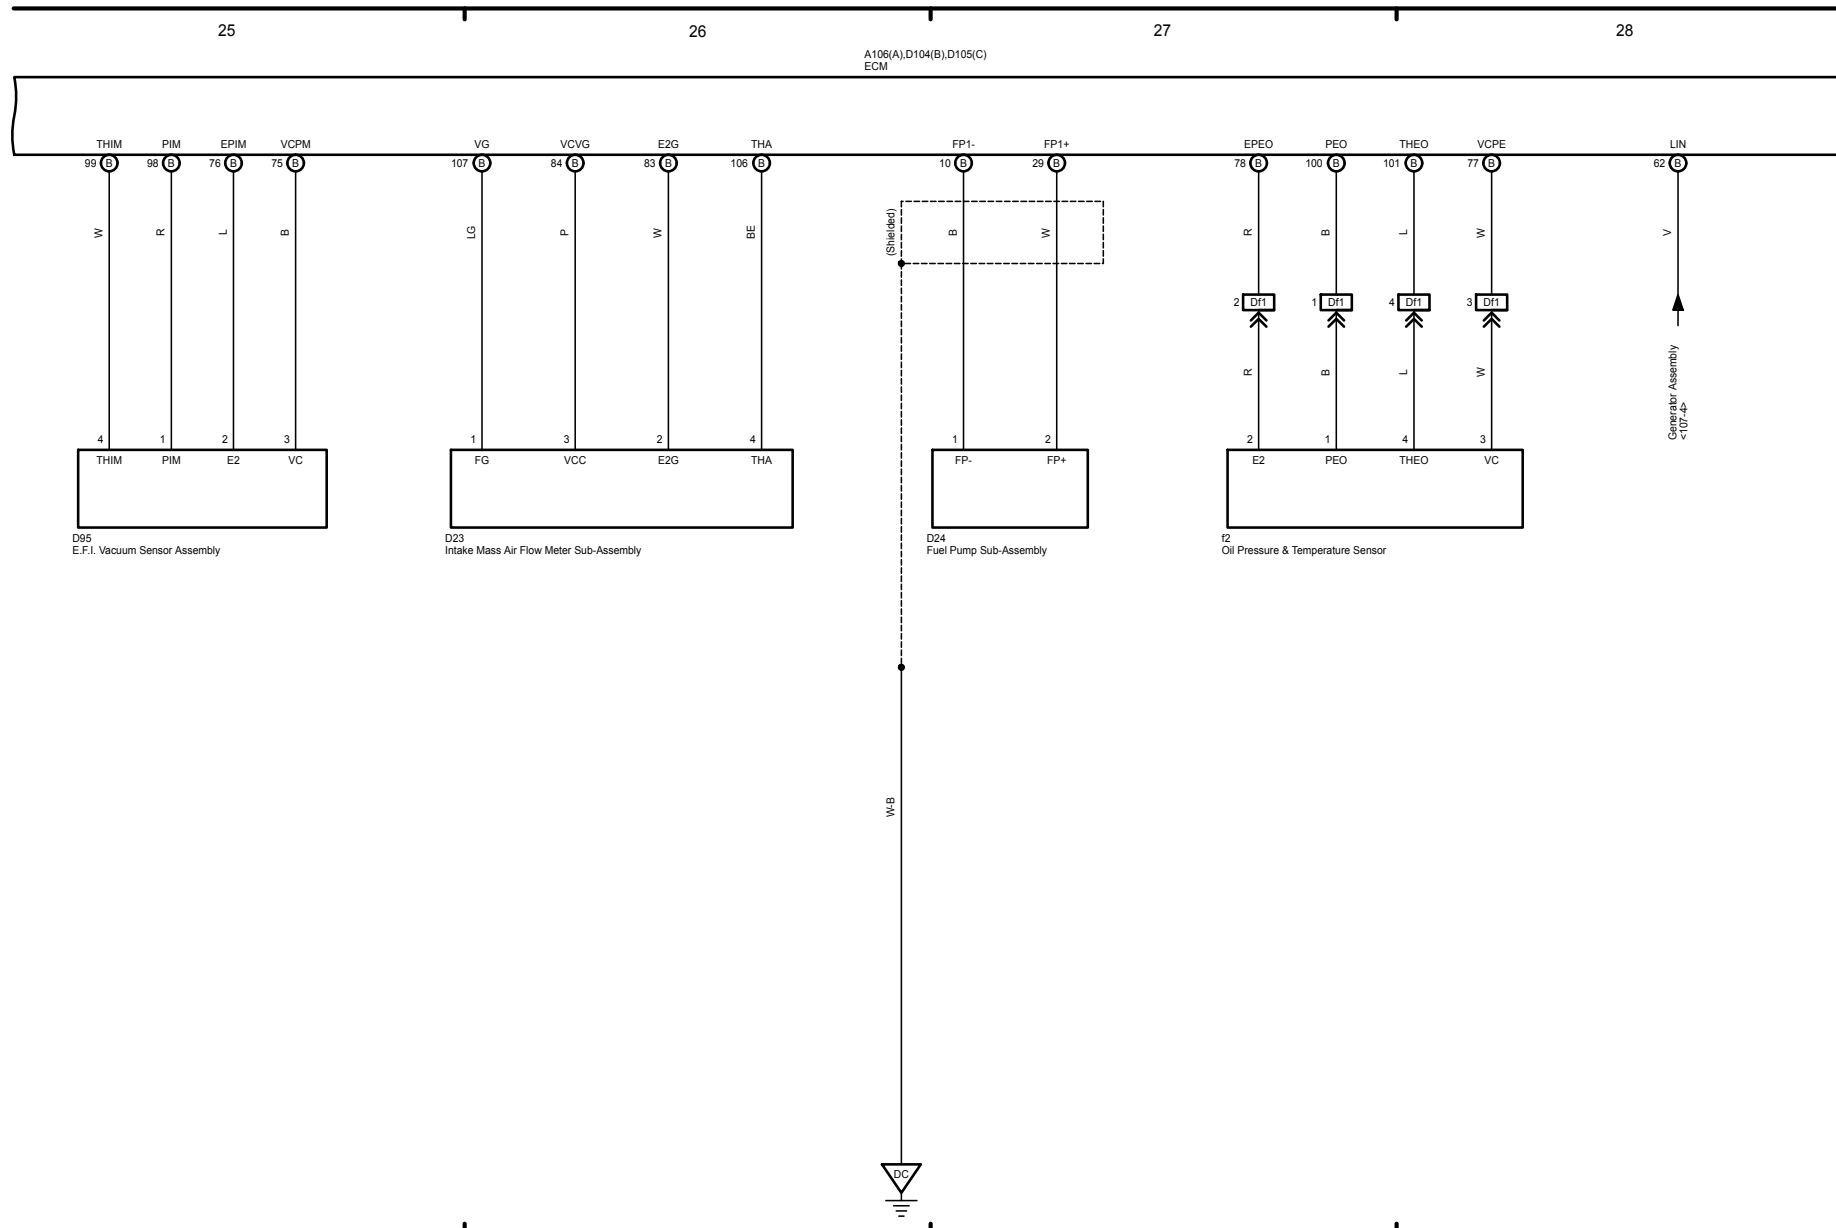


Engine Control (G16E-GTS)

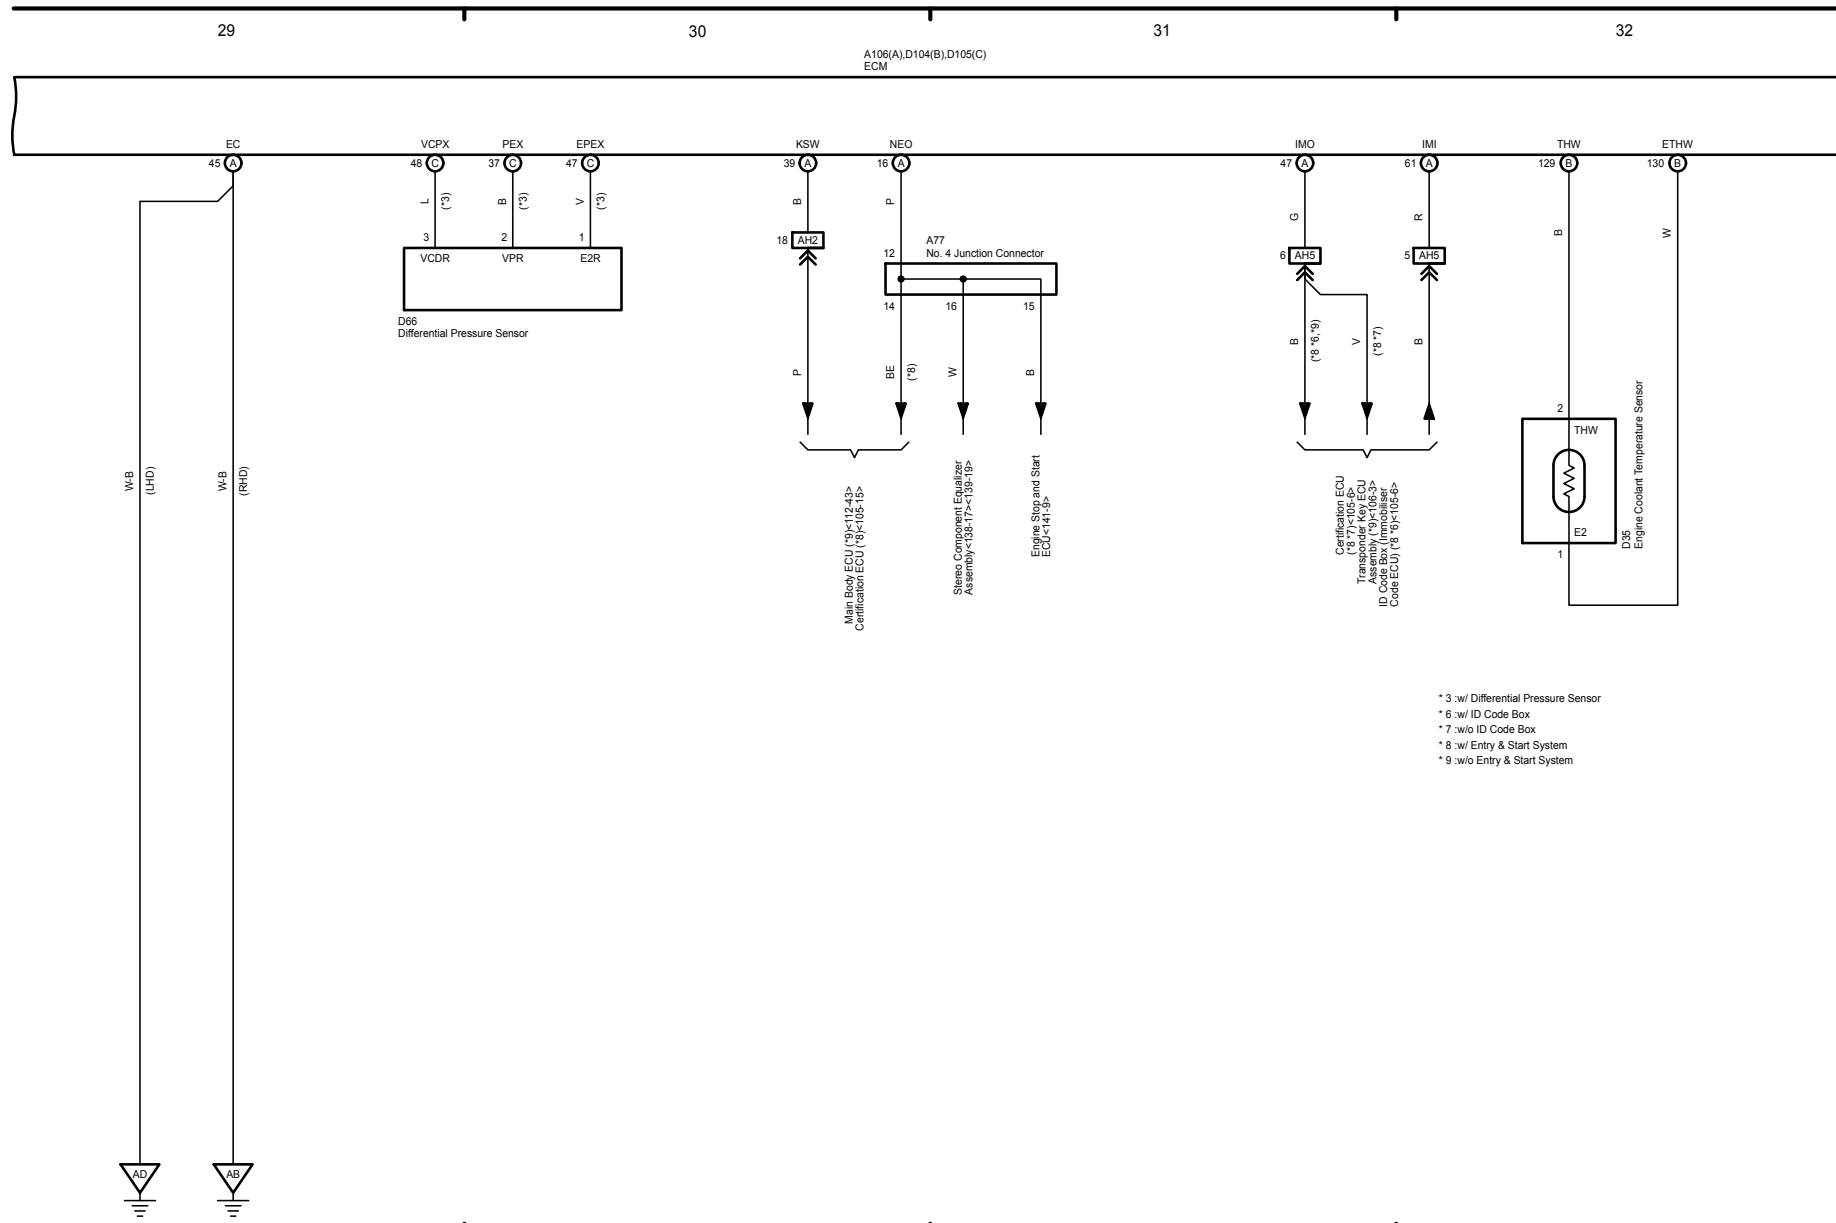

Engine Control (G16E-GTS)

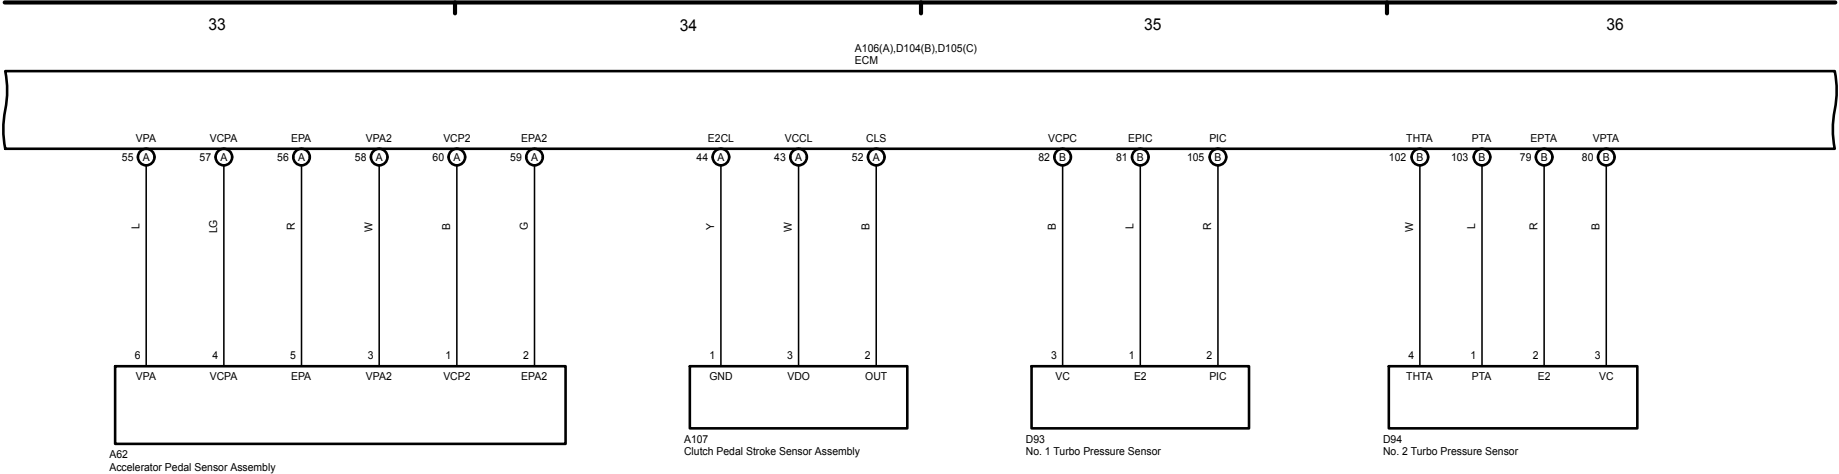

Engine Control (G16E-GTS)

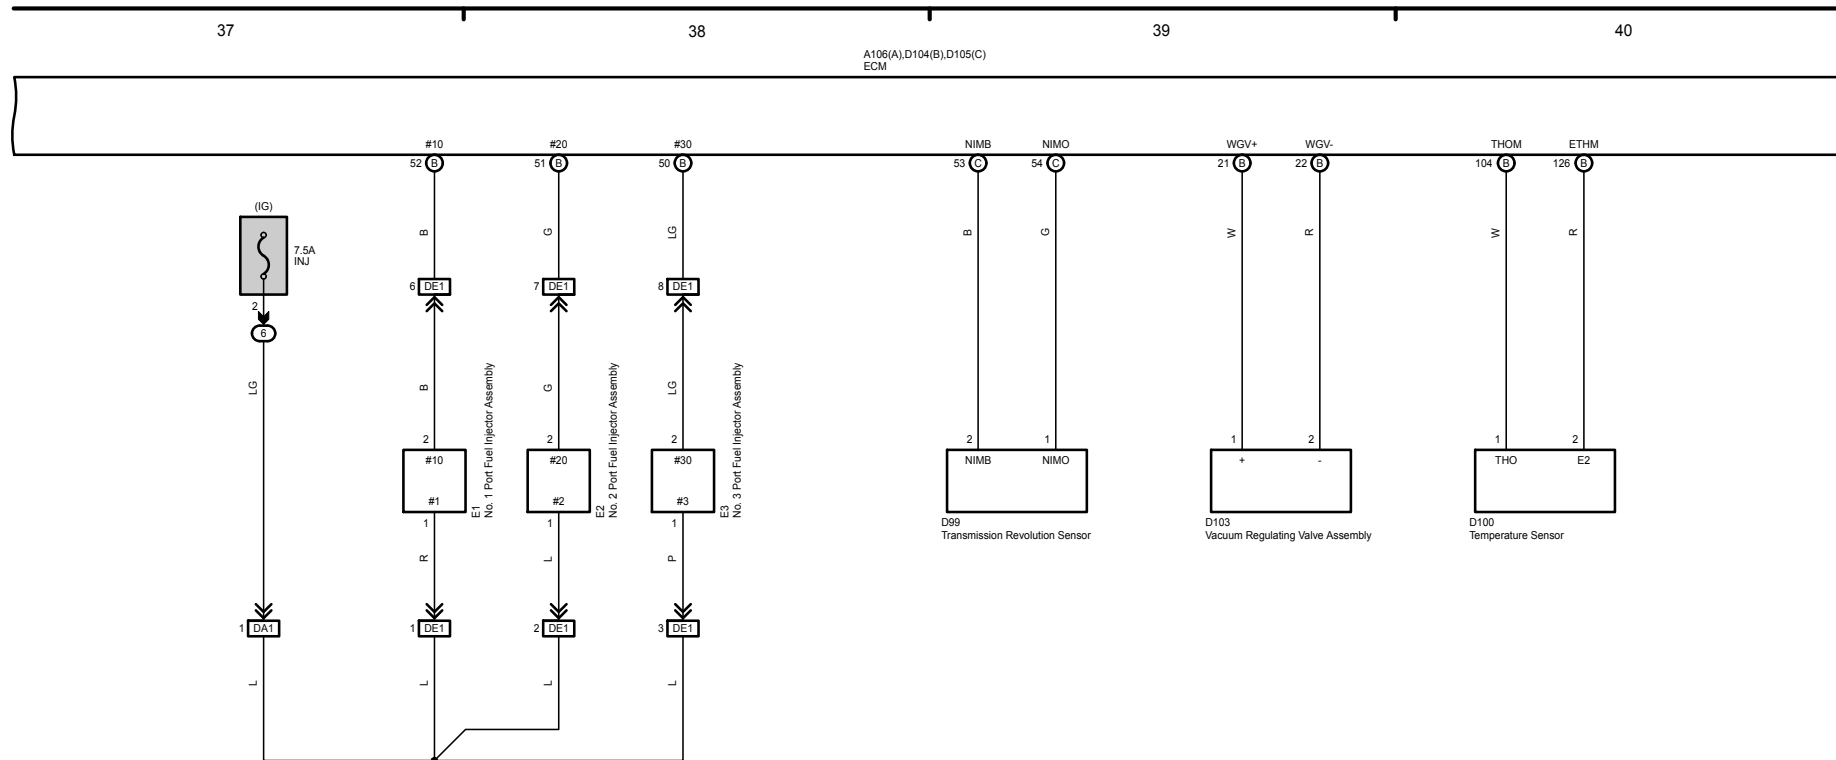

Engine Control (G16E-GTS)

