


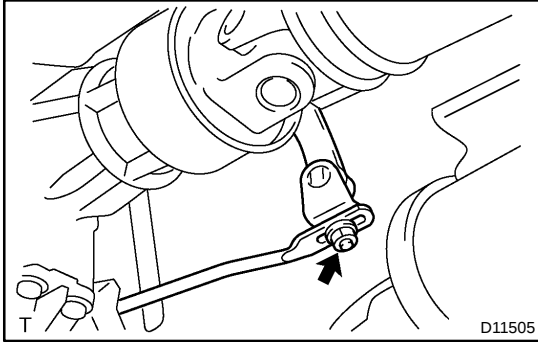


REMOVAL

1. SEPARATE NO. 1 FLOOR SHIFT GEAR SHIFTING ROD

- (a) Shift into the N position.
- (b) Remove the nut and separate the No. 1 floor shift gear shifting rod from the connecting rod swivel.

2. REMOVE CONSOLE BOX ASSEMBLY (See page [BO-139](#))

- (a) Remove the console upper panel.
- (b) Remove the box bottom mat.
- (c) Remove the parking brake hole cover assembly.
- (d) Remove the console box assembly.

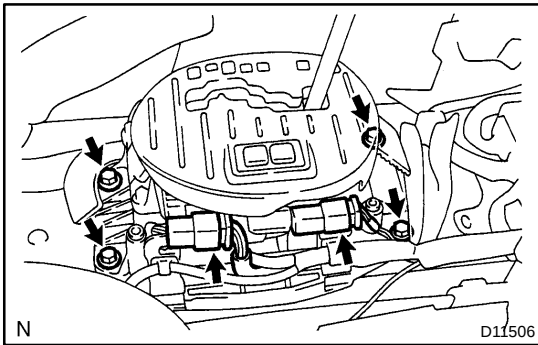

3. REMOVE FLOOR SHIFT LEVER ASSEMBLY

- (a) Remove the 4 bolts.
- (b) Disconnect the 2 connectors.
- (c) Remove the floor shift lever assembly.