

REMOVAL

REMOVE LH SIDE SUN VISOR

- (a) Remove the 2 screws.
- (b) Disconnect the garage door opener switch connector.