
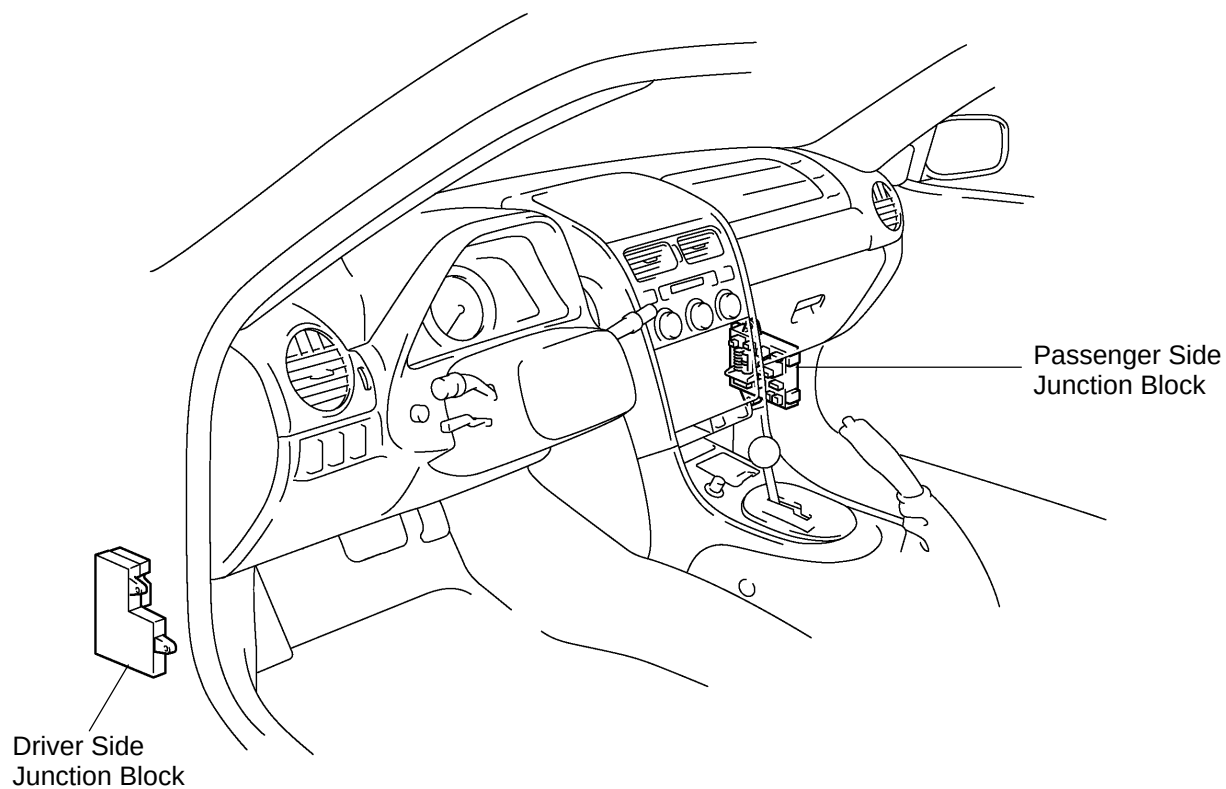


POWER SOURCE LOCATION

BE1WP-04


Power Source

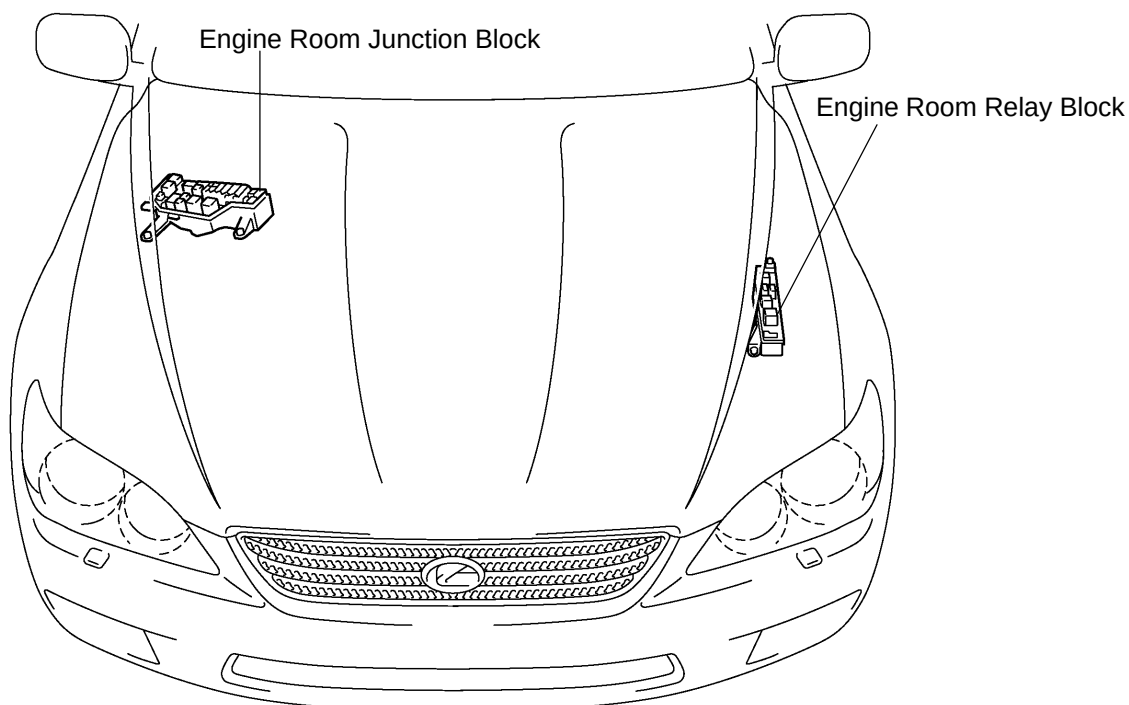

C

I27323

● Engine Room Junction Block

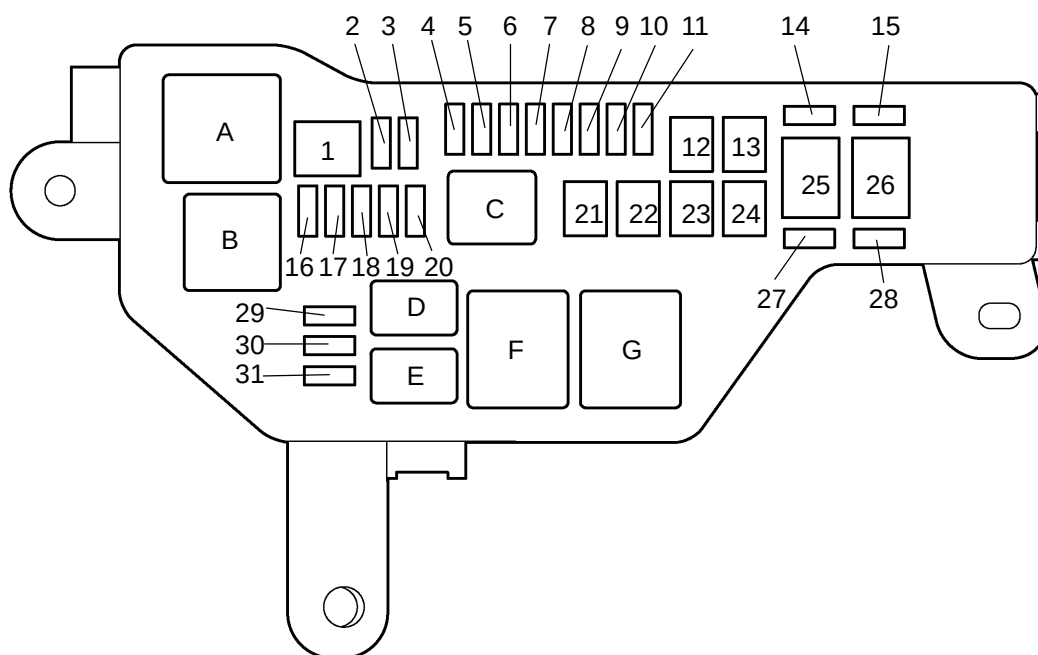


Fuses

1. MAIN FL 40A
2. ECU-B1 20A
3. -
4. ALT-S 7.5A
5. ETCS 15A
6. AM2 20A
7. HORN 10A
8. -
9. RADIO NO. 1 20A
10. TURN-HAZ 15A
11. EFI 25A
12. P/SEAT 30A
13. H-LP CLN 30A
14. SPARE
15. SPARE
16. DRL NO. 2 7.5A
17. DRL NO. 1 7.5A
18. H-LP L LWR 15A
19. H-LP R LWR 15A
20. ABS2 7.5A
21. -
22. -
23. CDS FAN 30A
24. RDI FAN 30A
25. ALT 120A
26. ABS1 60A
27. SPARE
28. SPARE
29. H-LP L UPR 10A
30. H-LP R UPR 10A
31. -

Relays


- A. HEAD LP Relay
- B. Starter relay
- C. Circuit Opening Relay
- D. Horn Relay
- E. EFI Relay
- F. ABS MTR Relay
- G. ABS SOL Relay

- Engine Room Relay Block

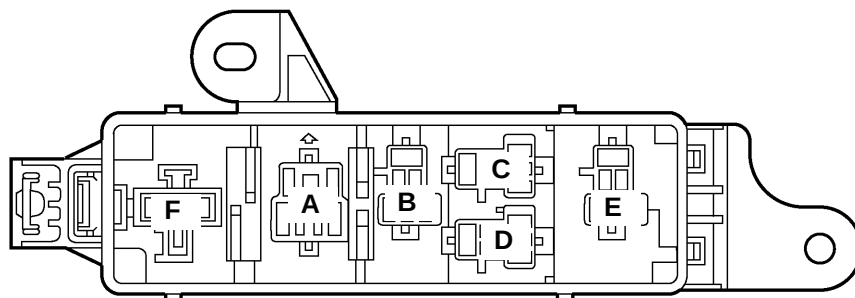**Relays**

- A. DIMMER Relay
- B. A/C COMP Relay
- C. FAN NO.3 Relay
- D. FAN NO.2 Relay
- E. FAN NO.1 Relay
- F. FUEL PMP Relay

● Driver Side Junction Block

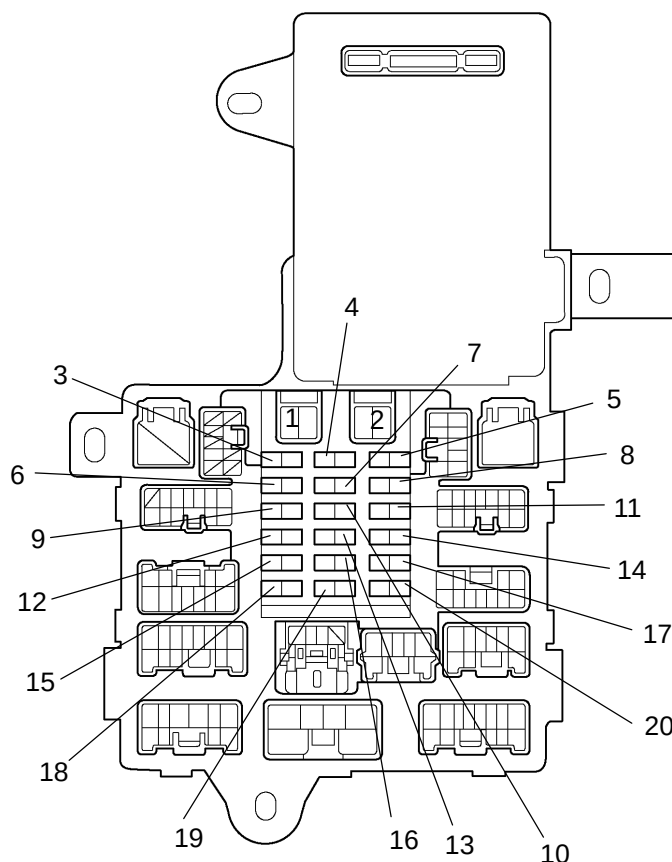


Fuses

1. RR DEF 40A
2. AM1 40A
3. D FR P/W 20A
4. TAIL 10A
5. GAUGE 10A
6. DOOR 20A
7. PANEL 7.5A
8. WASHER 15A
9. STARTER 7.5A
10. FR DEF 20A
11. A/C 10A
12. SEAT HTR 15A
13. CIG 15A
14. S/ROOF 30A
15. ECU-IG 10A
16. SRS-ACC 10A
17. STOP 15A
18. WIPER 25A
19. RADIO NO.2 10A
20. -

Condenser


21. DEF CDS
22. DEF CDS

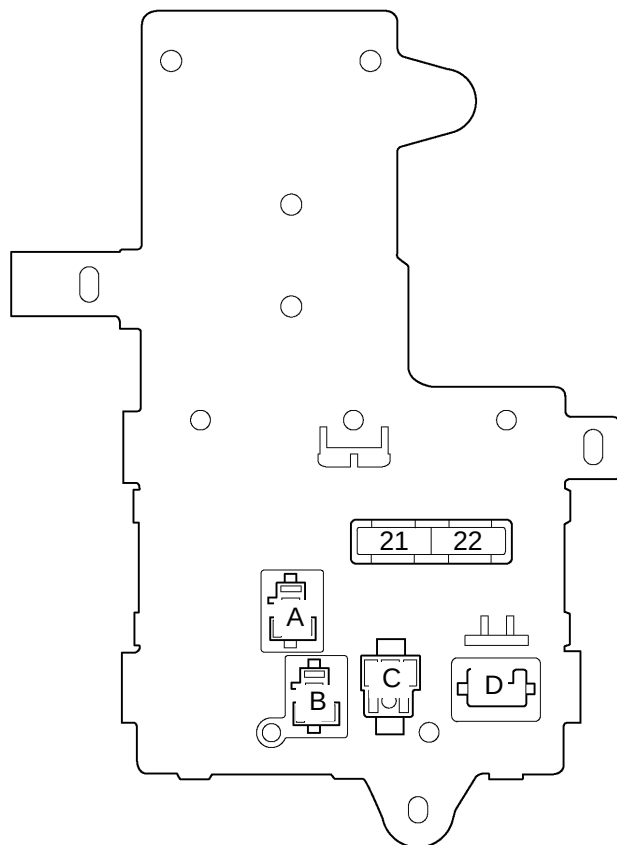

Relays


- A. Deicer Relay
- B. TAIL Relay
- C. RR DEF Relay
- D. FLSH Relay

● Passenger Side Junction Block

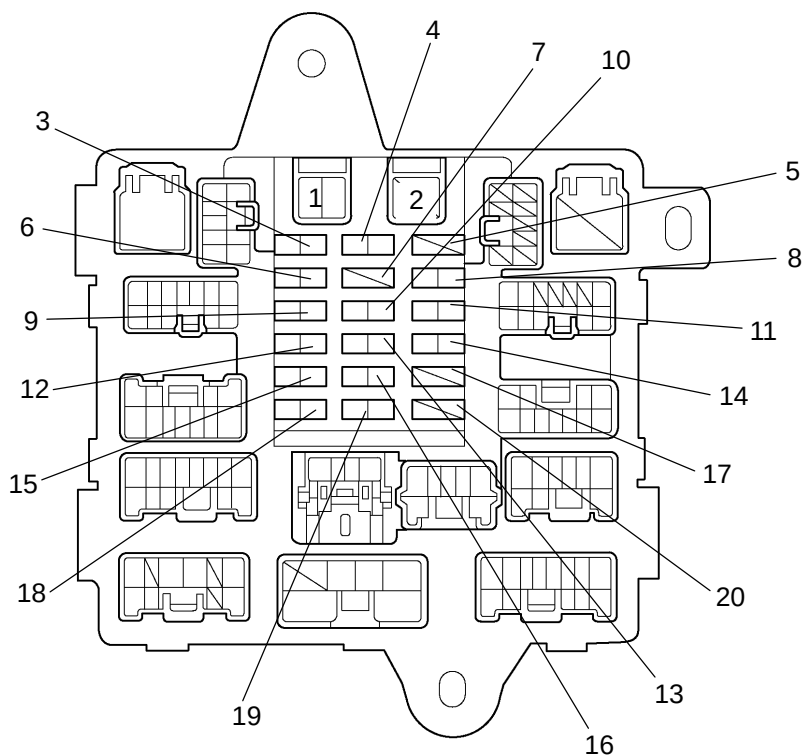

Fuses

1. HEATER 40A
2. -
3. DOOR DL 15A
4. DOME 7.5A
5. -
6. FR FOG 15A
7. -
8. P FR P/W 20A
9. PWR OUTLET 15A
10. ECU-B2 7.5A
11. D RR P/W 20A
12. MIR HIR 15A
13. MPX-B 10A
14. P RR P/W 20A
15. SRS-B 7.5A
16. TV 7.5A
17. -
18. OBD 7.5A
19. IGN 7.5A
- 20.-

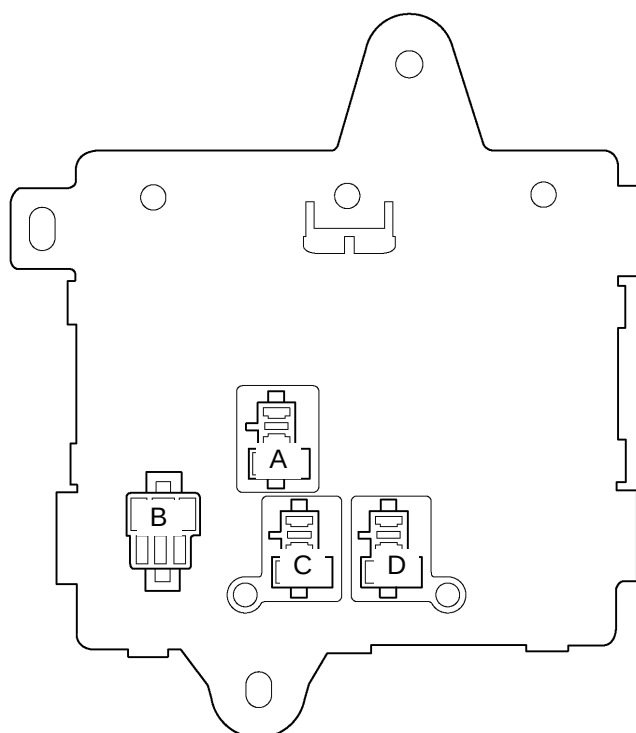

Relays

- A. FR FOG Relay
- B. HTR Relay
- C. MIR HTR Relay
- D. P/W Relay