

REMOVAL

1. **REMOVE AIR CLEANER INLET AND AIR CLEANER (See page [EM-30](#))**
2. **DISCONNECT BRAKE LINES**

Using SST, disconnect the 6 brake lines from the ABS & TRAC / VSC actuator.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

3. **DISCONNECT BRAKE HOSE AND CONNECTOR**
4. **REMOVE ABS & TRAC / VSC ACTUATOR ASSEMBLY**

Remove the nut, 2 bolts and ABS & TRAC / VSC actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

5. **REMOVE ABS & TRAC & VSC ACTUATOR**

(a) Remove the 2 nuts and ABS & TRAC / VSC actuator from the bracket.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

(b) Remove the 2 cushion bolts and 3 cushions.