


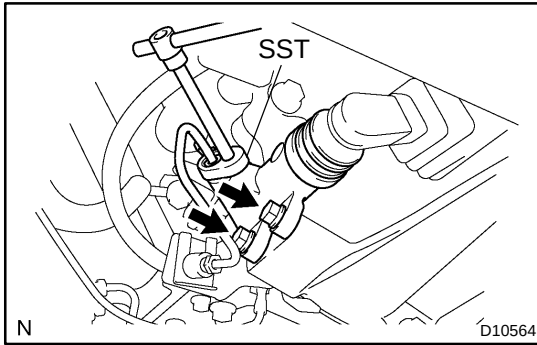

REMOVAL

1. DISCONNECT CLUTCH LINE

Using SST, disconnect the clutch line. Use a container to catch the fluid.

SST 09023-00101

Torque: 15.2 N·m (155 kgf·cm, 11 ft·lbf)

2. REMOVE 2 BOLTS AND PULL OUT RELEASE CYLINDER

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)