



## DISASSEMBLY

### DISASSEMBLE PROPELLER SHAFT

- (a) Place matchmarks on the universal joint flange and propeller shaft flange.
- (b) Remove the 4 bolts, washers and nuts.
- (c) Separate the intermediate shaft and propeller shaft.