## **INSPECTION**

1. Vehicle not involved in collision: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-607).

2. Vehicle involved in collision and airbag is not deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-607).

3. Vehicle involved in collision and airbag is deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Replace the airbag sensor assembly (See page RS-68).

RS05T-04