


## REMOVAL


### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in ON or ACC position, DTCs will be recorded.
- Never use any SRS parts removed from another vehicle. When replacing parts, replace them with new one.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

LH:

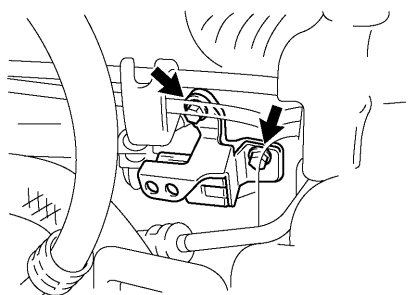

RH:

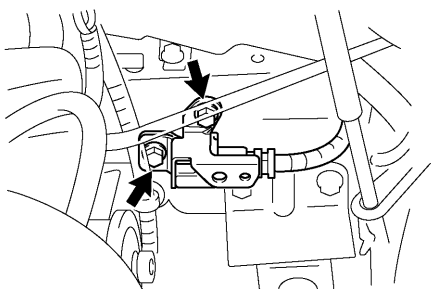

N

H19112

### REMOVE FRONT AIRBAG SENSOR

- (a) Disconnect the front airbag sensor connector.

### NOTICE:

**Disconnect the connector with the sensor assembly installed.**

- (b) Remove the 2 bolts and front airbag sensor.
- (c) Employ the same manner described above to the other side.