


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

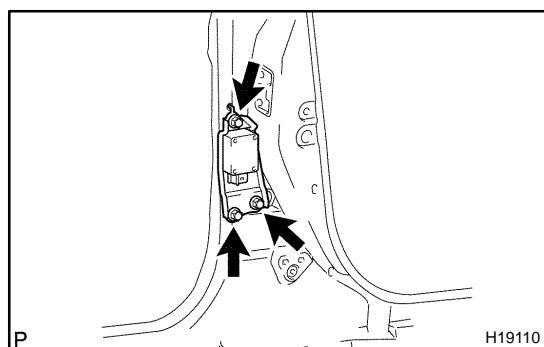

1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- Install the side and curtain shield airbag sensor assembly with the 3 bolts.
Torque: 20 N·m (205 kgf-cm, 15 ft-lbf)
- Connect the side and curtain shield airbag sensor assembly connector.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed. Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

2. INSTALL FRONT SEAT OUTER BELT ASSEMBLY

Pages for reference	See page
Sedan	BO-211
Wagon	BO-214

3. INSTALL CENTER PILLAR LOWER GARNISH

4. INSTALL FRONT AND REAR DOOR INSIDE SCUFF PLATES