



RELAY LOCATIONS


[Engine Compartment]

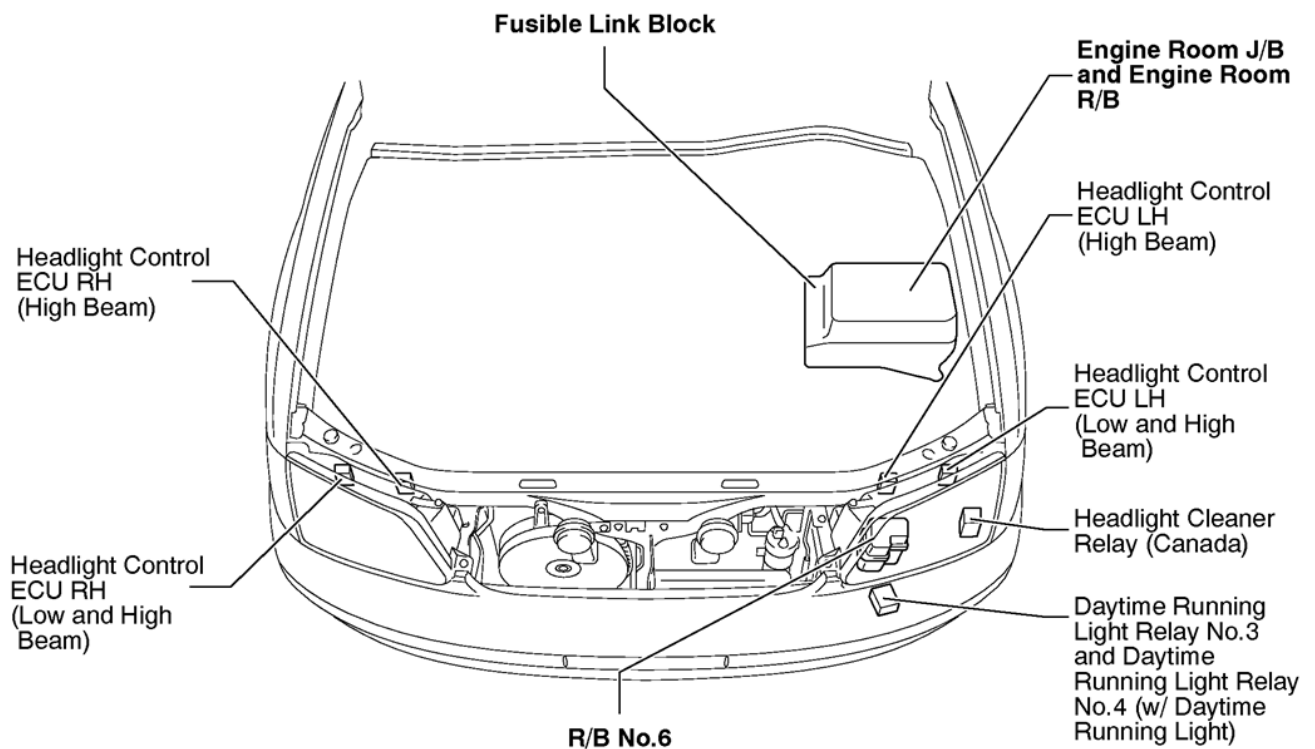


[Instrument Panel]

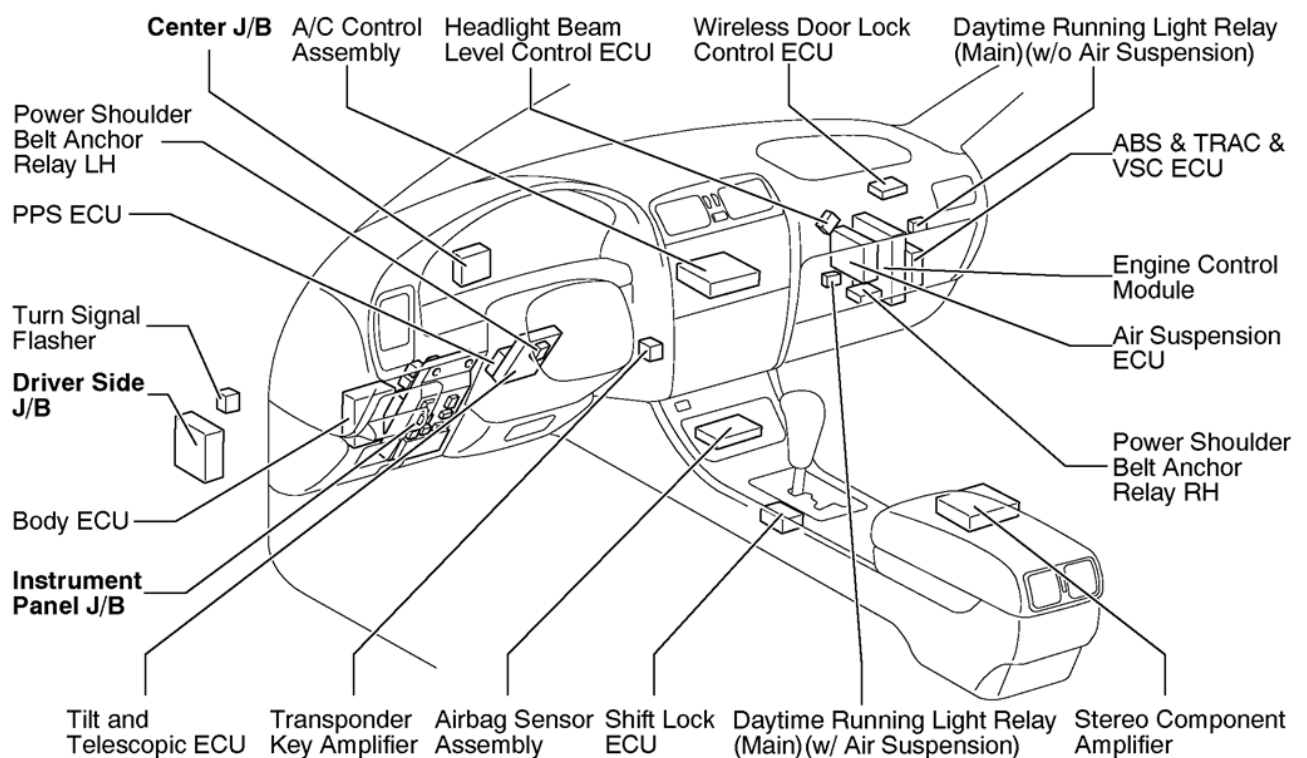

[Body]

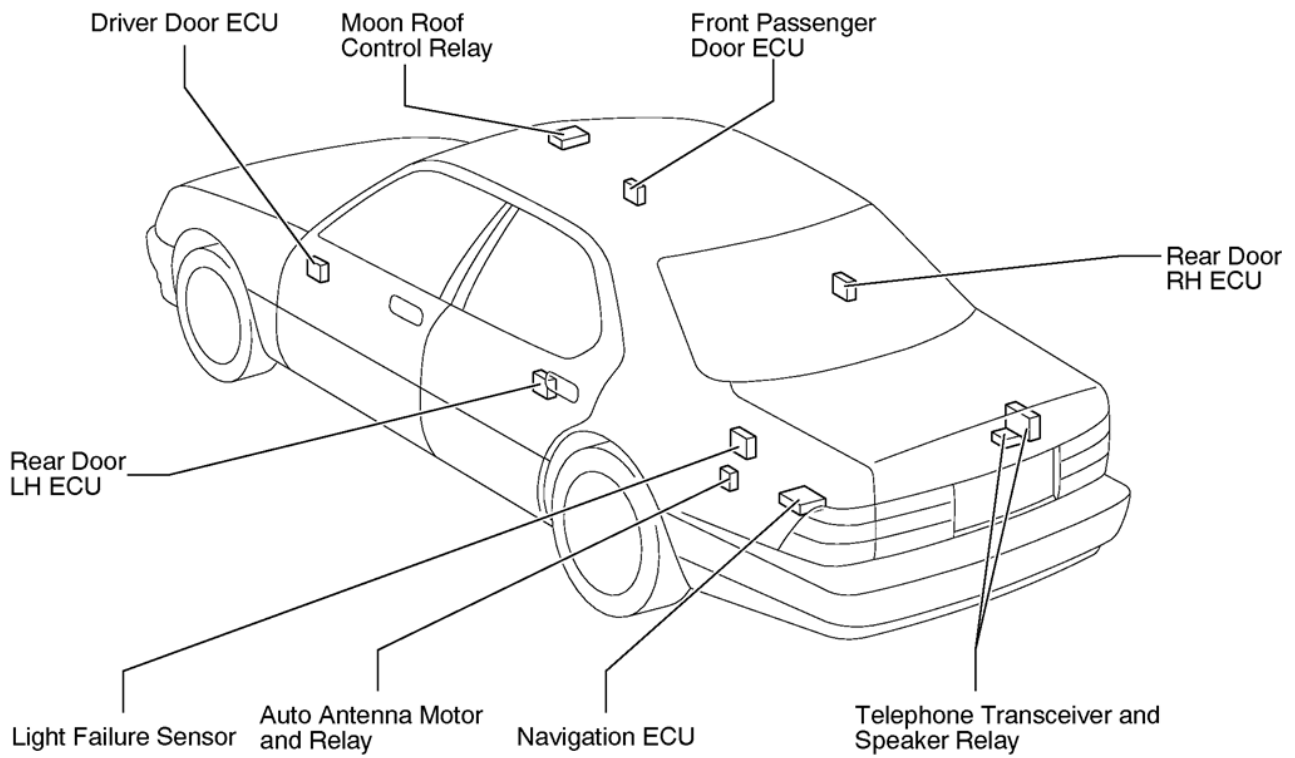


[Seat]

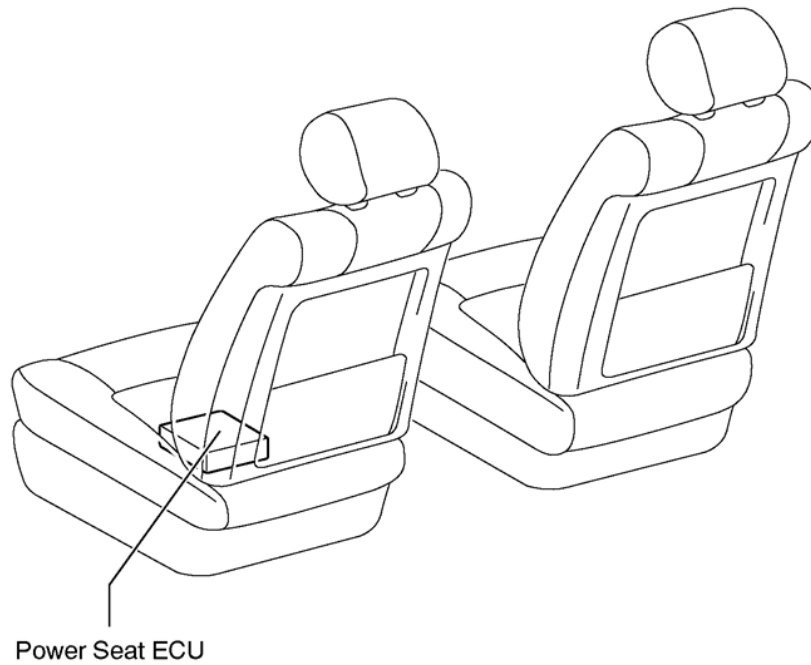


RELAY LOCATIONS

○ : Instrument Panel J/B


Rear Parking Brake Release Lever

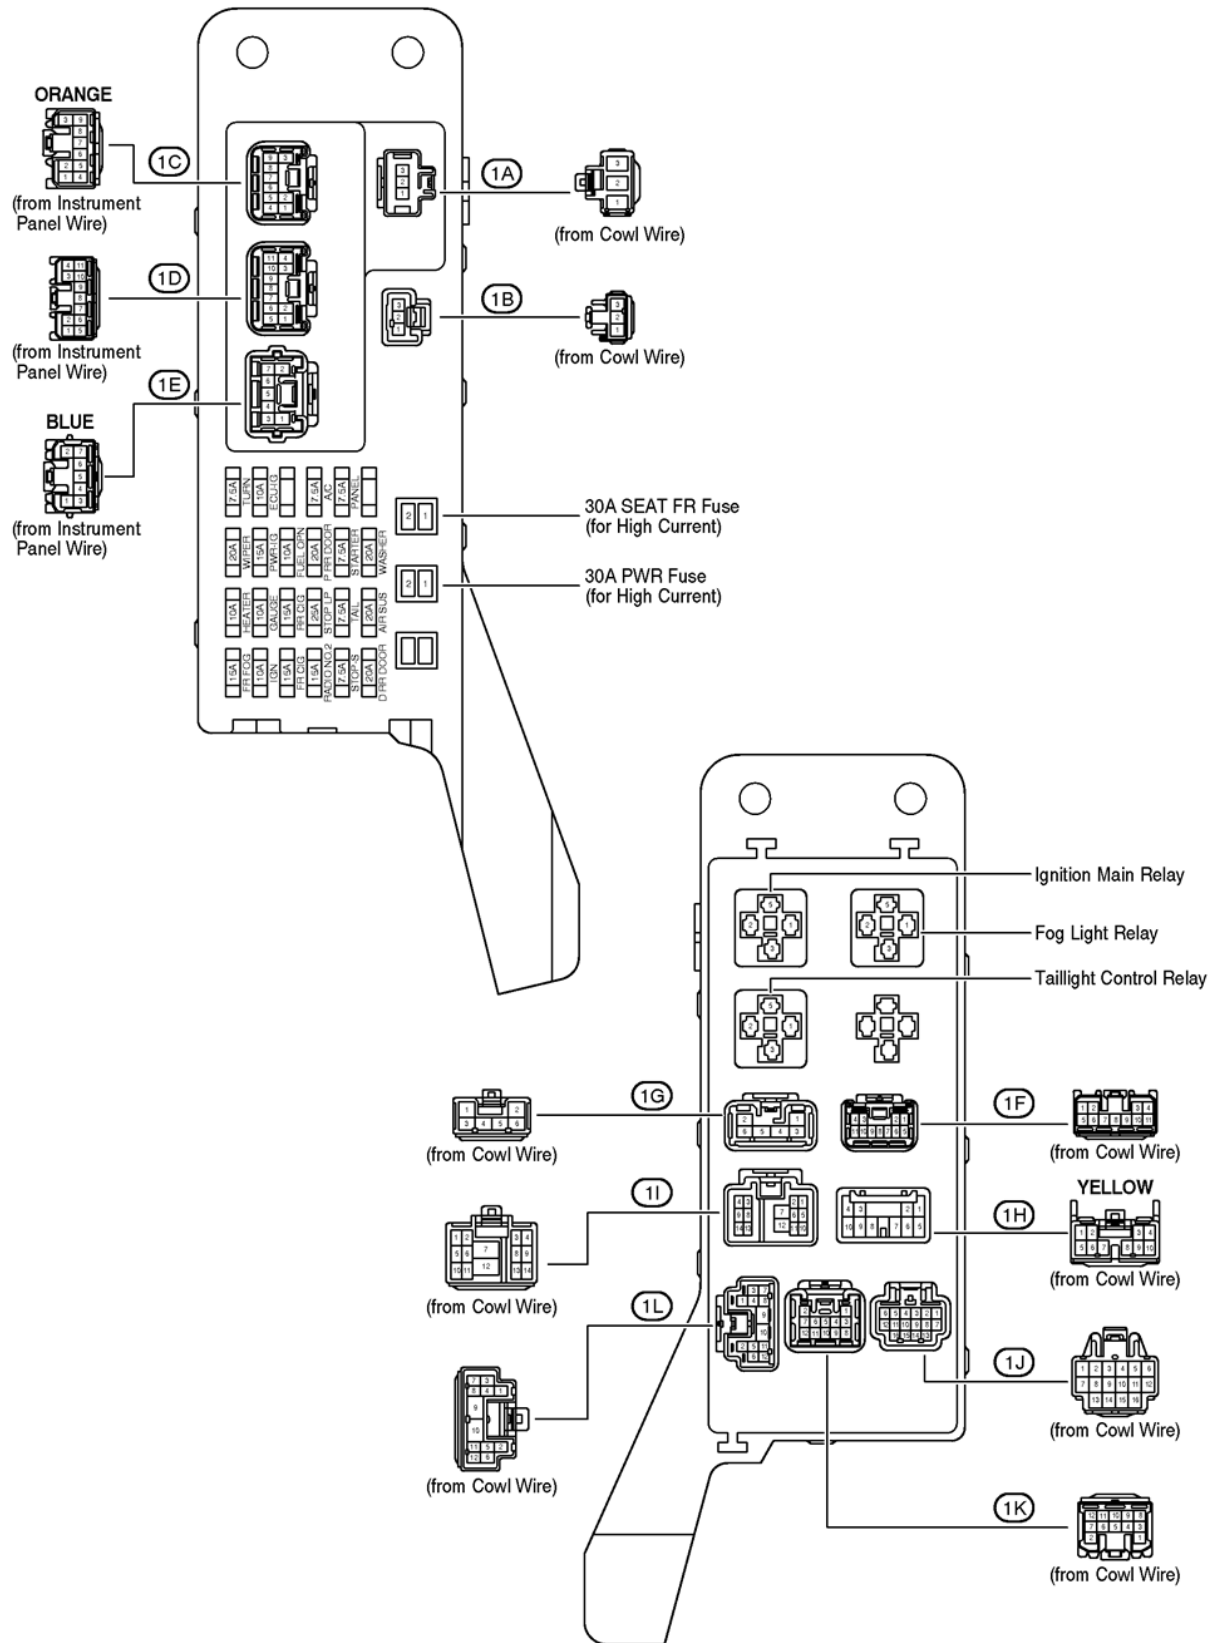


[Instrument Panel J/B Inner Circuit]

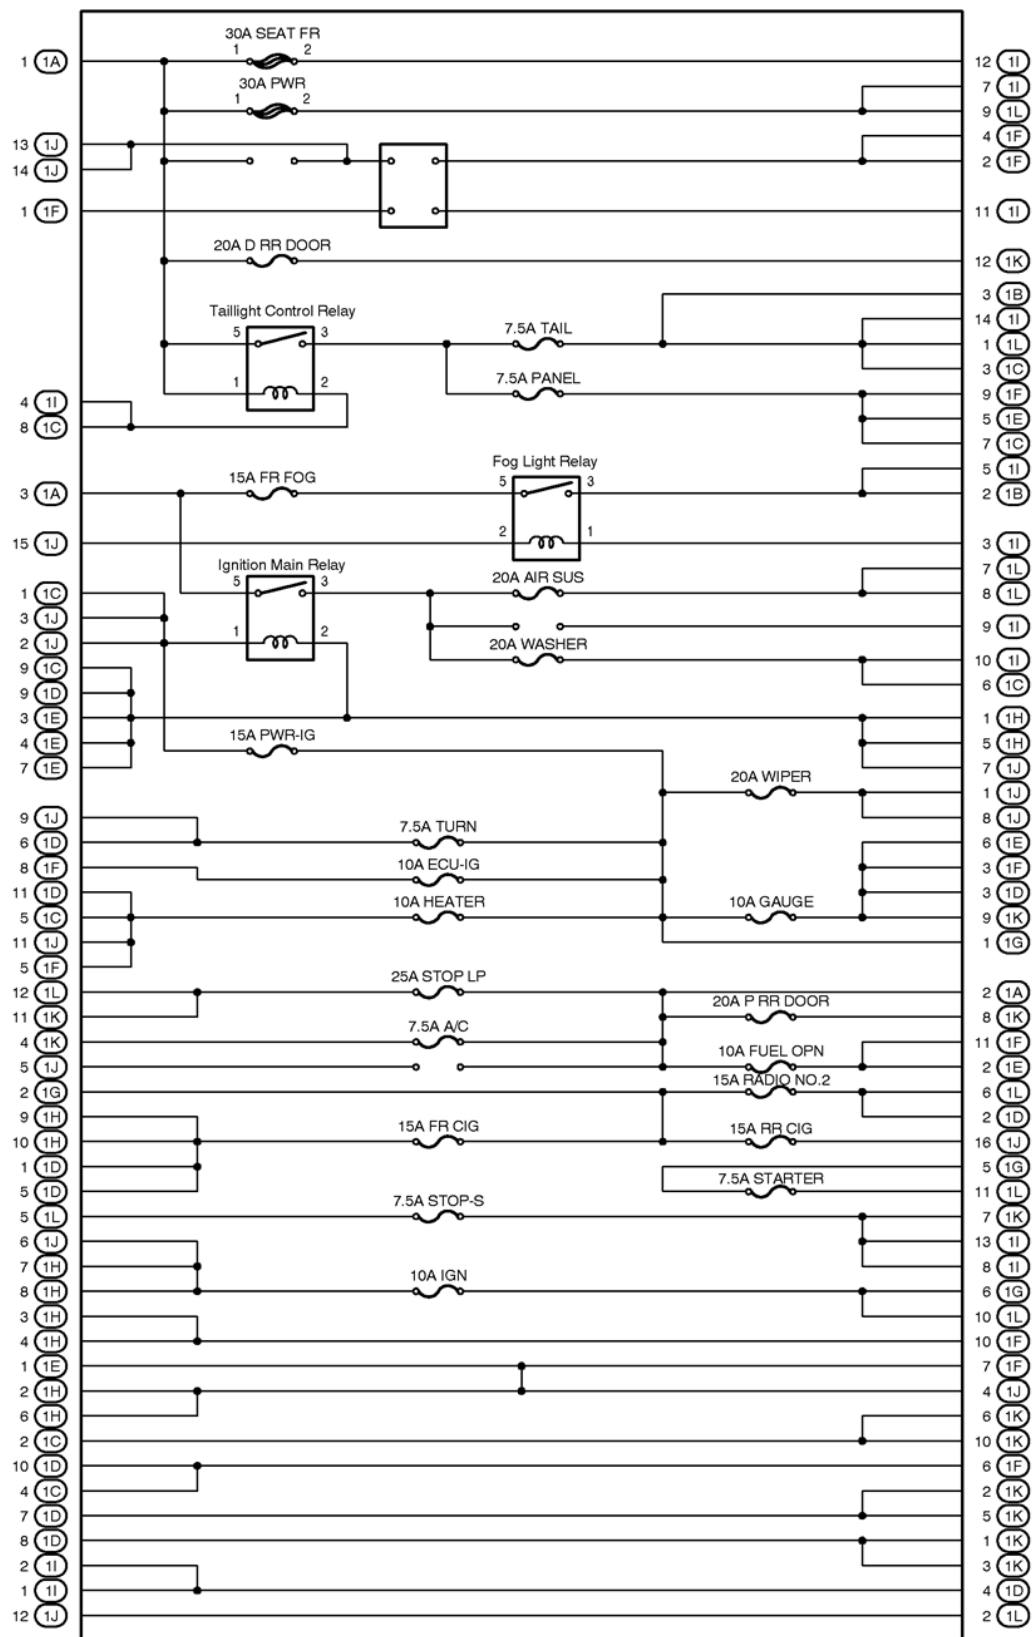

RELAY LOCATIONS

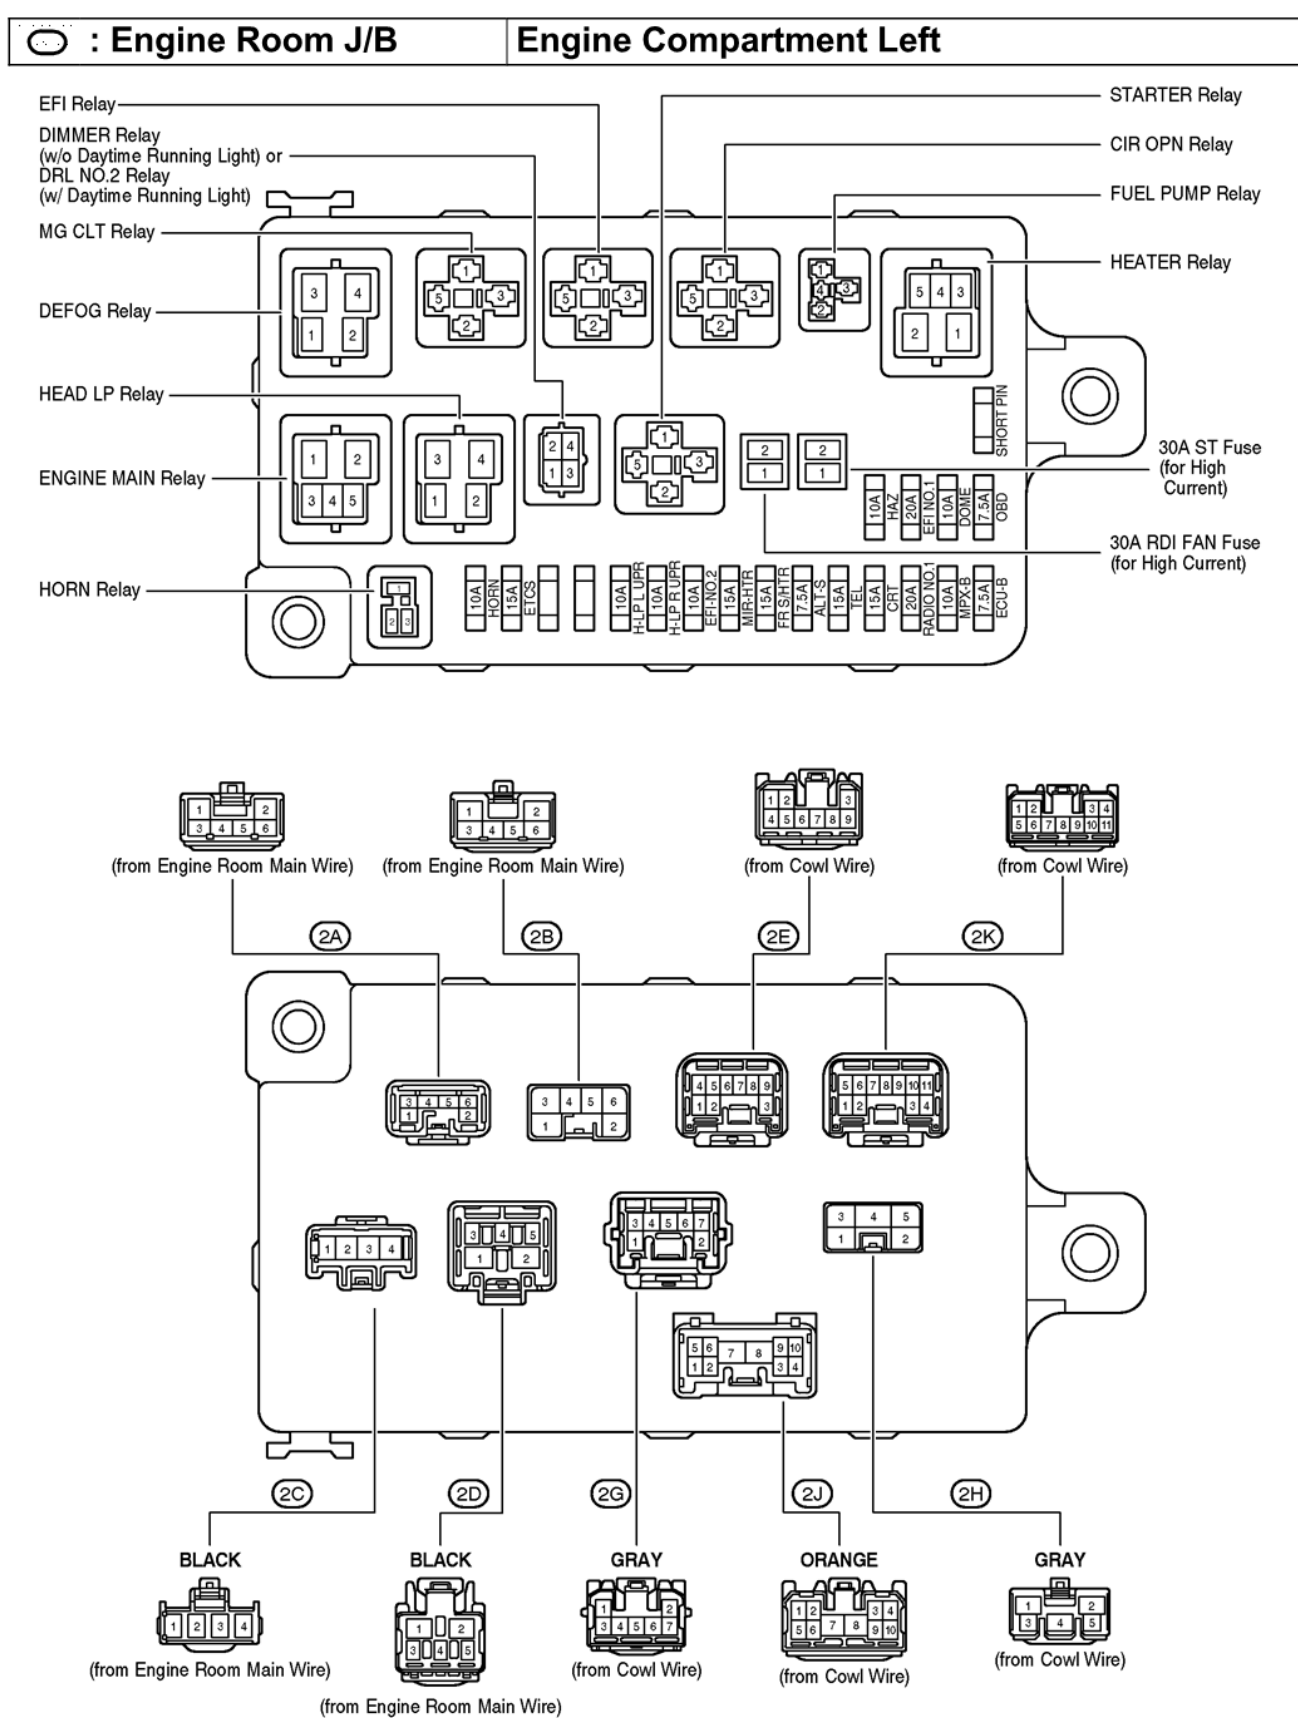

[Engine Room J/B Inner Circuit]

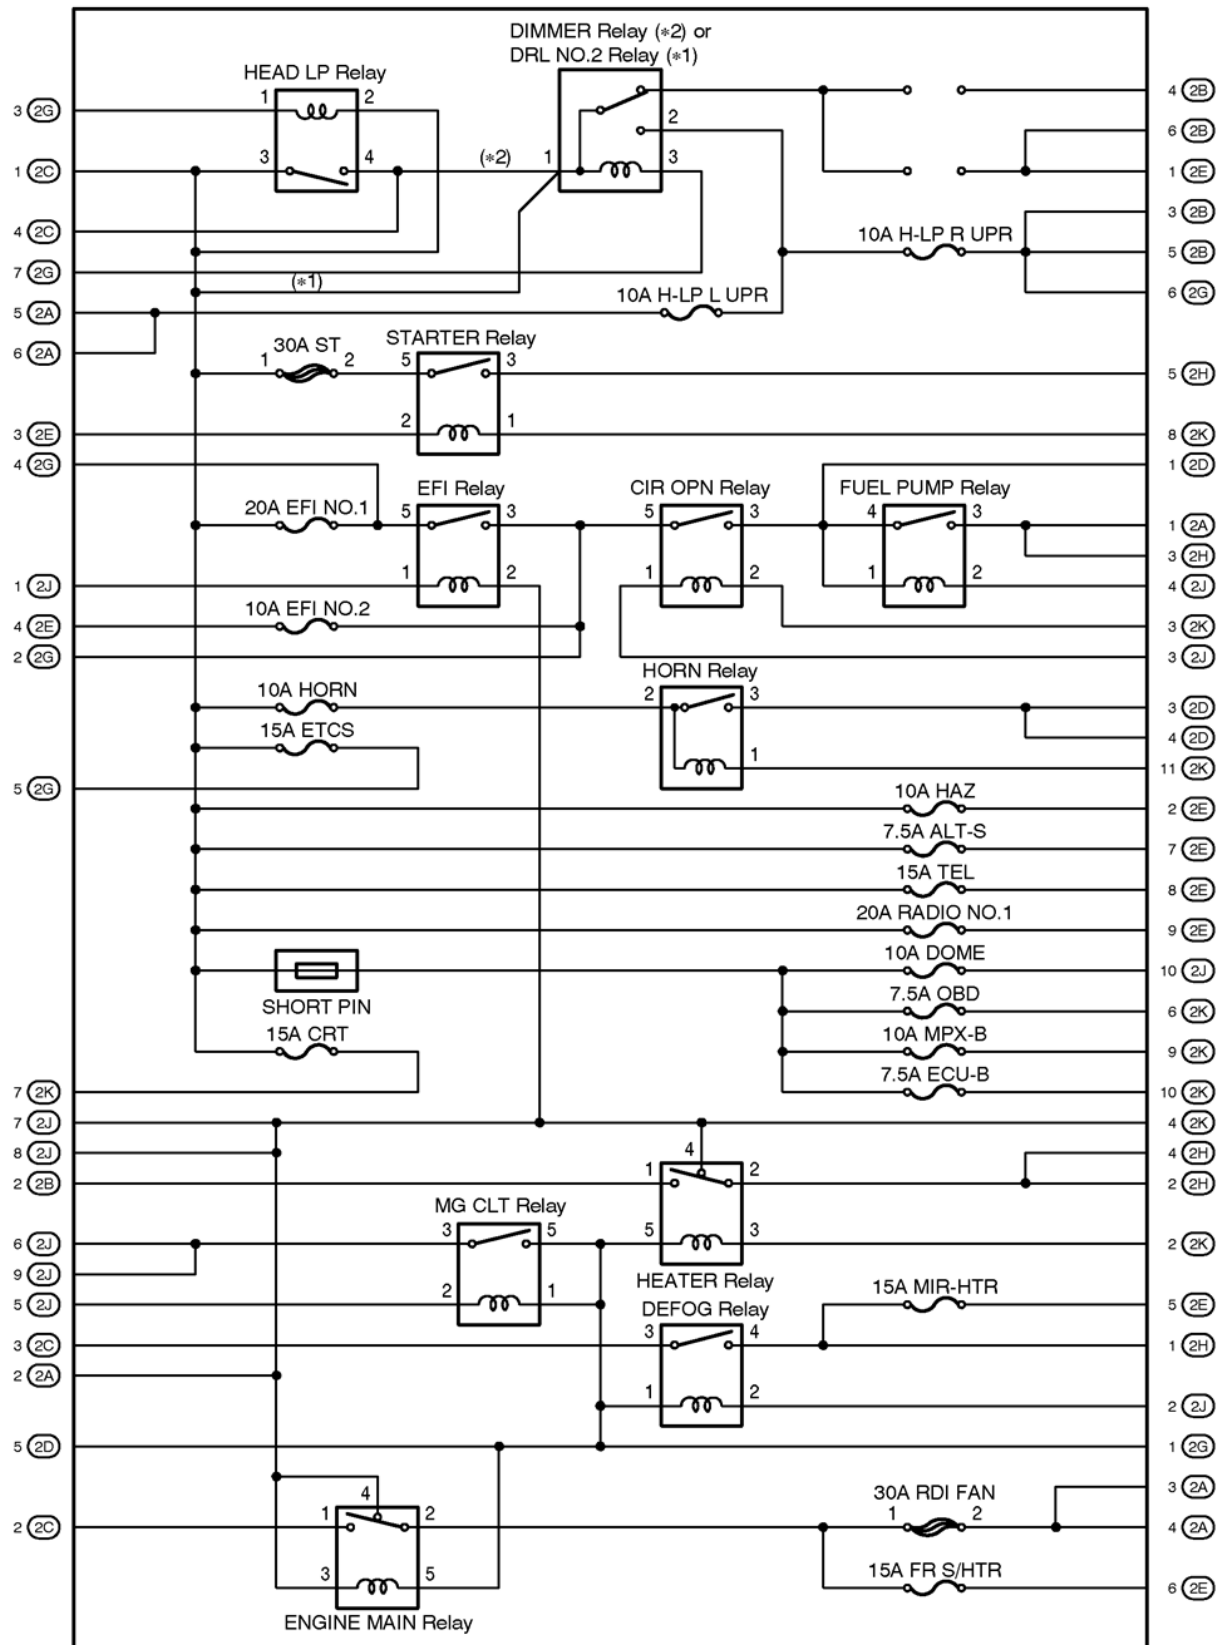


*1 : w/ Daytime Running Light *2 : w/o Daytime Running Light


RELAY LOCATIONS

 : Center J/B

Behind the Combination Meter

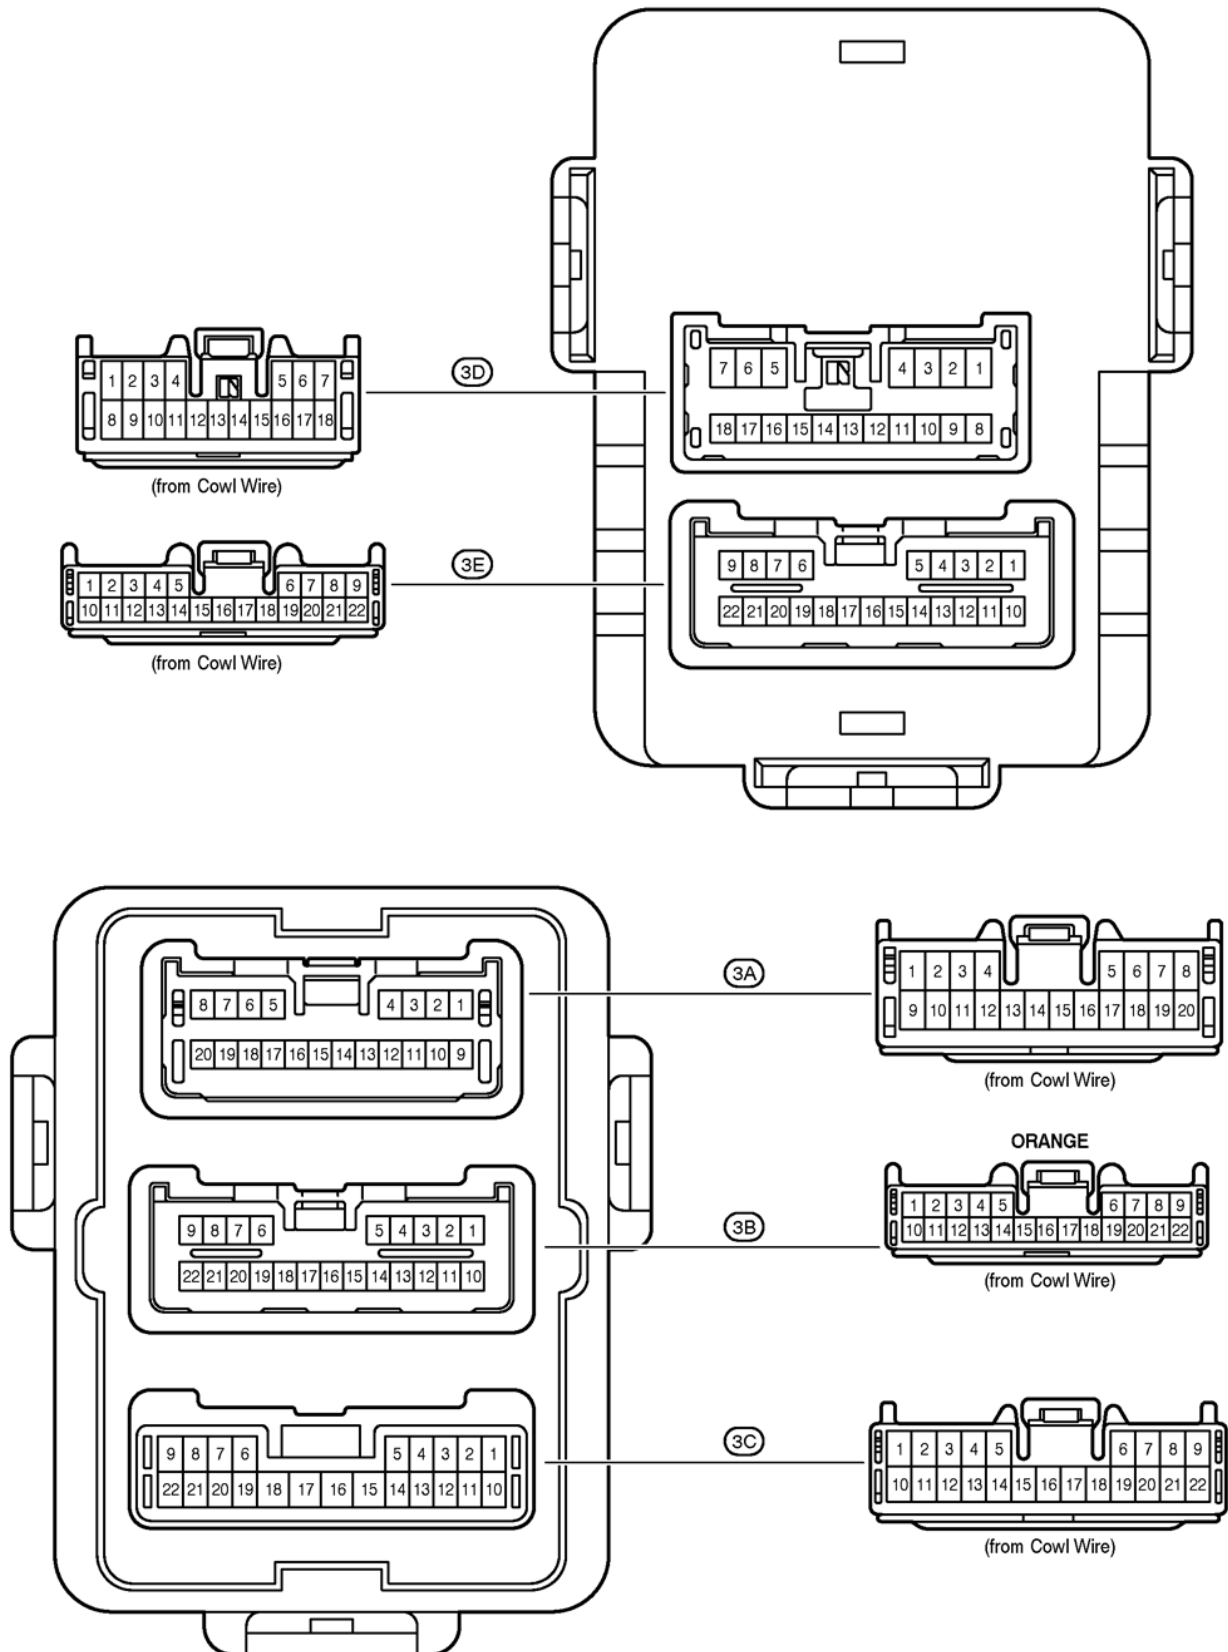


[Center J/B Inner Clrcuit]

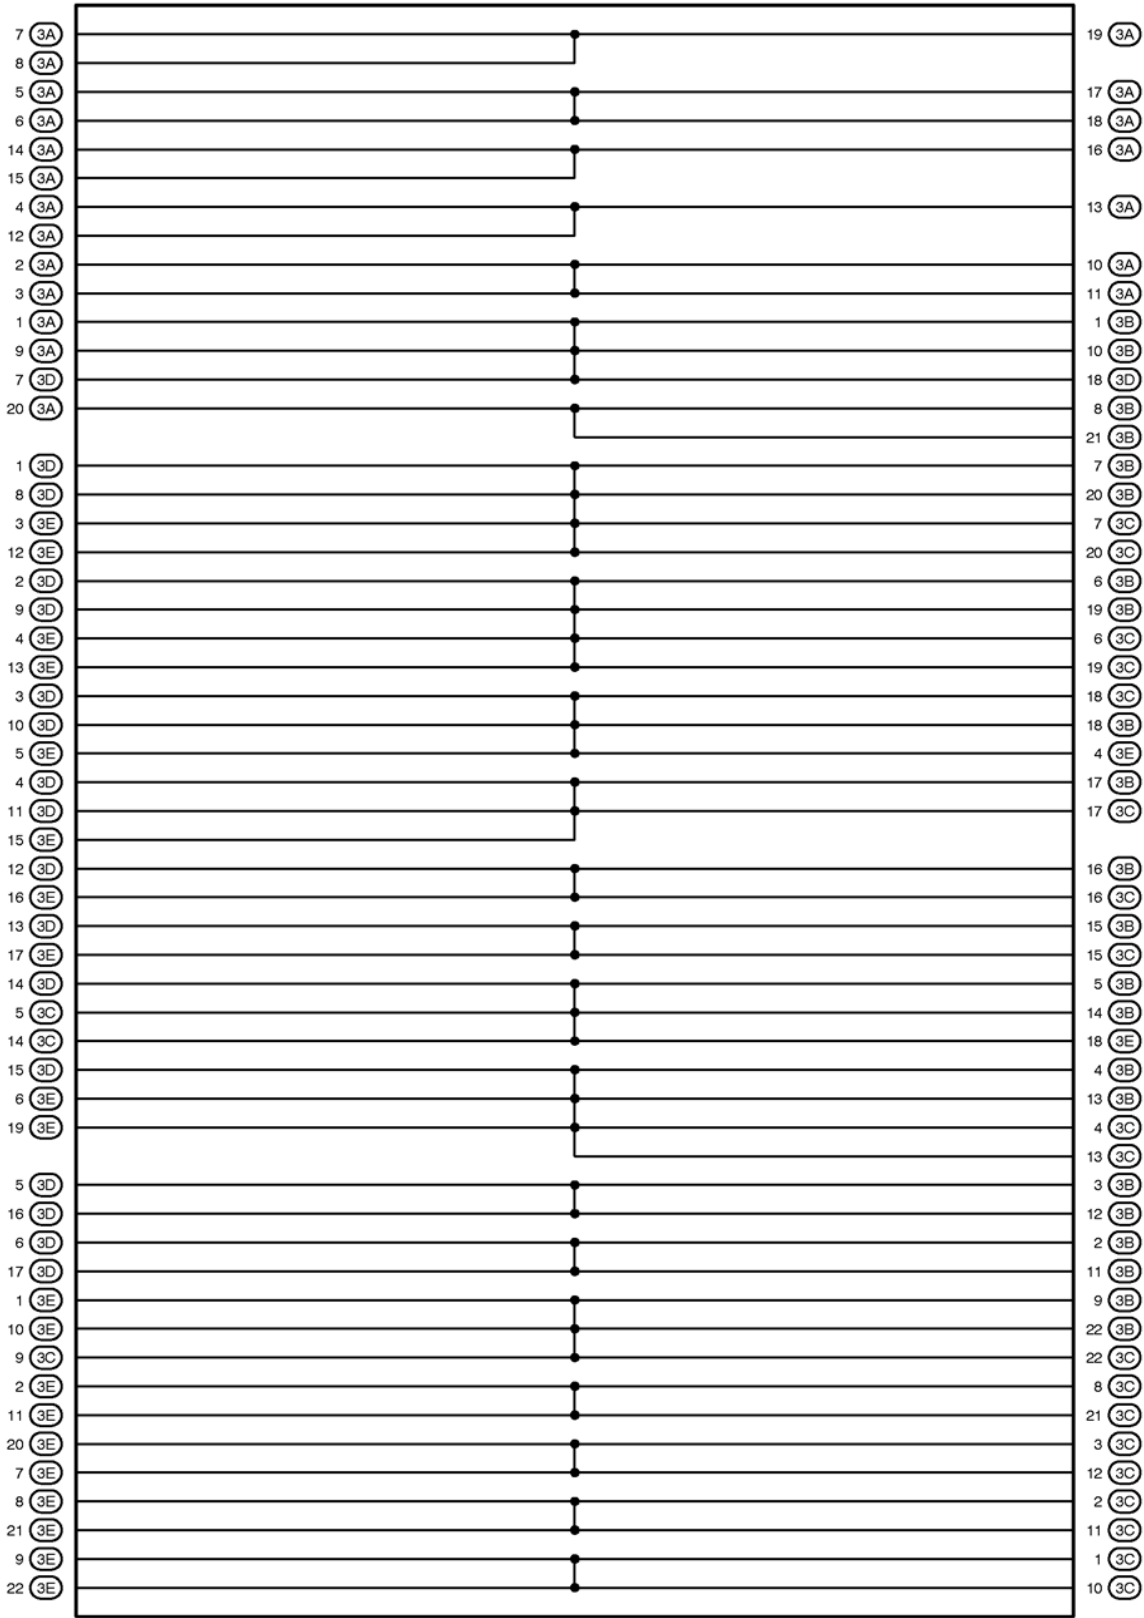


RELAY LOCATIONS

○ : Driver Side J/B

Left Kick Panel

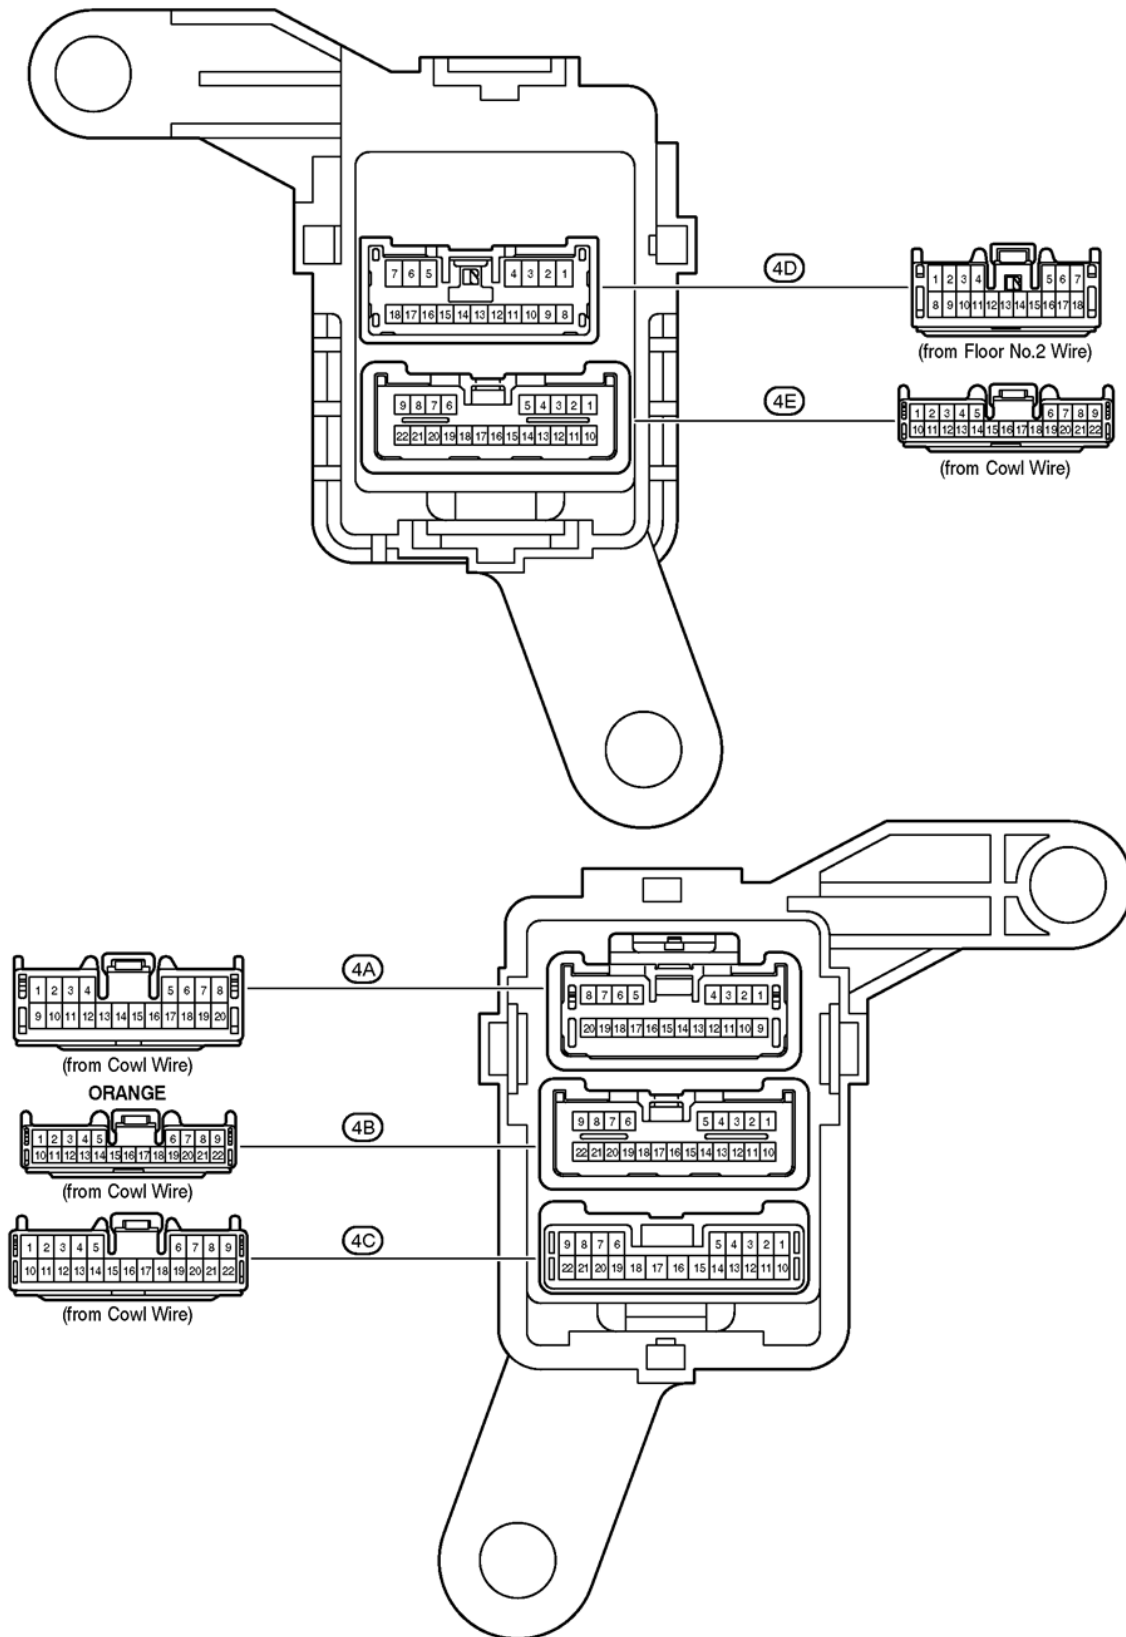


[Driver Side J/B Inner Circuit]

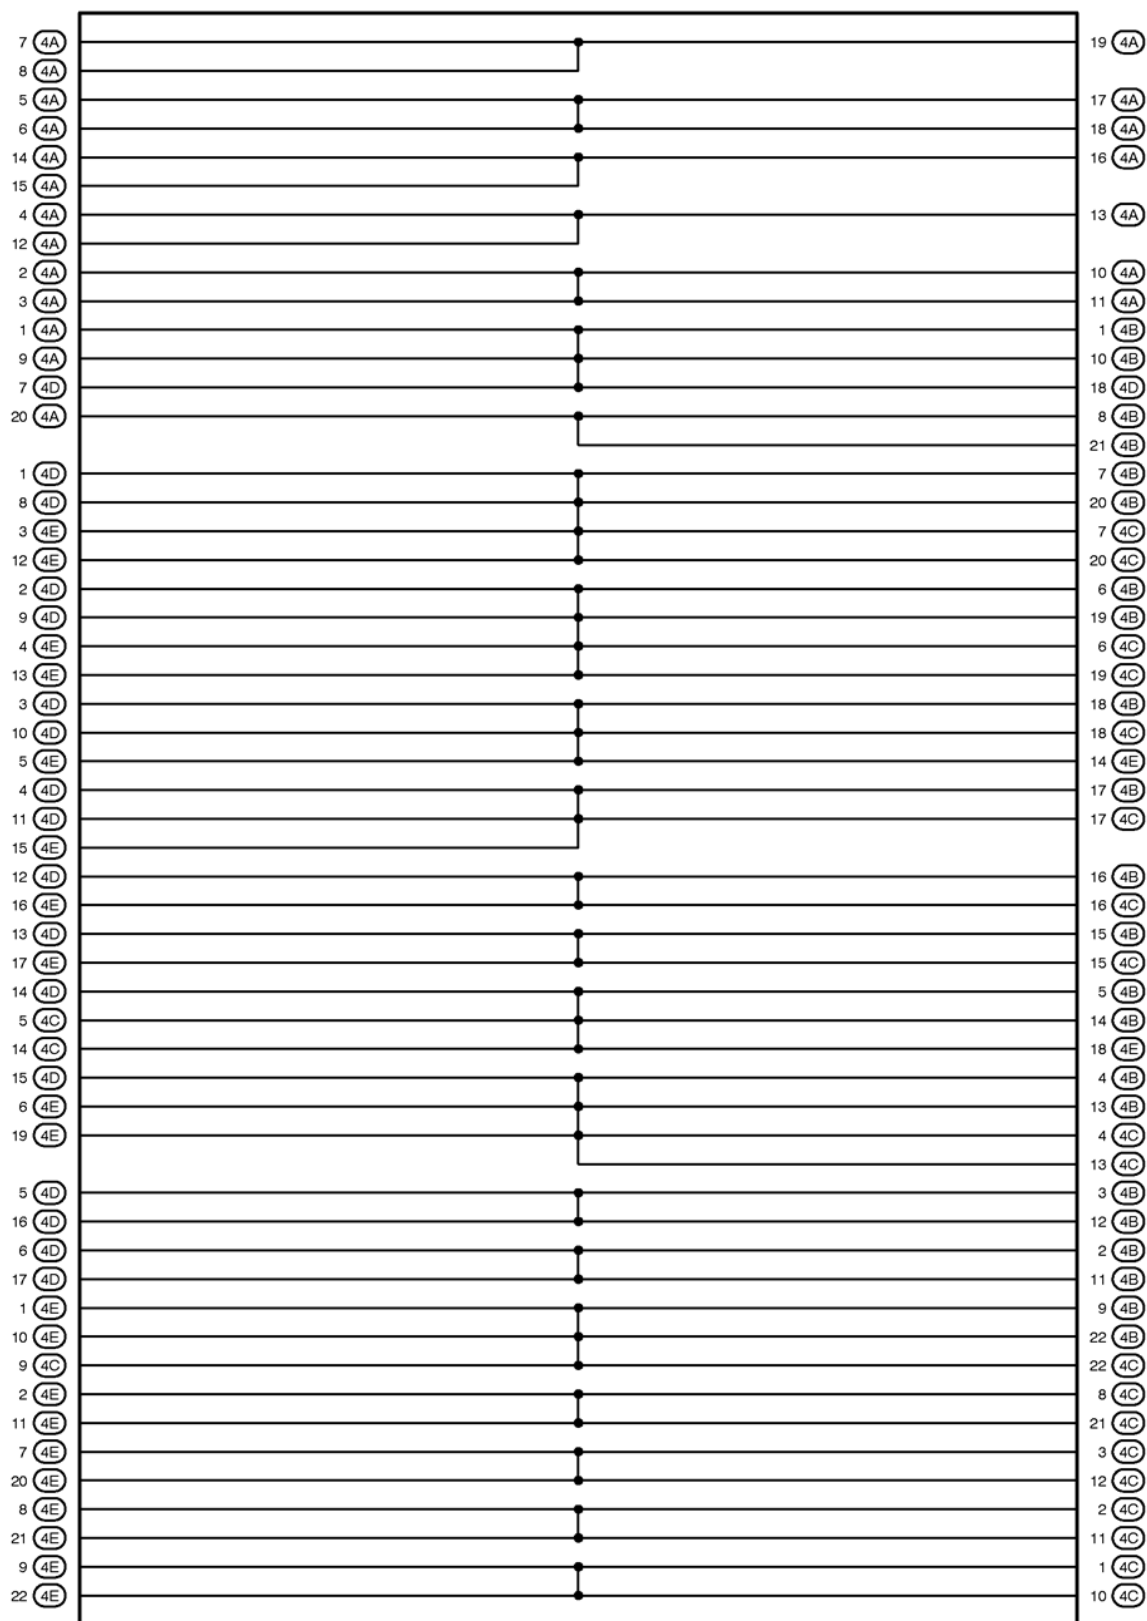


RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left
---------------------	-------------------------

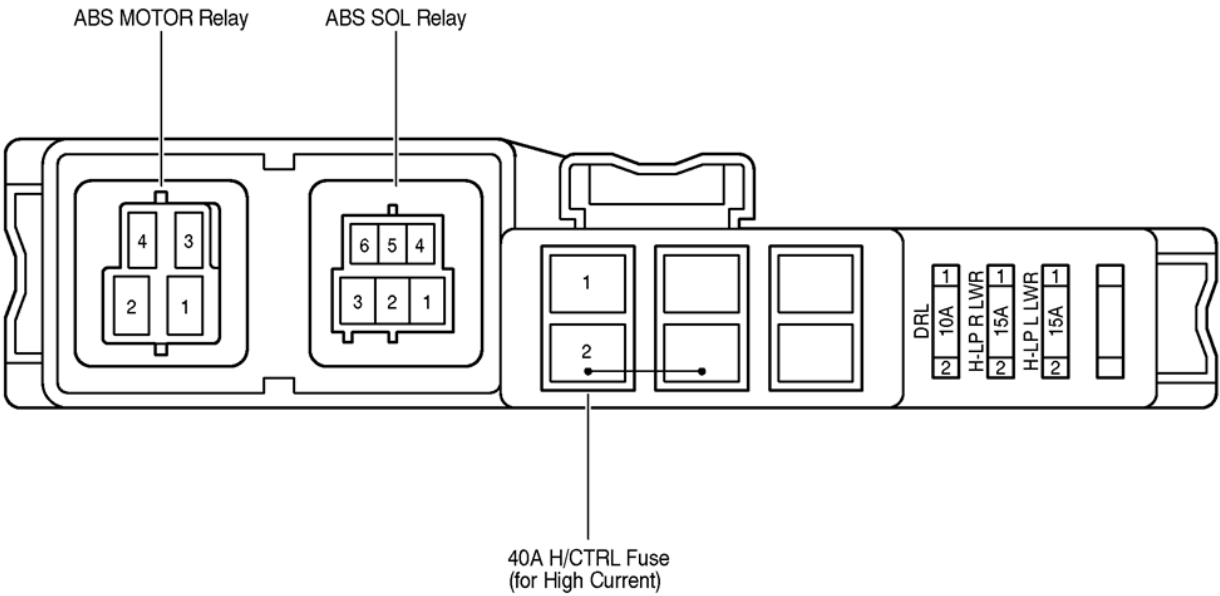

②	
---	--

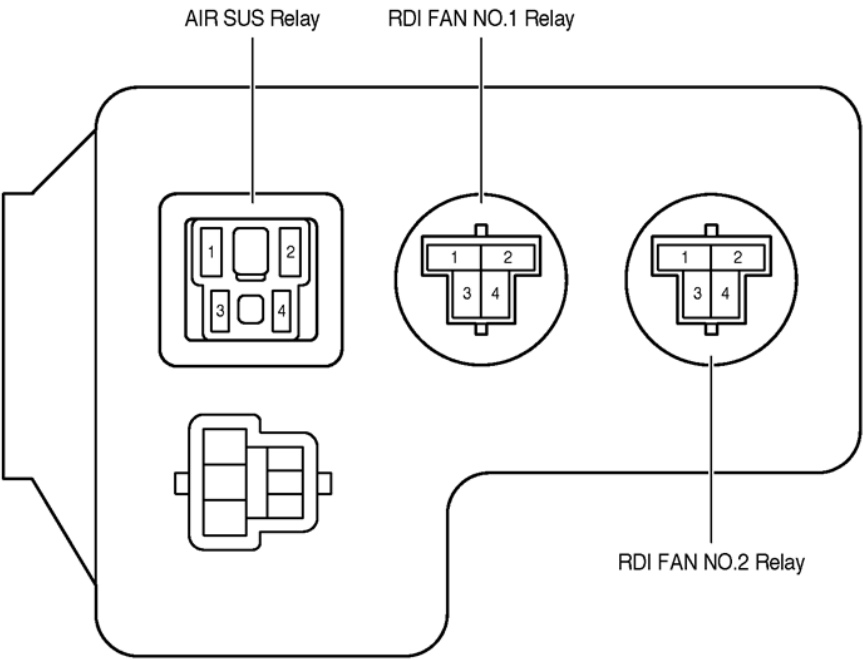

Fusible Link Block

Engine Compartment Left

