

■ FUNCTION OF MAIN COMPONENTS

Component		Function
Ultrasonic Sensor (6)		Detects the distance between the vehicle and the obstacle.
Clearance Warning Buzzer		Sounds a buzzer to inform the driver according to the distance to the obstacle.
Combination Meter Assembly	Multi-information Display	<ul style="list-style-type: none"> Displays the location of the obstacle and the approximate distance between the vehicle and the obstacle. Displays an indication of malfunction or freezing of an ultrasonic sensor to inform the driver. The multi-information display is switched to the multi-switch mode by operating the satellite switch. Then, the state of the system (on or off) can be displayed. (See page BE-64)
	LEXUS Parking Assist-sensor System Indicator Light	Illuminates to inform the driver when the system operation conditions are met.
Satellite Switch (See page BE-64)		Operating this switch allows the operation of the system to be enabled or disabled.
Multi Display (if equipped)		<ul style="list-style-type: none"> Displays the location of the obstacle and the approximate distance between the vehicle and the obstacle. The sound volume, distance required to sound the buzzer and distance required to trigger the display can be chosen on the setup screen for the LEXUS parking assist-sensor system.
Clearance Warning ECU Assembly		<ul style="list-style-type: none"> Judges the approximate distance between the vehicle and an obstacle based on signals from the ultrasonic sensors. Output signals are sent to the multi-information display and/or multi-display. Sounds the clearance warning buzzer.
Main Body ECU RH (Cowl Side J/B RH)		Transmits the parking brake switch signal to the clearance warning ECU assembly.
ECM		Transmits the shift position signal to the clearance warning ECU assembly.