


■ DAYTIME RUNNING LIGHT SYSTEM

The daytime running light system is designed to automatically illuminate the headlights (Lo beam), front position lights, taillights and license plate lights during the daytime to keep the car highly visible to other vehicles.

- The main body ECU RH (cowl side junction block RH) controls this system.
- This system is enabled when the conditions given below are met:
 - Power Source: Engine switch is on (IG).
 - Engine Speed Signal Input (Engine is Running)
 - Headlight Dimmer Switch Assembly off or AUTO position (Auto position only if the headlights have not been turned on by the automatic light control system.)

► System Diagram ◀

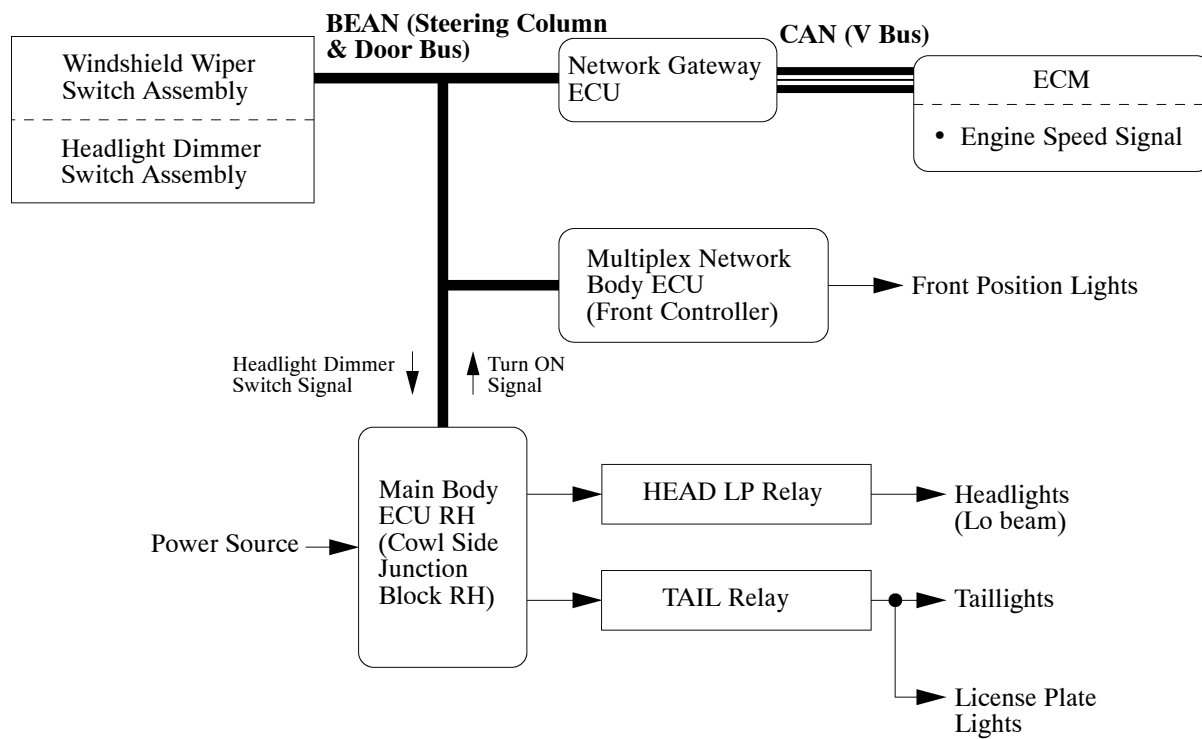

08E0BE02C