


■ AVC-LAN

1. General


The AVC-LAN is used to transmit data only audio and visual system.

2. System Diagram

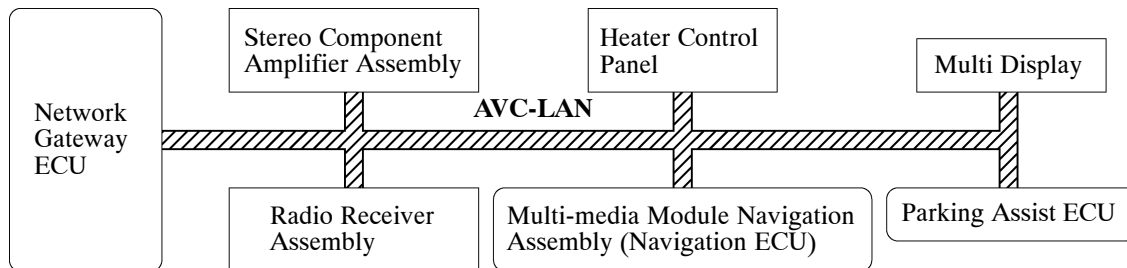


08E0BE233C

3. Layout of Main Components

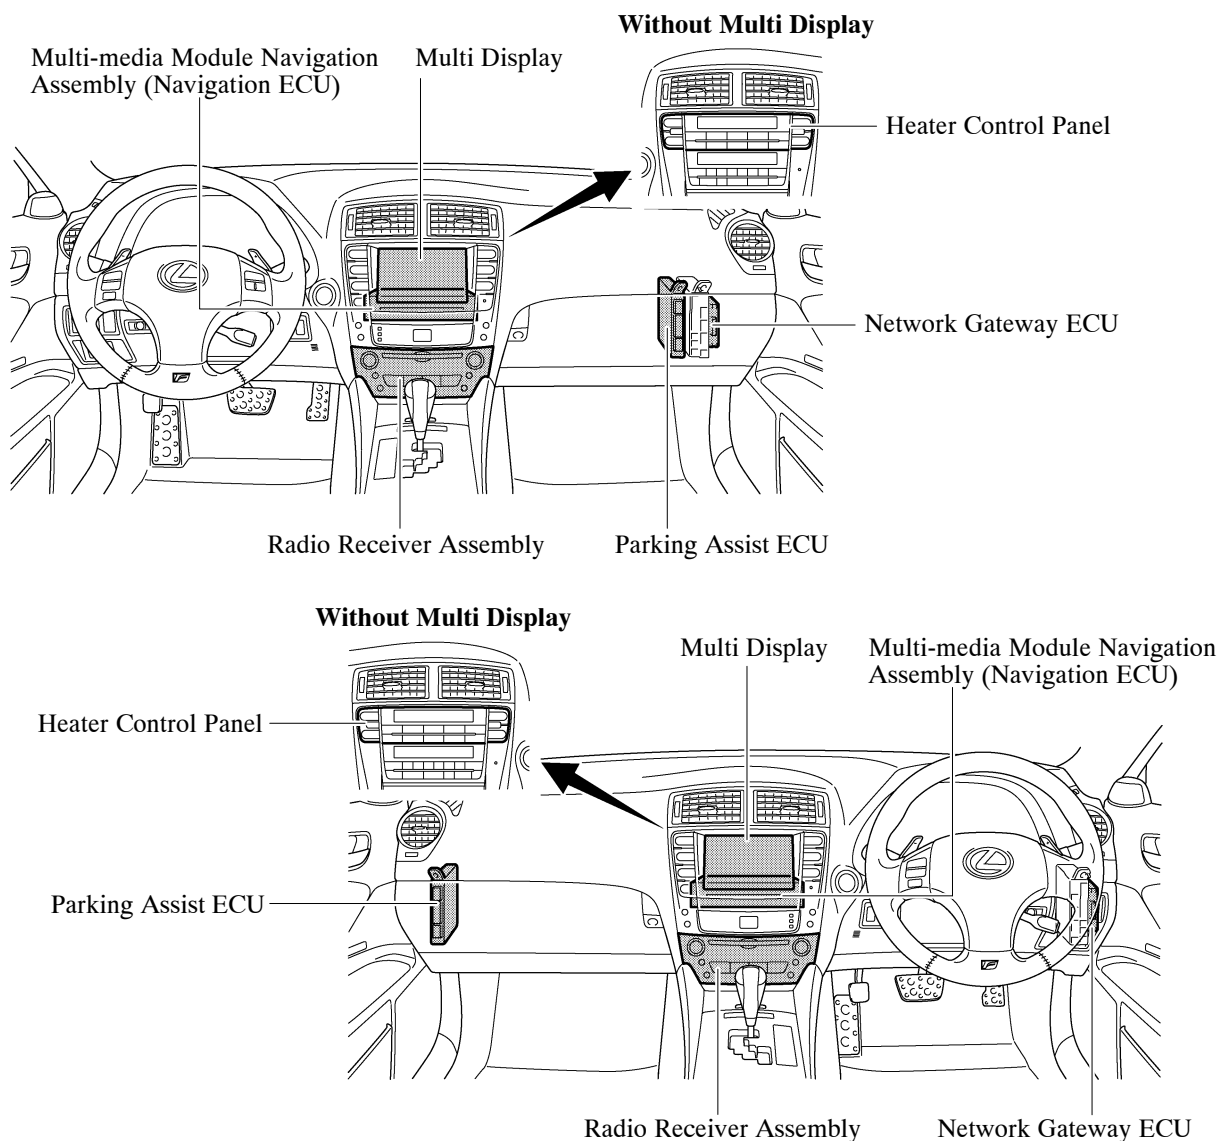

08E0BE234C

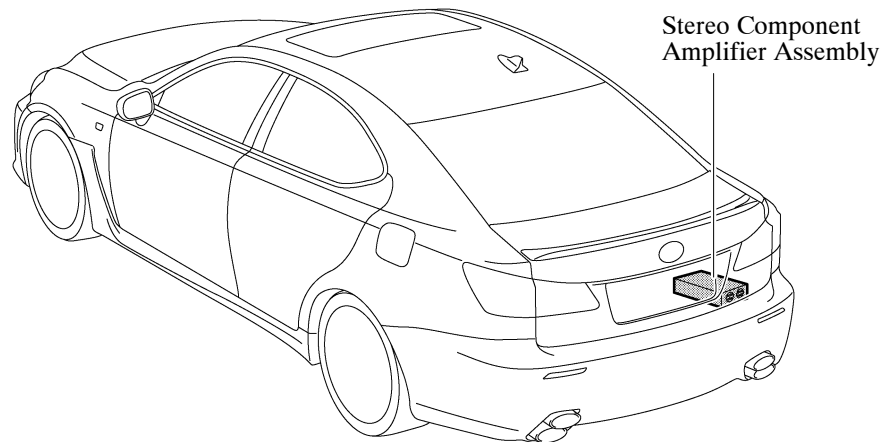

08E0BE235C

4. Diagnosis

If a malfunction occurs on the AVC-LAN communication line, the multi display (models with multi display) or radio receiver assembly (models without multi display) stores the DTCs (Diagnostic Trouble Codes) in its memory.

- The DTCs of models with multi display can be read on the diagnosis menu on the multi display.
- The DTCs of models without multi display can be read on the LCD of the heater control panel.

For details, see the LEXUS IS F Repair Manual (Pub. No. RM08E0E).