


PARKING ASSIST MONITOR SYSTEM

DESCRIPTION

The parking assist monitor system consists of an image of the area behind the vehicle and parking guide lines to assist the driver in parking the vehicle. The parking assist monitor system has a television camera assembly mounted on the luggage compartment door to display a view of the area behind the vehicle on the multi display.

- A package consisting of the parking assist monitor system and the multi display is available on all models.
- This system consists of the television camera assembly, steering sensor, parking assist ECU and multi display.

System Diagram

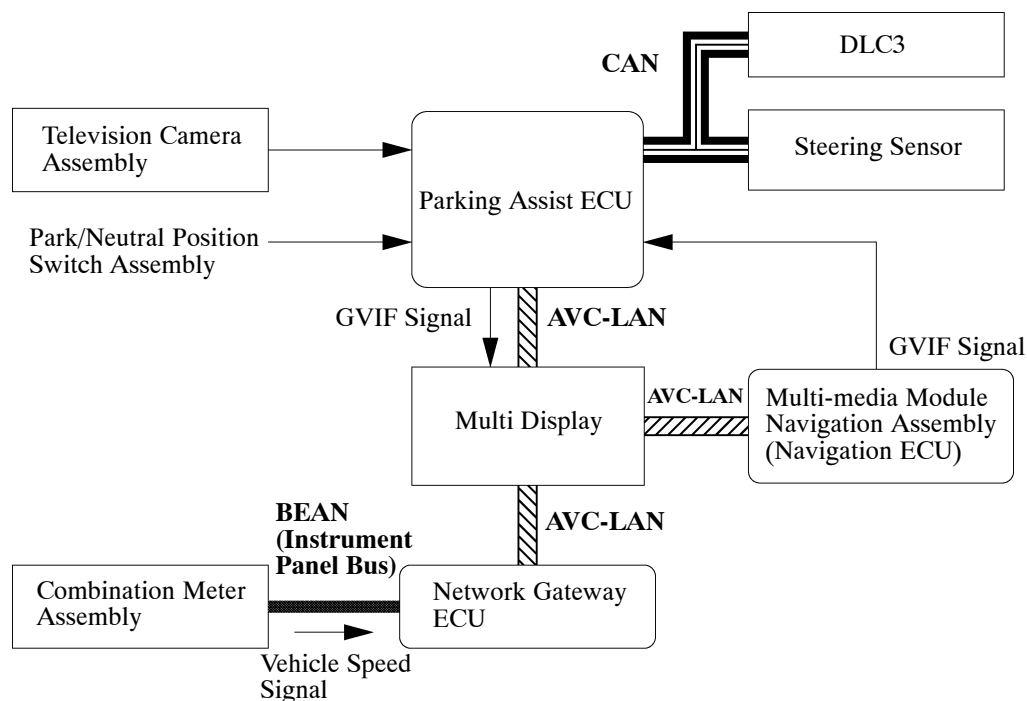

08E0BE218C

This system operates when all the conditions given below have been met.

- Engine switch is on (IG).
- The shift lever is shifted to reverse.

If the driver moves the shift lever to a position other than reverse, or switches the modes on the multi display, the rear view display will stop and change to the display of another mode.

CAUTION

- Do not rely entirely on the parking assist monitor system. Use caution, just as you would when backing up any vehicle.
- Never back up while looking only at the screen. The image on the screen may differ from actual conditions. If you back up while looking only at the screen, you may hit an object or have an accident. When backing up, be sure to check by looking behind and all around the vehicle, both directly and using the mirrors, before reversing.