

■ INITIALIZE FUNCTION DUE TO PARTS REPLACEMENT

The initialize function must always be performed whenever one of the conditions indicated in the table below occurs.

Part Name	Condition	Initialize Item
Television Camera Assembly	<ul style="list-style-type: none"> • Camera position has shifted. • Removal and reassembly of related parts • Replacement • Deformation due to the mount area having been struck. 	Camera Position Adjustment - Vertical Position - Horizontal Position - Roll Angle, Pan Angle, Tilt Angle
Parking Assist ECU	Replacement	<ul style="list-style-type: none"> • Neutral steering point in memory • Maximum side-to-side steering angle in memory • Camera Position Adjustment - Vertical Position - Horizontal Position - Roll Angle, Pan Angle, Tilt Angle
Steering Sensor	<ul style="list-style-type: none"> • Replacement • Removal and reassembly of related parts 	<ul style="list-style-type: none"> • Neutral steering point in memory • Maximum side-to-side steering angle in memory

- The initialize function described above is performed on the diagnosis menu screen.
- The method for displaying the diagnosis menu screen is the same as for the multi display. For details, see the LEXUS IS F Repair Manual (Pub. No. RM08E0E).

