



## **LEXUS Parking Assist-sensor System**

The LEXUS parking assist-sensor system informs the driver of the distance between the sensors and the obstacles as well as their positions by displaying them on the multi-information display in the combination meter or multi display and by sounding a buzzer.

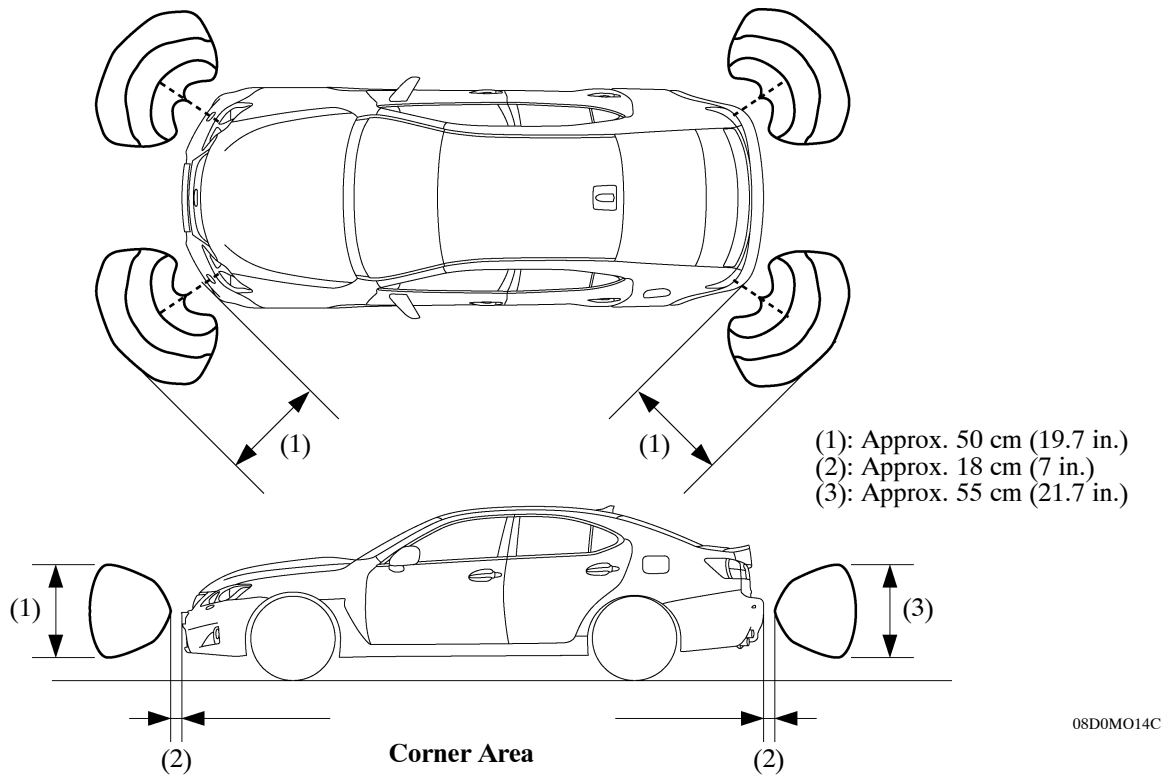

08D0M014C

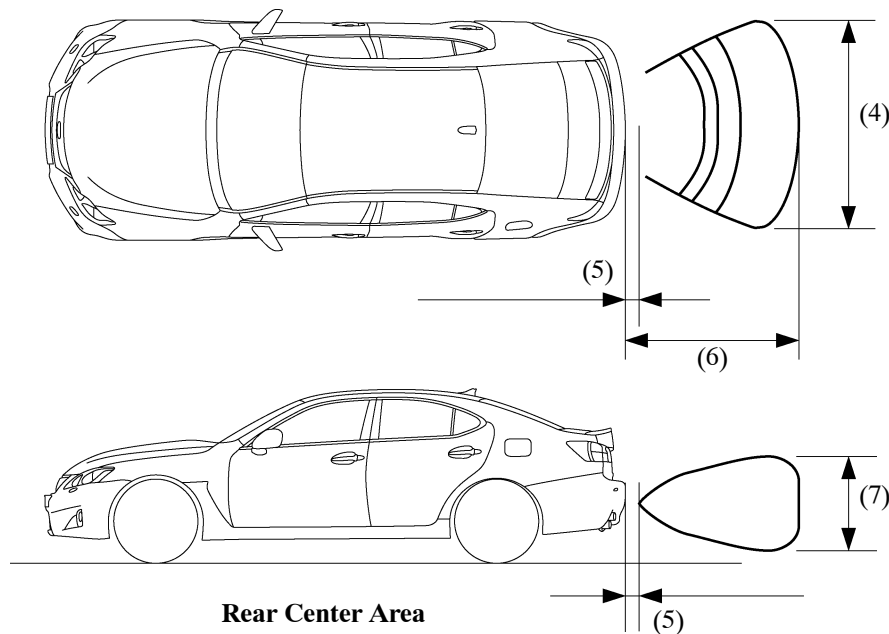

08D0M039C

- (4): Approx. 180 cm (71 in.)    (6): Approx. 150 cm (59 in.)  
 (5): Approx. 25 cm (9.8 in.)    (7): Approx. 70 cm (27.6 in.)