

 
Entry & Start System

Entry & start system mainly consists of the wireless door lock remote function, engine immobilizer function, start function and entry function.

Start Function

The start function allows the power source mode to be switched between OFF, ACC, and IG-ON. The power source can be switched by pushing the engine switch while the key is carried by the driver.

In addition, when the key is carried by the driver, the driver can start the engine by pushing the engine switch with the brake pedal depressed.

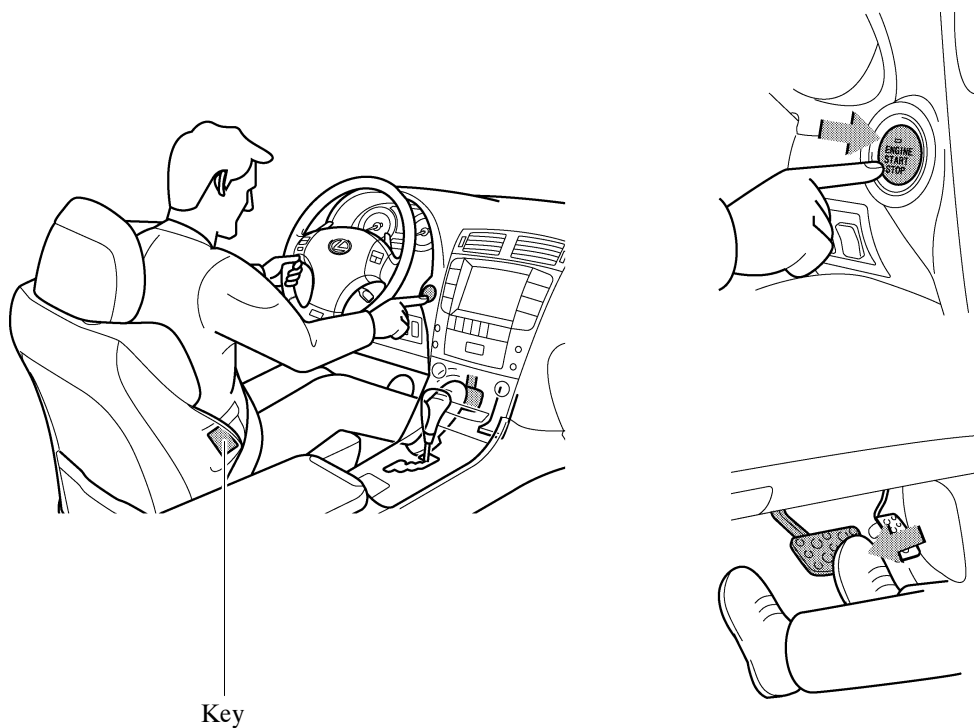


08D0M019C

Entry Function


For the entry function, the following functions can be operated when the driver carries the key:

 - The doors unlock if the door outside handle is gripped. (Entry Unlock)
- The doors lock if the lock switch on the door outside handle is pushed. (Entry Lock)
- The trunk opens if the trunk open switch is pushed. (Entry Trunk Open)

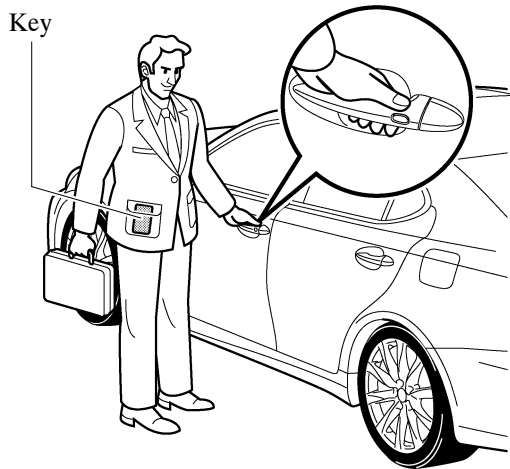MO


Entry Unlock

 08D0MO20C

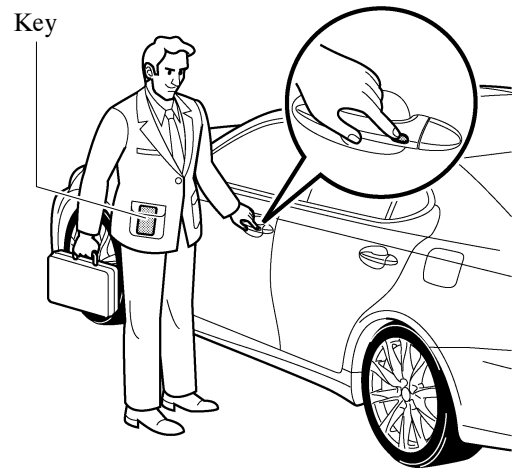

Entry Lock

 08D0MO21C

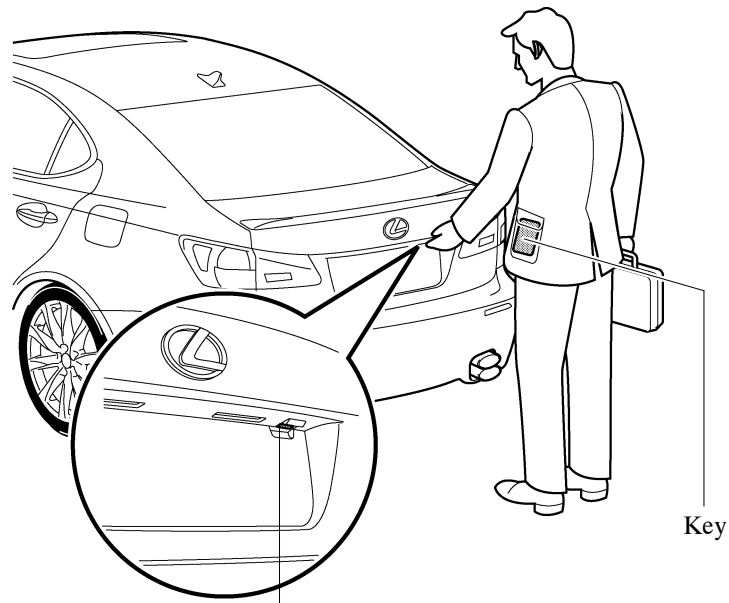

Trunk Open Switch

Entry Trunk Open

08D0MO22C