


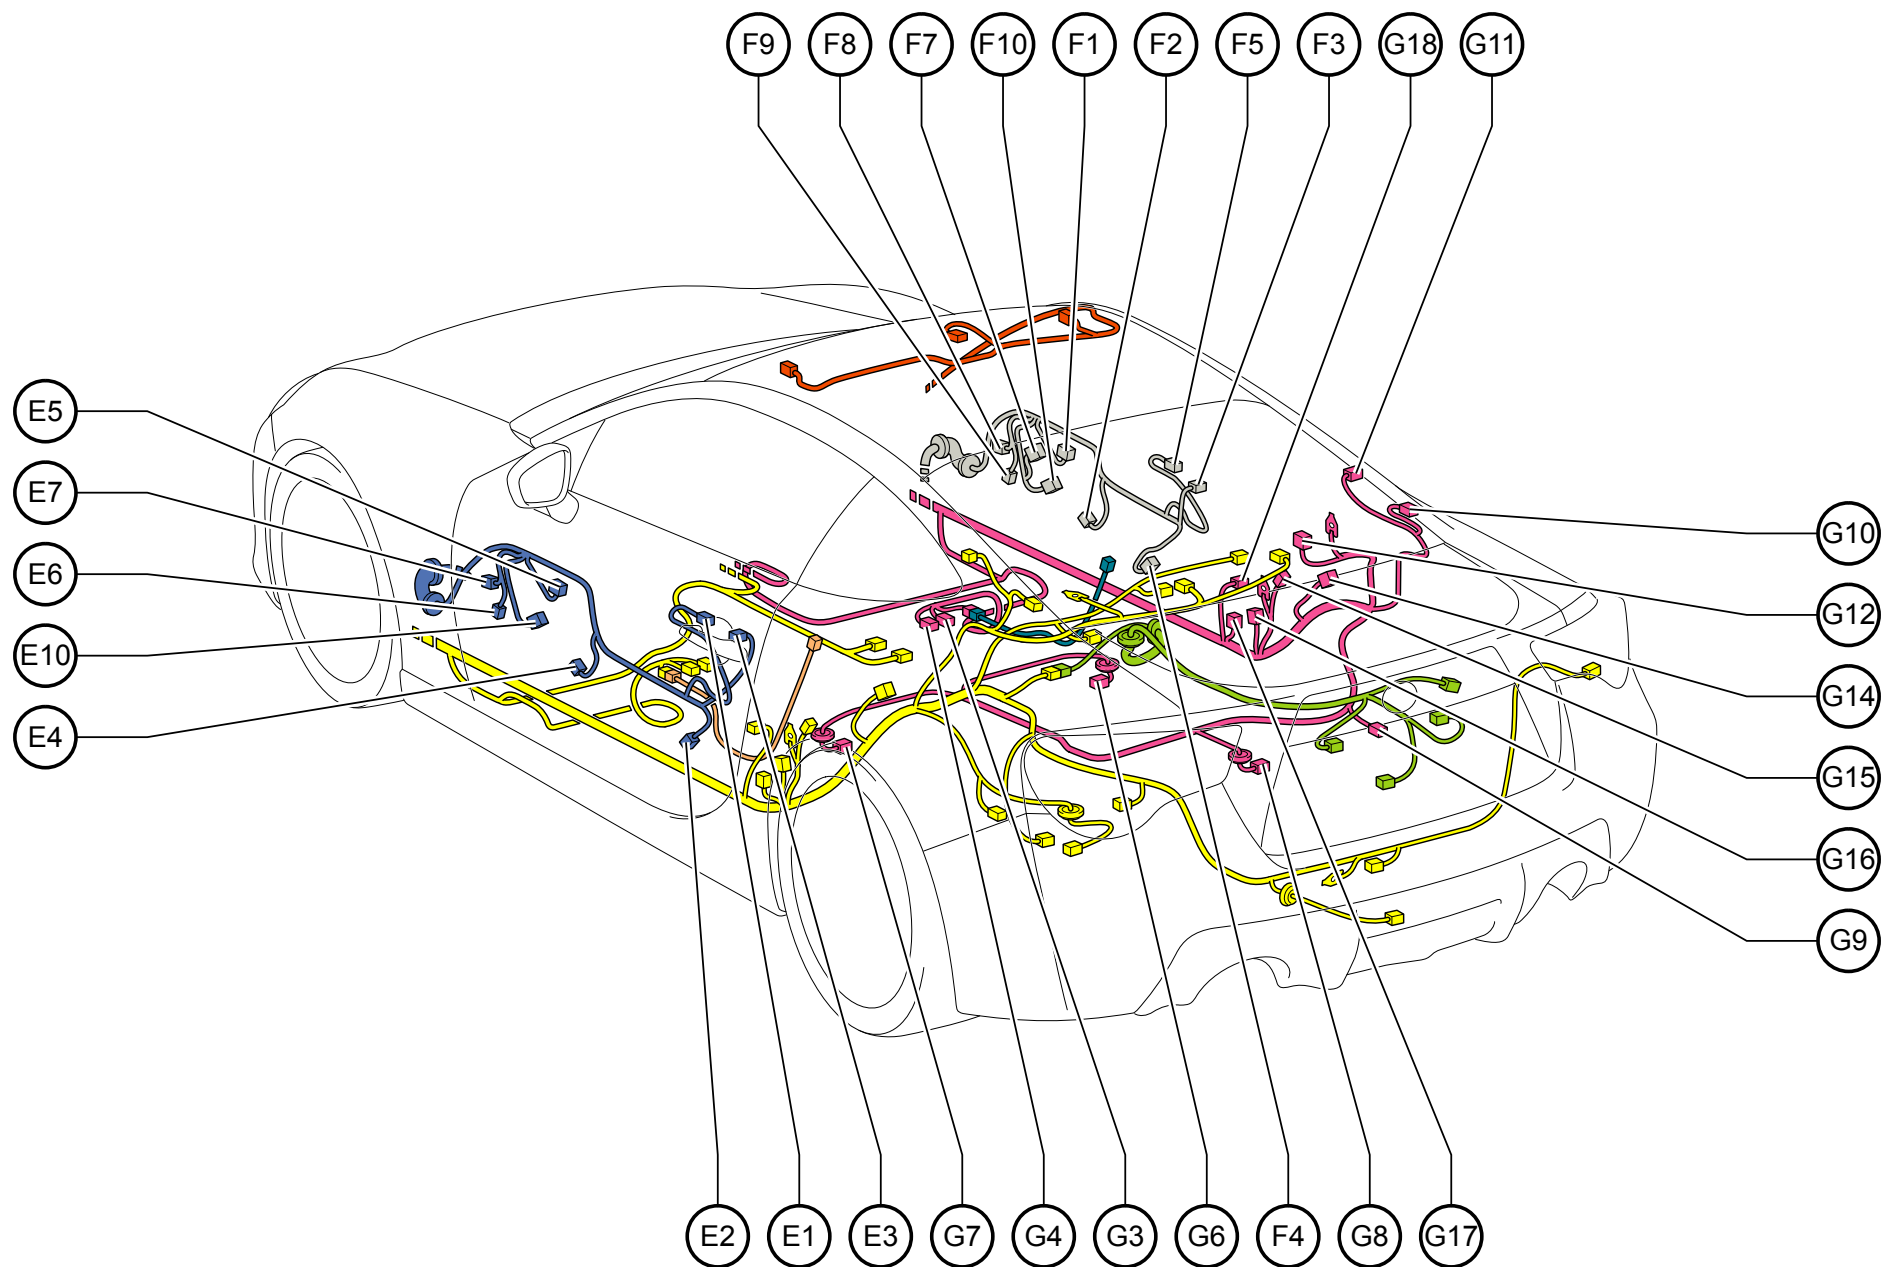

- E 1 Front Door Outside Handle Assembly LH
- E 2 Front Courtesy Light Assembly LH
- E 3 Front Door Lock Assembly LH
- E 4 Side Airbag Sensor Assembly LH
- E 5 Power Window Regulator Motor Assembly LH
- E 6 Front No. 1 Speaker Assembly LH
- E 7 Outer Rear View Mirror Sub-Assembly LH
- E 10 Power Window Regulator Switch Assembly

- F 1 Power Window Regulator Motor Assembly RH
- F 2 Side Airbag Sensor Assembly RH
- F 3 Front Door Lock Assembly RH
- F 4 Front Courtesy Light Assembly RH
- F 5 Front Door Outside Handle Assembly RH
- F 7 Outer Mirror Switch Assembly
- F 8 Outer Rear View Mirror Sub-Assembly RH
- F 9 Front No. 1 Speaker Assembly RH
- F 10 Power Window Regulator Master Switch Assembly

- G 3 Front Seat Inner Belt Assembly RH
- G 4 Seat Heater RH
- G 6 No. 2 Fuel Sender Gage Assembly
- G 7 Fuel Suction Tube with Pump & Gage Assembly
- G 8 Canister Pump Module
- G 9 Rear Speed Sensor RH
- G 10 Rear Window Defogger (Back Window Glass)
- G 11 Curtain Shield Airbag Assembly RH
- G 12 Fuel Pump Control ECU Assembly
- G 14 Rear Airbag Sensor RH
- G 15 Rear Speaker Assembly RH
- G 16 No. 2 Side Airbag Sensor Assembly RH
- G 17 Front Seat Outer Belt Assembly RH
- G 18 Front Door Courtesy Light Switch Assembly RH

Position of Parts in Body <RHD>

