

 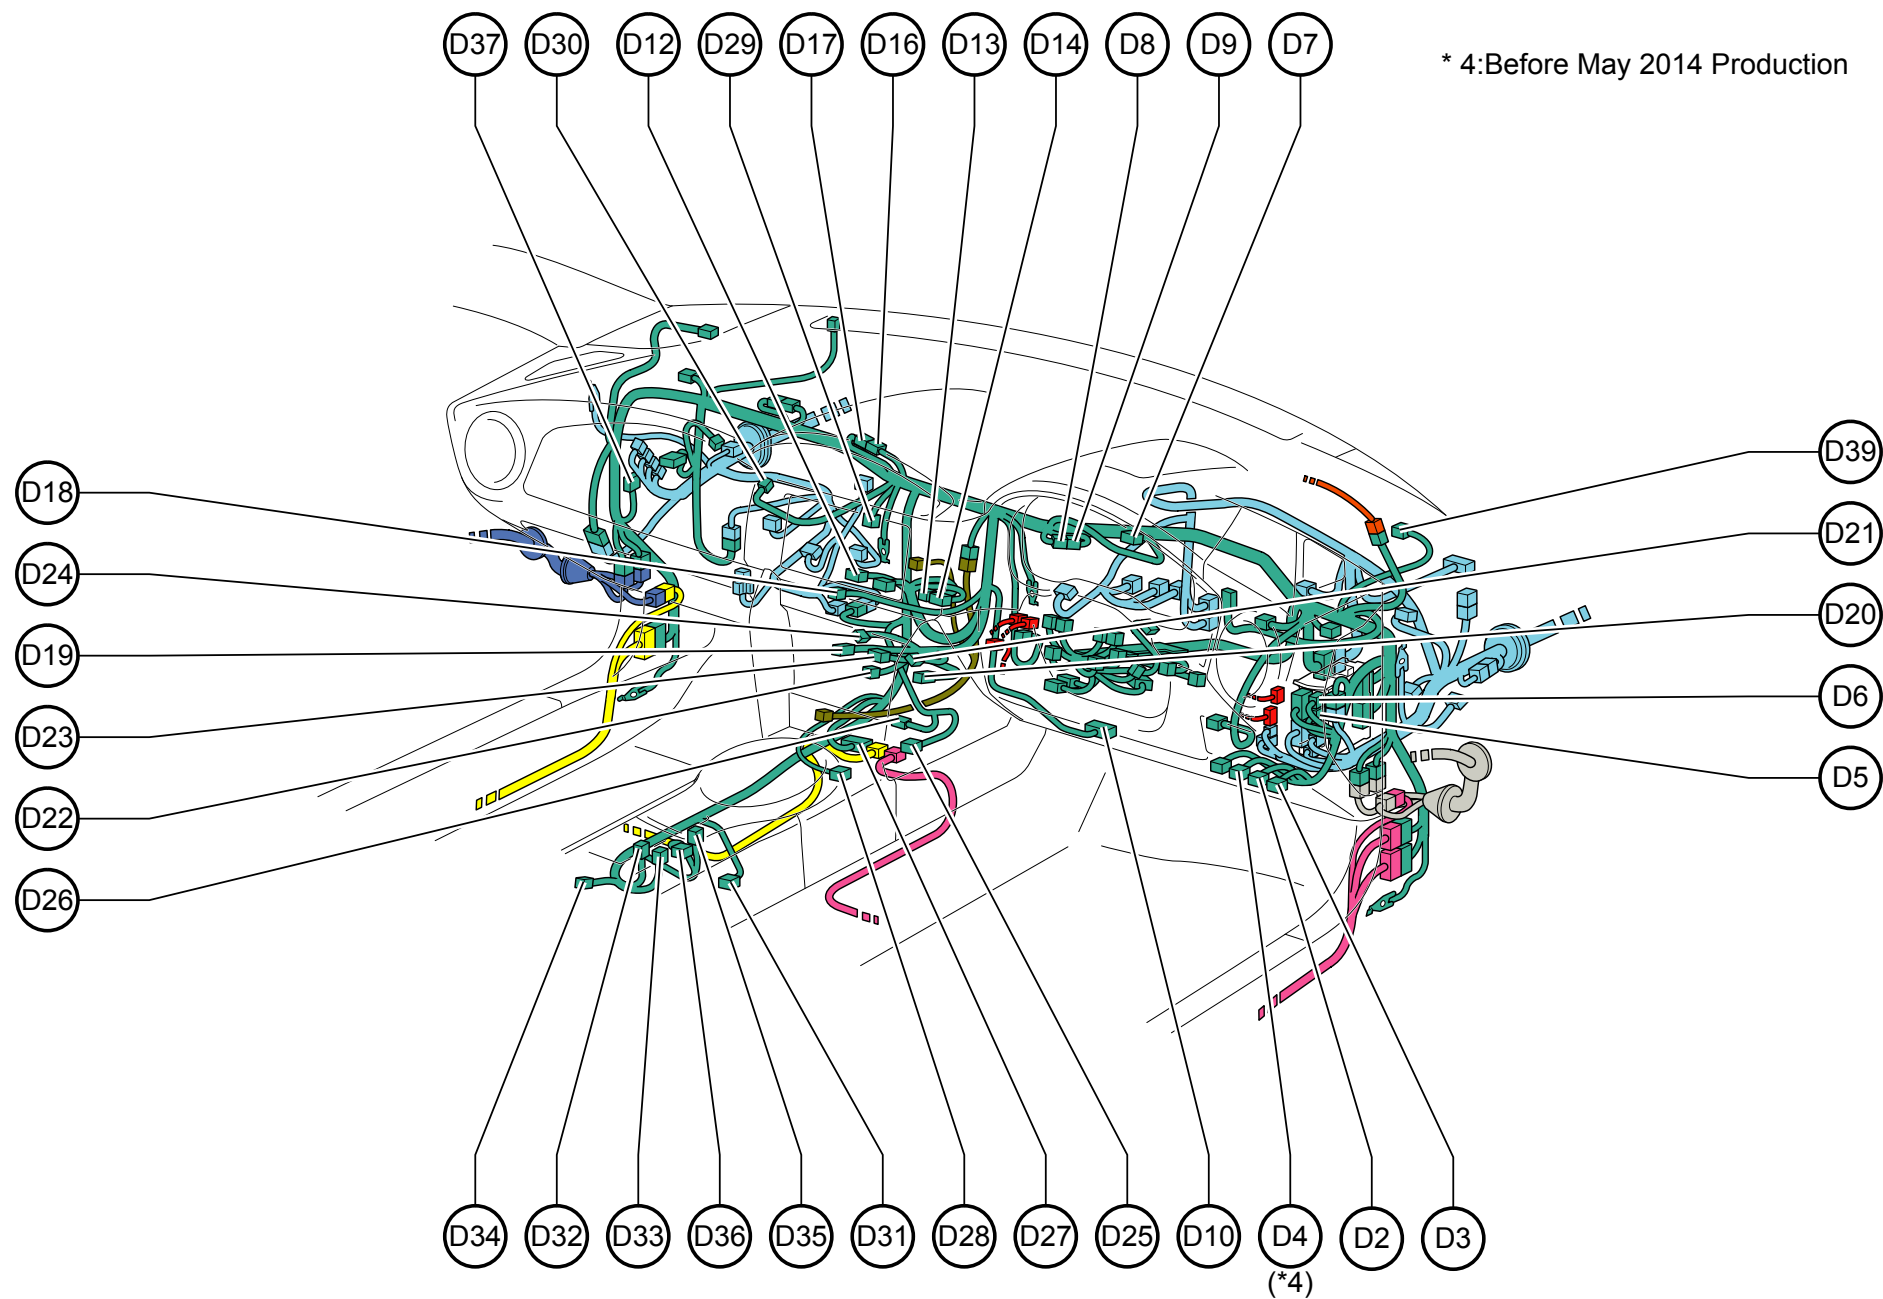
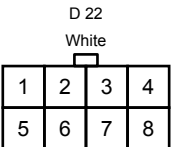

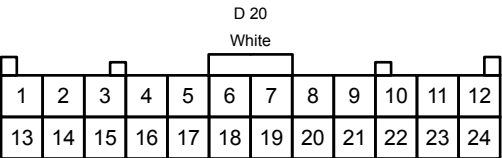
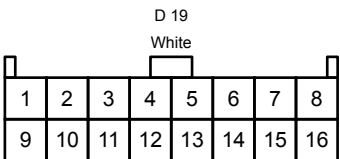
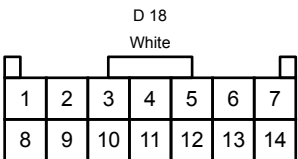
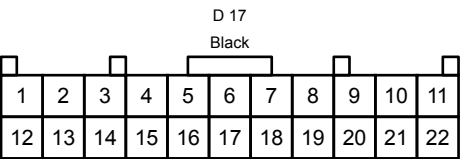
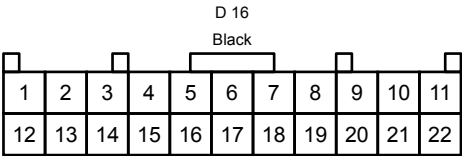
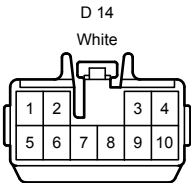
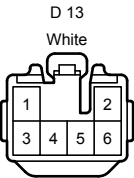
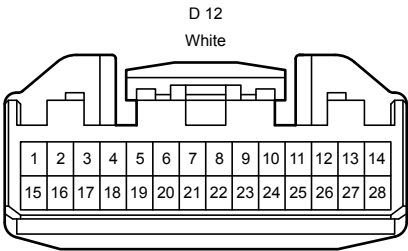
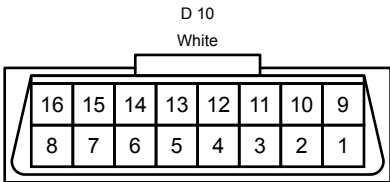
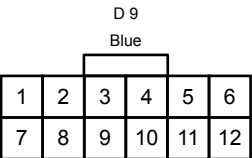
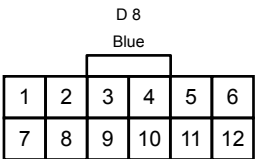
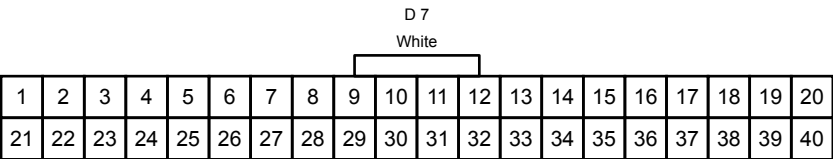
 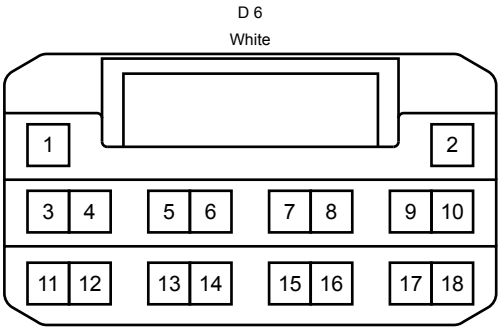
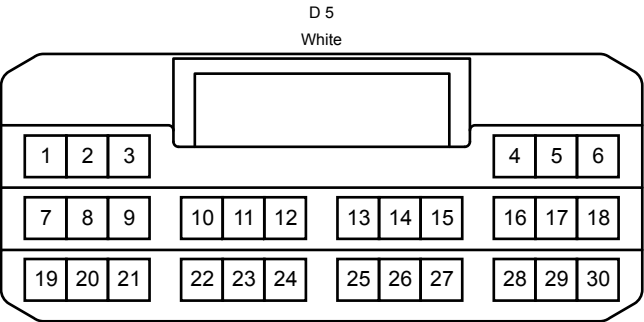



* 4:Before May 2014 Production

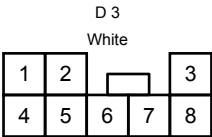

- D 2 Light Control Rheostat
- D 3 Headlight Leveling Switch
- D 4 Luggage Door Opening Switch Assembly
- D 5 Main Body ECU
- D 6 Main Body ECU
- D 7 Combination Meter Assembly
- D 8 Junction Connector
- D 9 Junction Connector
- D 10 DLC3
- D 12 Radio Receiver Assembly
- D 13 Radio Receiver Assembly
- D 14 Radio Receiver Assembly
- D 16 Junction Connector
- D 17 Junction Connector
- D 18 Clock Assembly
- D 19 A/C Control Assembly
- D 20 A/C Control Assembly
- D 21 No. 3 Heater Control Sub-Assembly
- D 22 Heater Control Sub-Assembly
- D 23 Heater Control Sub-Assembly
- D 24 Heater Control Base Sub-Assembly
- D 25 Engine Switch
- D 26 Indoor Electrical Key Oscillator
- D 27 Airbag ECU Assembly
- D 28 Shift Lever Assembly
- D 29 Option Connector
- D 30 Passenger Side Squib Circuit (Instrument Panel Passenger Airbag without Door Assembly)
- D 31 Parking Brake Switch Assembly
- D 32 Seat Heater Switch LH
- D 33 Seat Heater Switch RH
- D 34 No. 2 Power Outlet Socket Assembly
- D 35 Pattern Select Switch Assembly
- D 36 Shift Position Indicator
- D 37 Airbag Cut Off Switch Cylinder Sub-Assembly
- D 39 Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel <RHD>

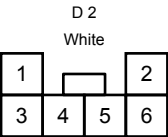

Position of Parts in Instrument Panel <RHD>

