



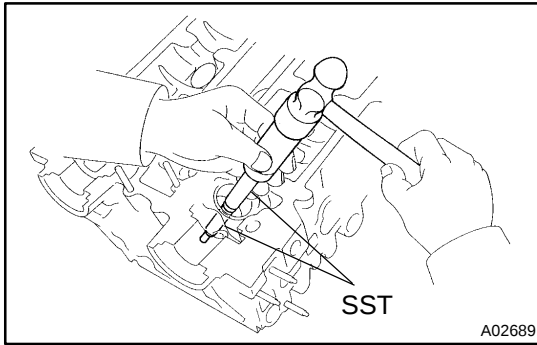

REPLACEMENT

REPLACE VALVE GUIDE BUSHINGS

- (a) Using SST and a hammer, tap out the guide bushing.
 SST 09201- 10000 (09201- 01060), 09950- 70010 (09951-07100)

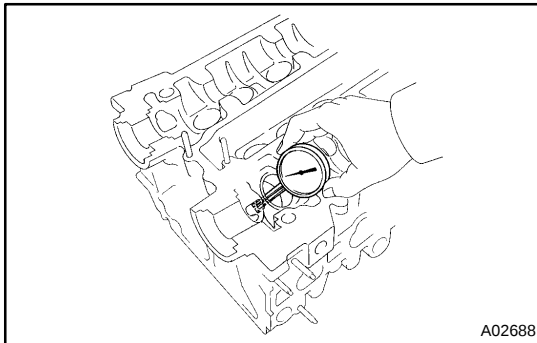

- (b) Using a caliper gauge, measure the bushing bore diameter of the cylinder head.

Both intake and exhaust


Bushing bore diameter mm (in.)	Bushing size
10.985 - 11.006 mm (0.4325 - 0.4333 in.)	Use STD
11.035 - 11.056 mm (0.4344 - 0.4353 in.)	Use O/S 0.05

- (c) Select a new guide bushing (STD or O/S 0.05).

If the bushing bore diameter of the cylinder head is greater than 11.006 mm (0.4333 in.), machine the bushing bore to the following dimension:

11.035 - 11.056 mm (0.4344 - 0.4353 in.)

If the bushing bore diameter of the cylinder head is greater than 11.056 mm (0.4353 in.), replace the cylinder head.

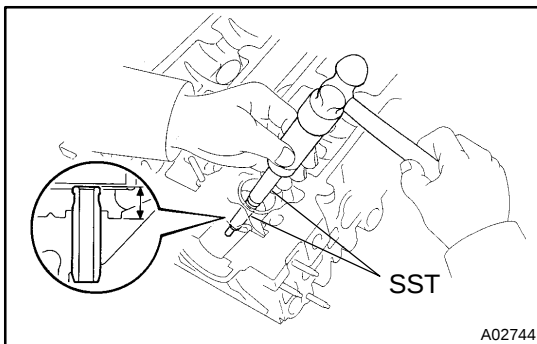


- (d) Using SST and a hammer, tap in a new guide bushing to the specified protrusion height.

SST 09201- 10000 (09201- 01060), 09950- 70010 (09951-07100)


Protrusion height:

Intake	12.3 - 12.7 mm (0.484 - 0.500 in.)
Exhaust	11.4 - 11.8 mm (0.449 - 0.465 in.)

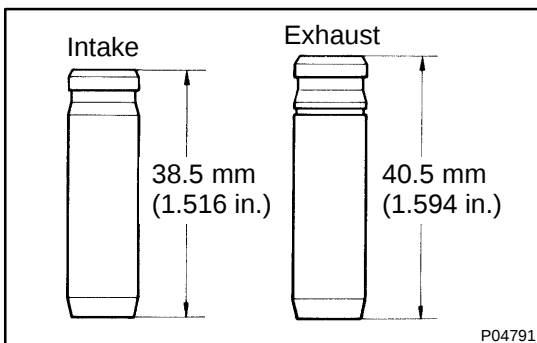

HINT:

Different bushings are used for the intake and exhaust.

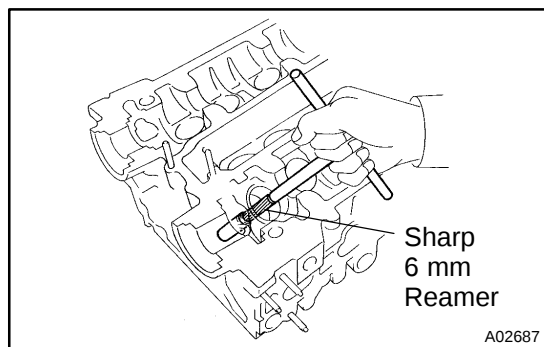

- (e) Using a sharp 6 mm reamer, ream the guide bushing to obtain the standard specified clearance (See page [EM-41](#)) between the guide bushing and valve stem.