



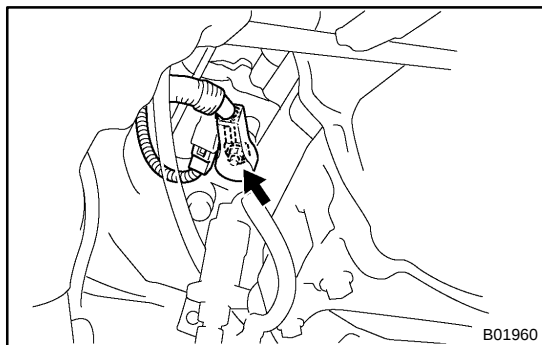

REMOVAL

REMOVE STARTER

- (a) Remove the rubber cap and nut, and disconnect the starter wire.
- (b) Disconnect the starter connector.

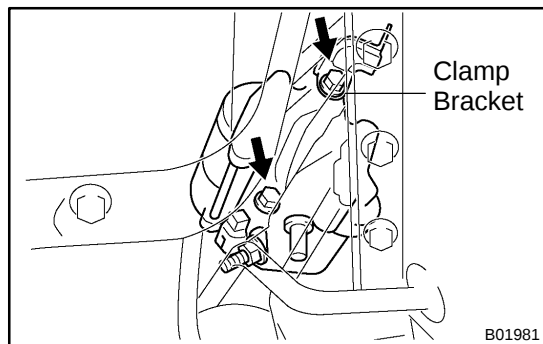

- (c) Remove the 2 bolts and starter.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

HINT:

At time of the installation, when installing the upper bolt, tighten it together with the clamp bracket.