

BODY PANEL ANTI-CHIPPING PAINT > APPLICATION AREAS

BODY PANEL ANTI-CHIPPING PAINT > APPLICATION AREAS

CAUTION:


Work must be performed while wearing the appropriate protective gear and in a well-ventilated area.

1. To protect the body from damage due to gravel, apply the anti-chipping paint to the rocker panels, roof panel, front body pillar, doors, wheel arches and hood.



HINT:

- Apply anti-chipping paint to the indicated areas first, before applying the top coat.
- If anti-chipping paint is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean the paint off immediately.

for EUROPE, KOREA:

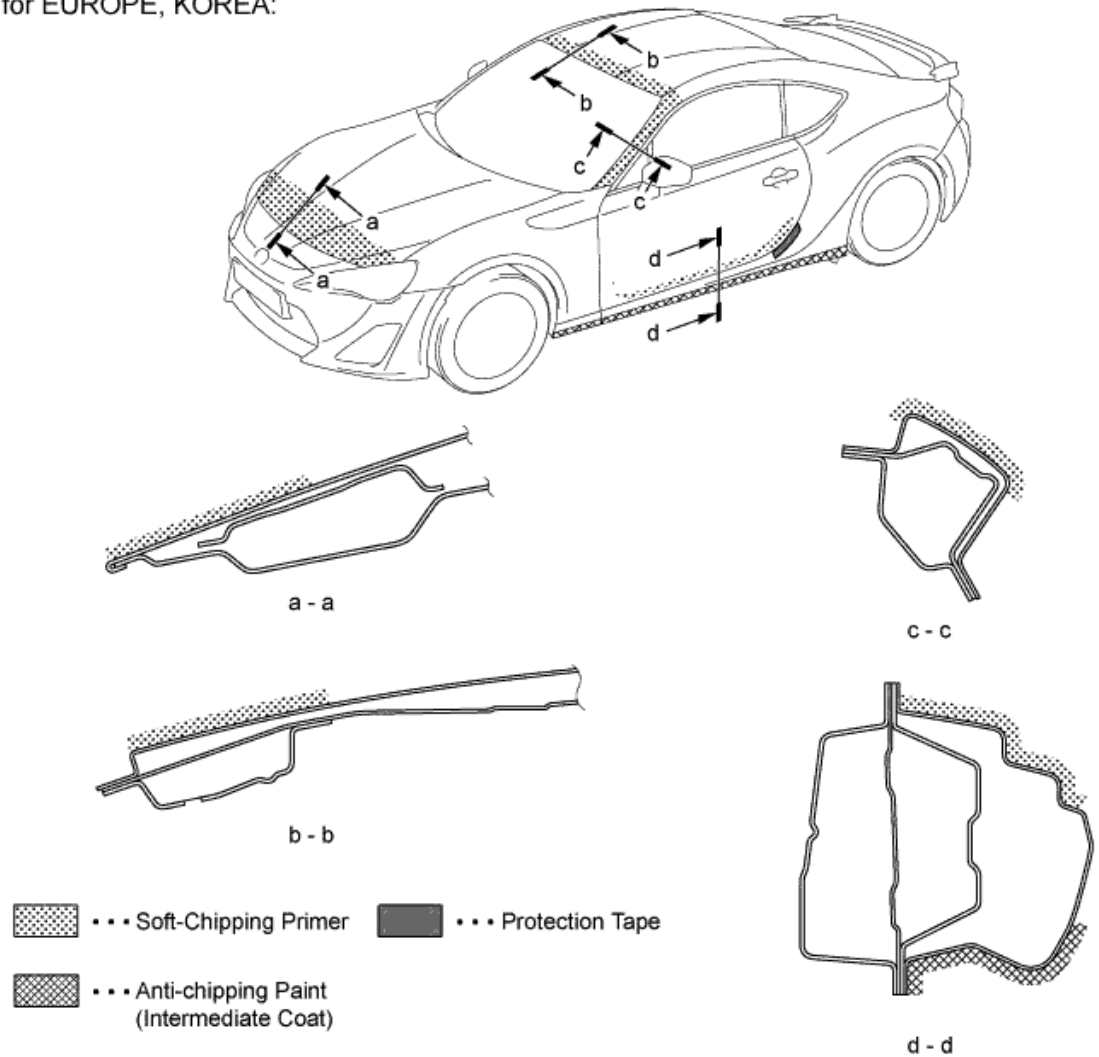

except EUROPE, KOREA:

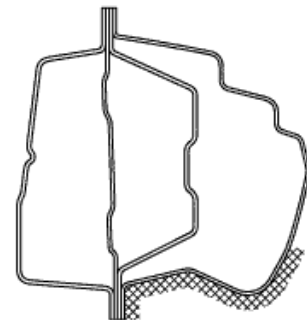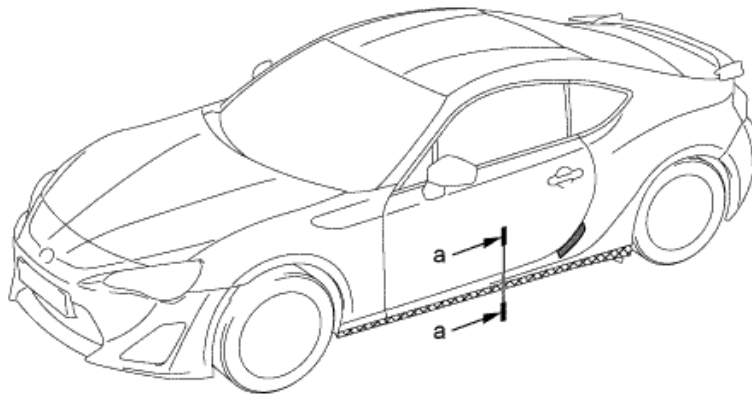

••• Anti-chipping Paint
(Intermediate Coat)

••• Protection Tape



BODY PANEL ANTI-RUST AGENT MATERIAL > APPLICATION AREAS

BODY PANEL ANTI-RUST AGENT MATERIAL > APPLICATION AREAS


1. Apply anti-rust agent (wax) to the doors and hood edges (tips of outer panel folded parts) and undersides, areas around hinges, etc., to prevent rust. Coat the undersides of the edges using a nozzle and air gun, and coat the areas around the hinges using a brush.

HINT:


If anti-rust agent (wax) is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the anti-rust agent (wax) immediately.

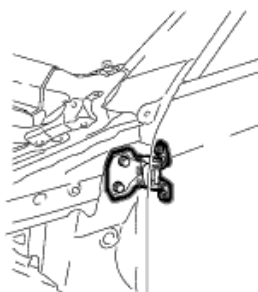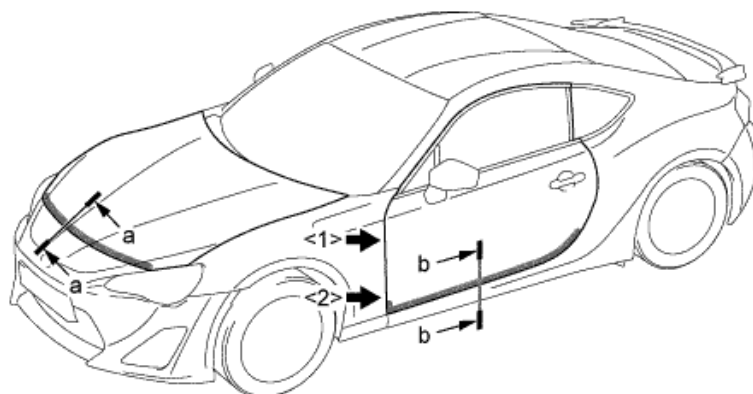

<1>

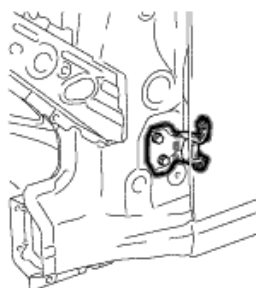




<2>

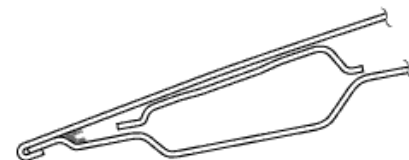



a - a




b - b

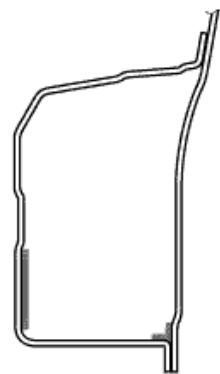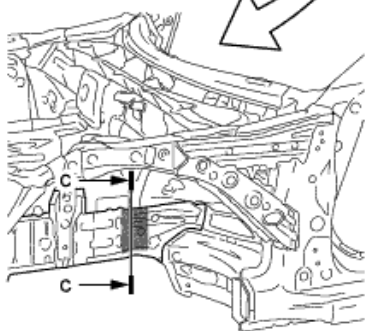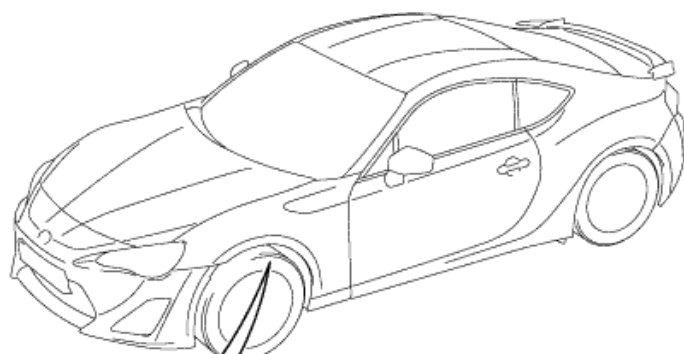

C - C

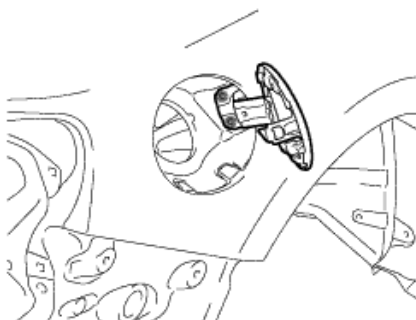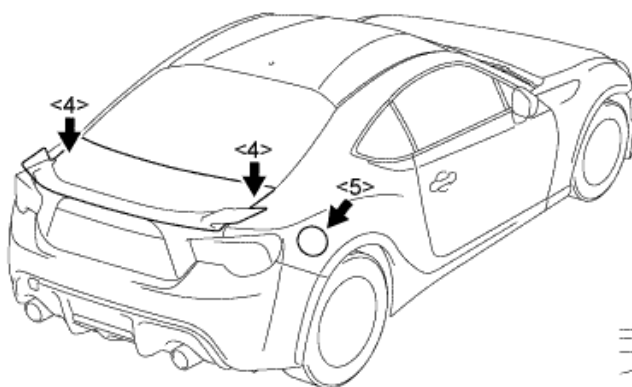

<5>

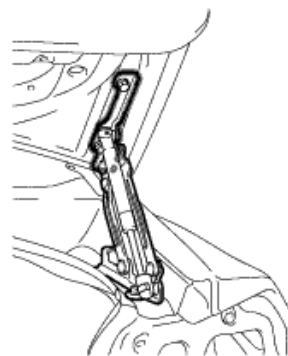

<4>



BODY PANEL SEALING > APPLICATION AREAS


BODY PANEL SEALING > APPLICATION AREAS



1. Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.


HINT:


- Apply degreasing agent to a clean cloth and clean the sealer application areas.
- After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rust-proof the areas by applying primer or equivalent. Then apply body sealer.
- If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the body sealer immediately.


	Flat Finishing		No Flat Finishing
---	----------------	---	-------------------

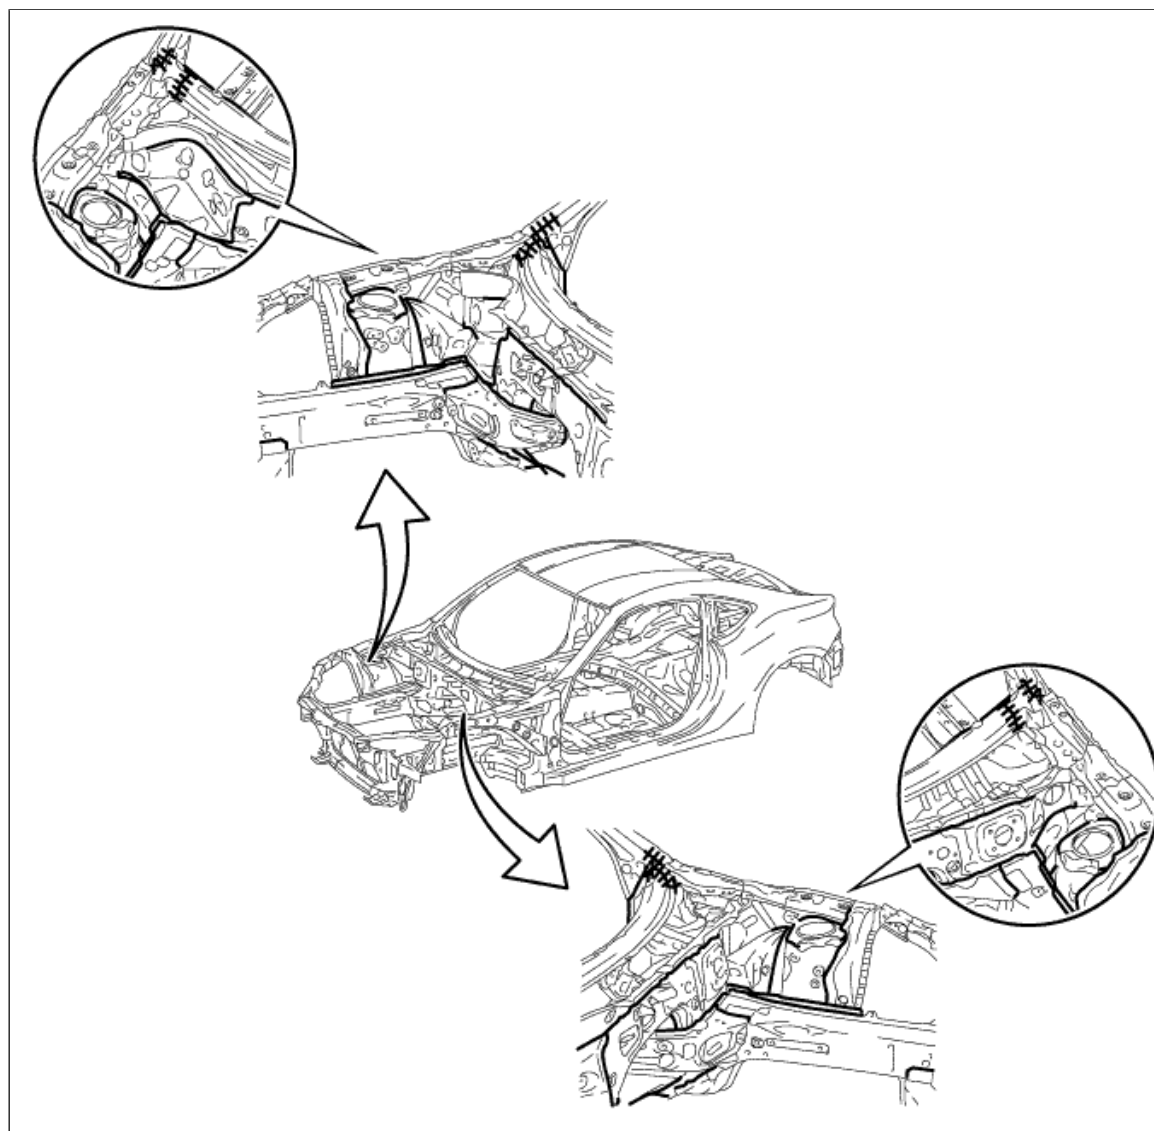


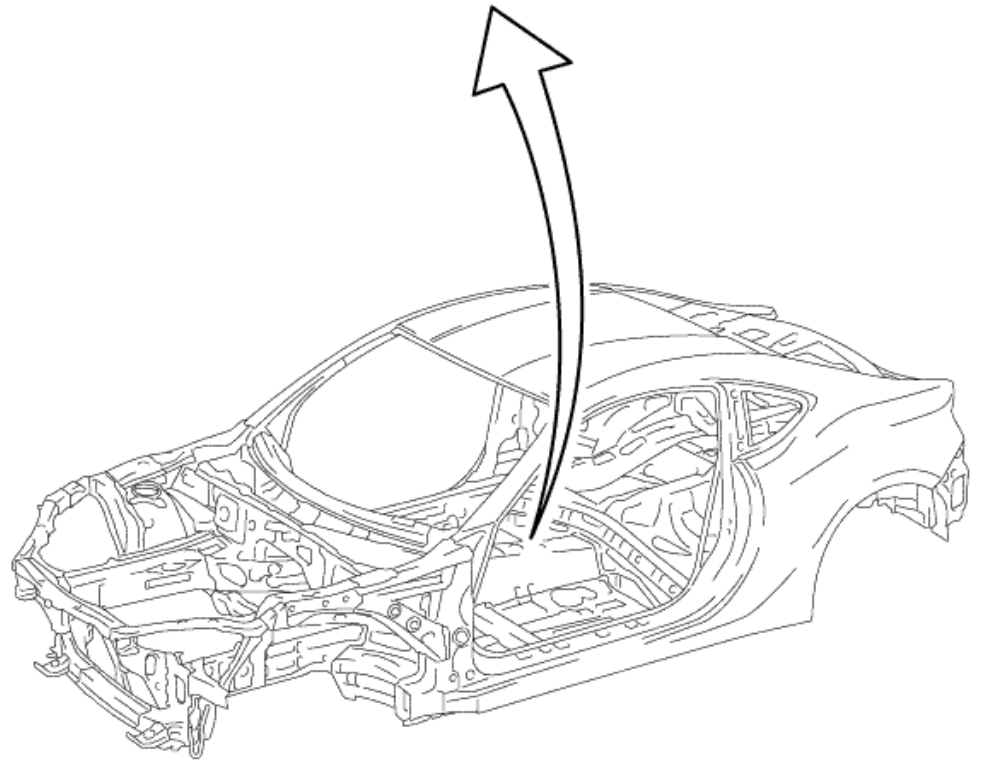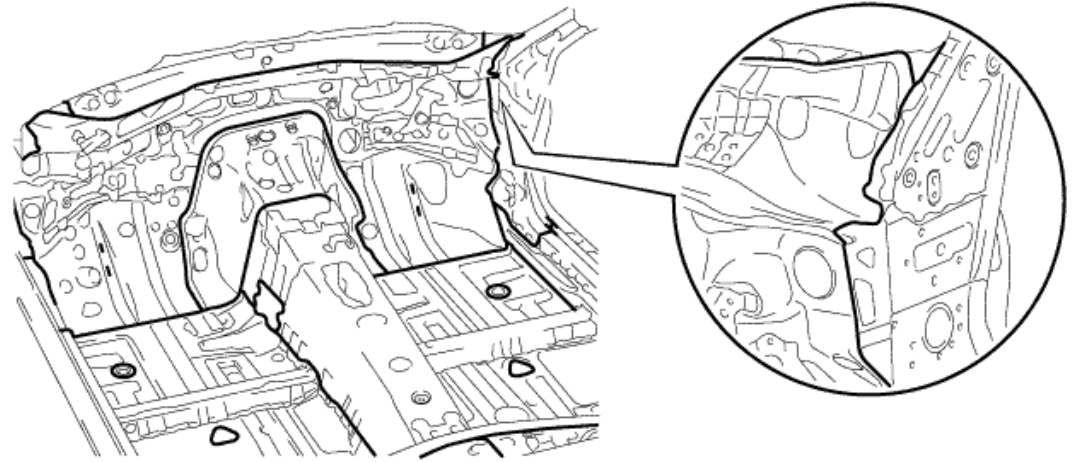


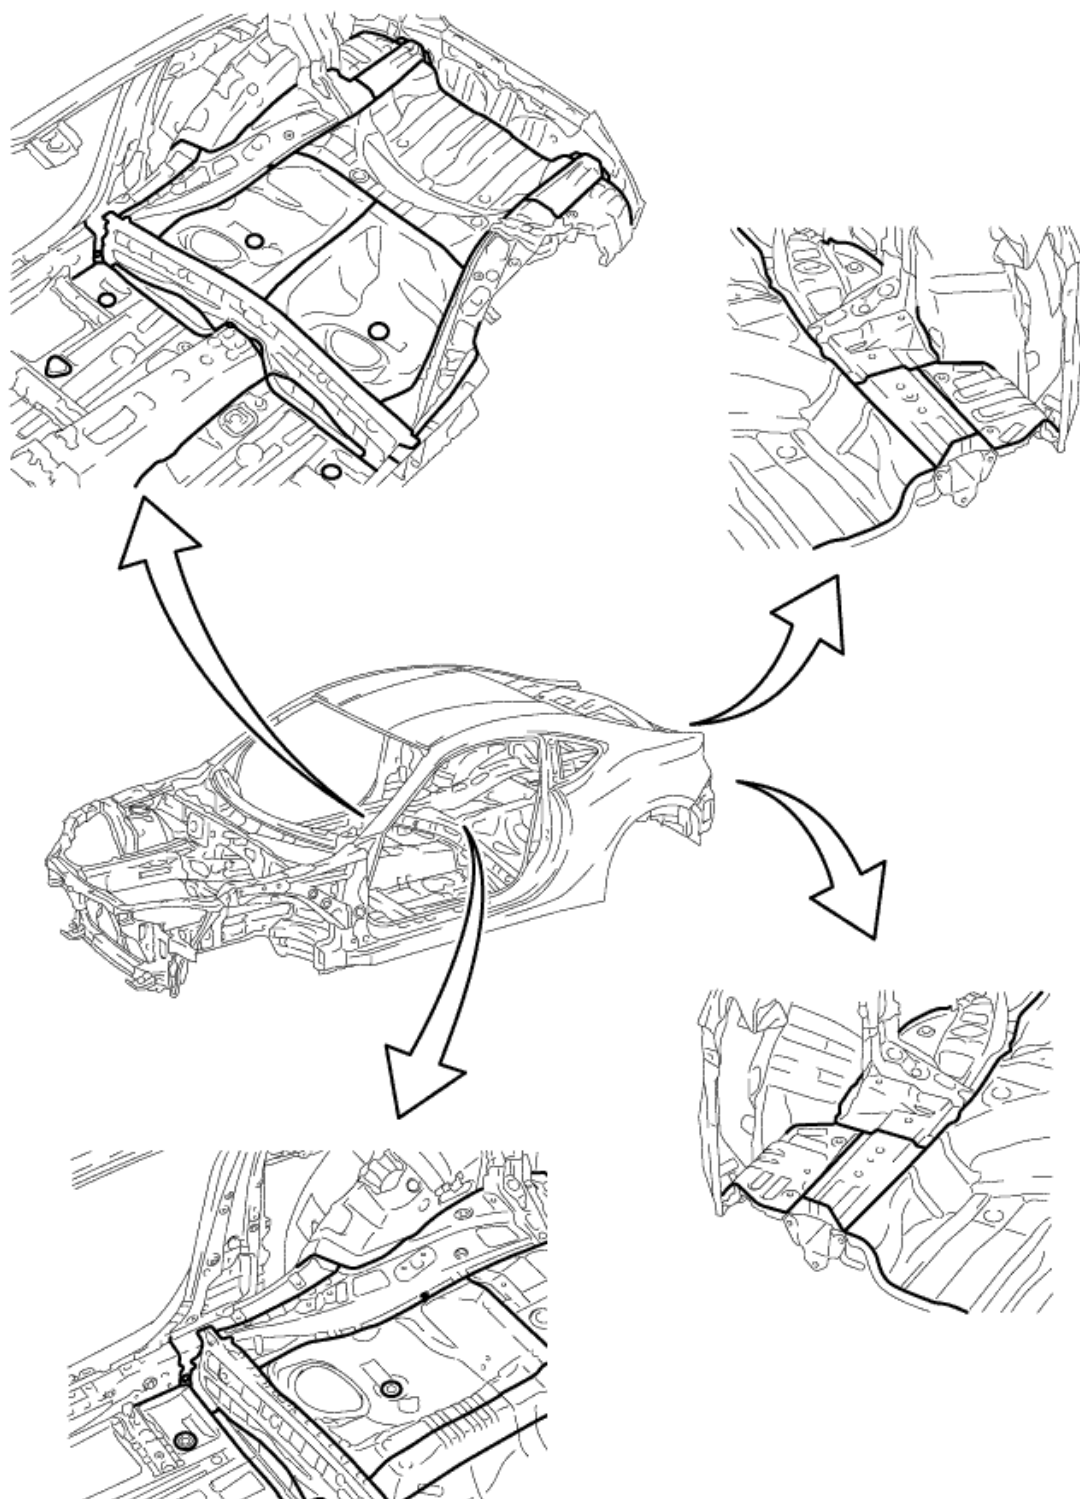


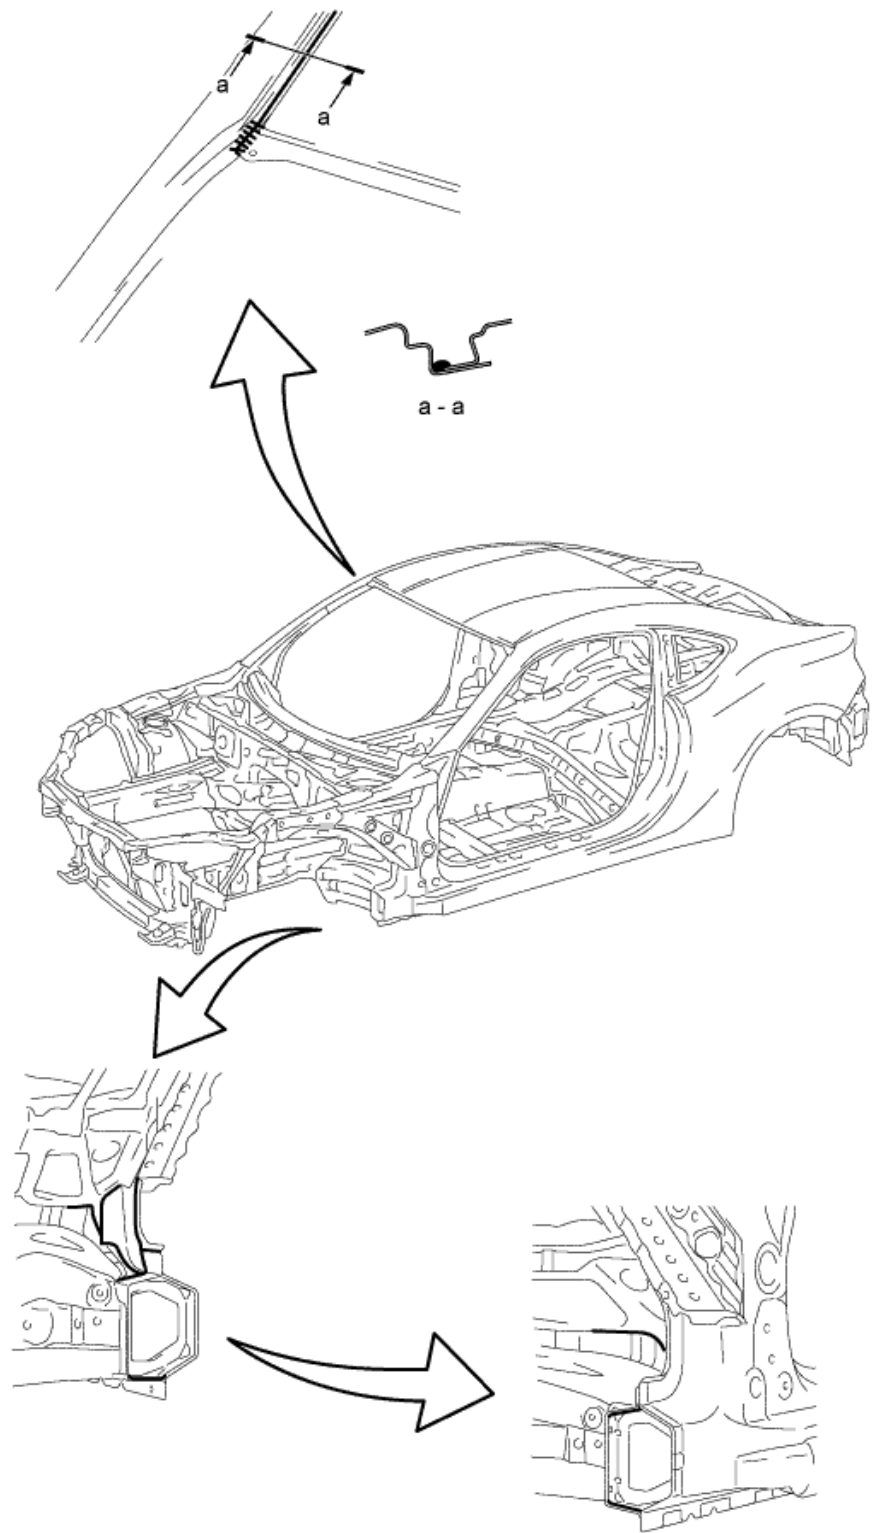

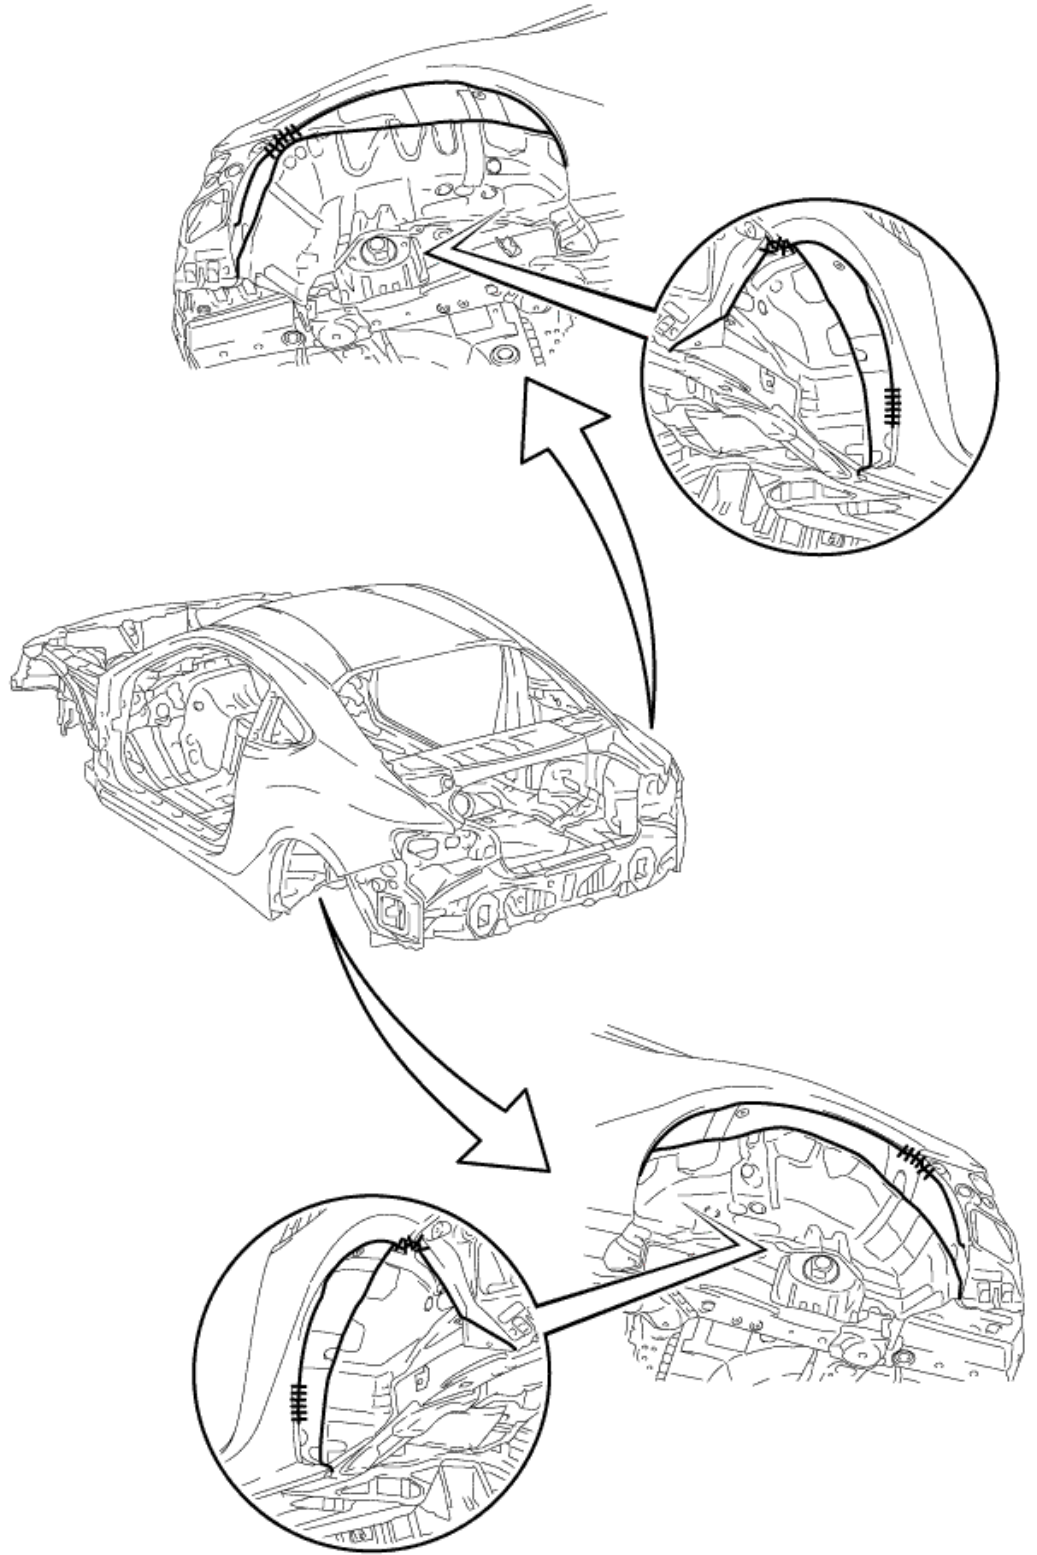

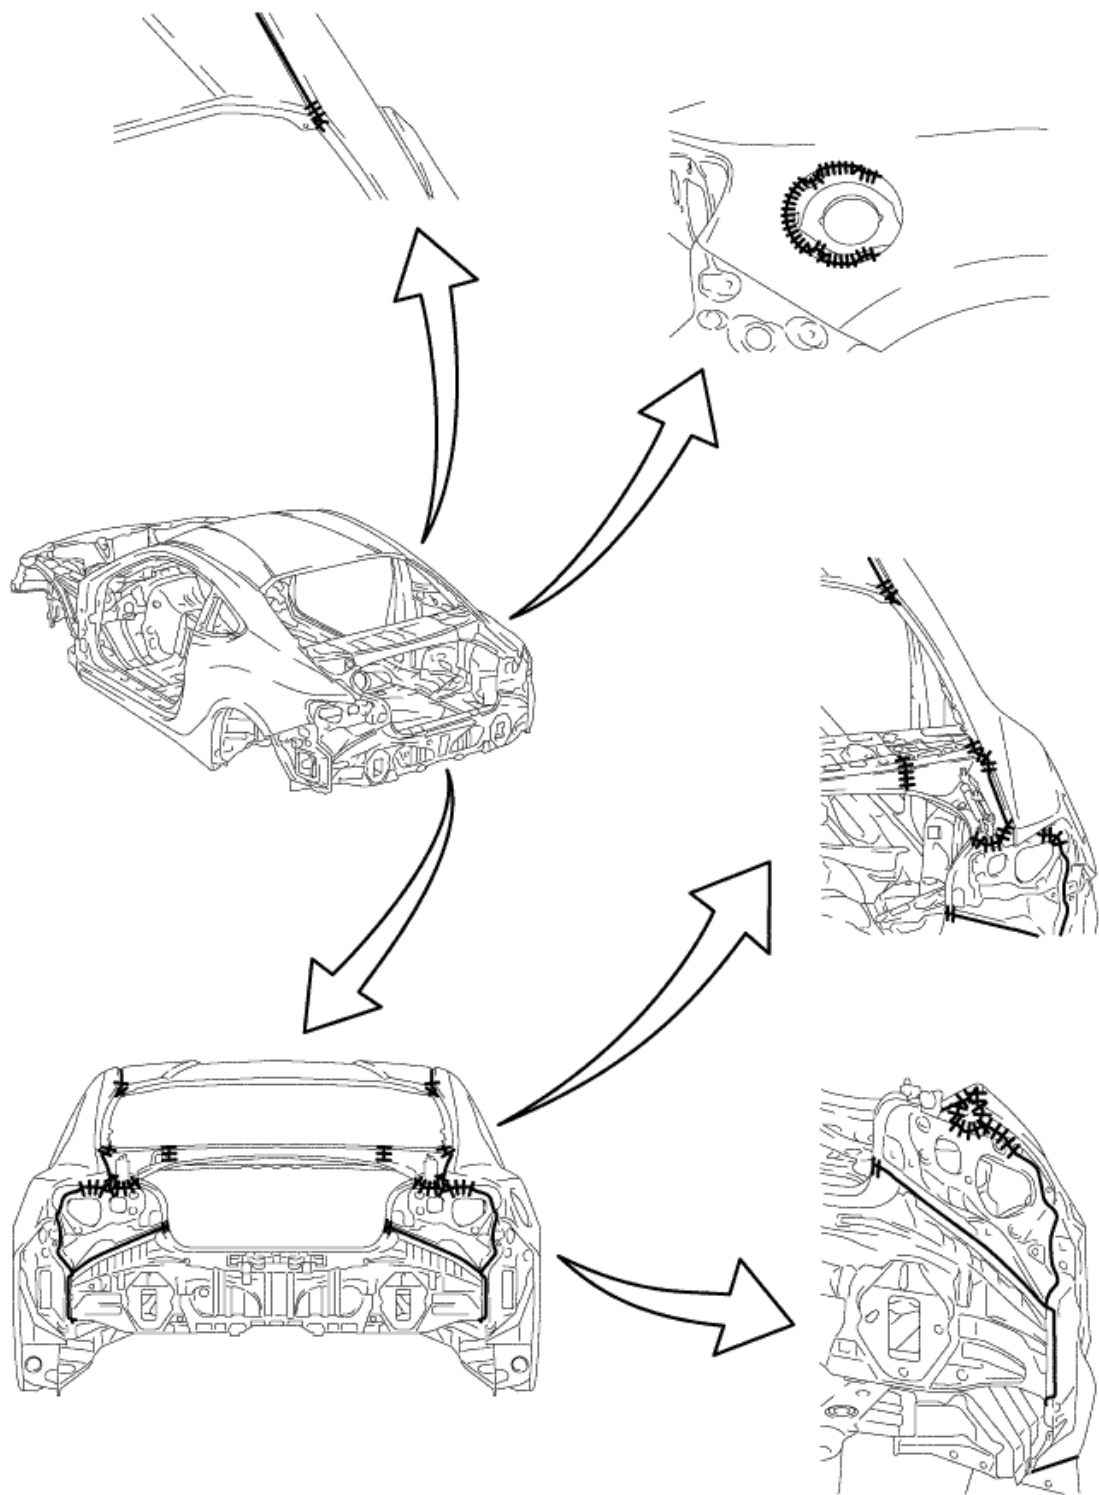

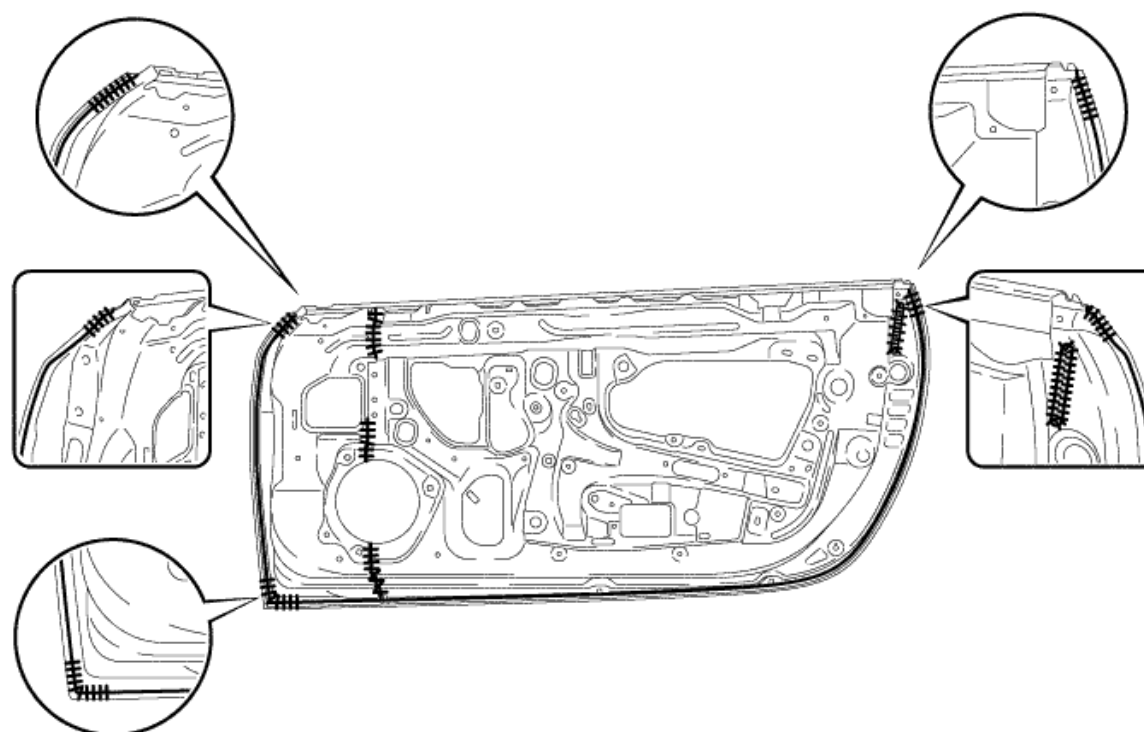

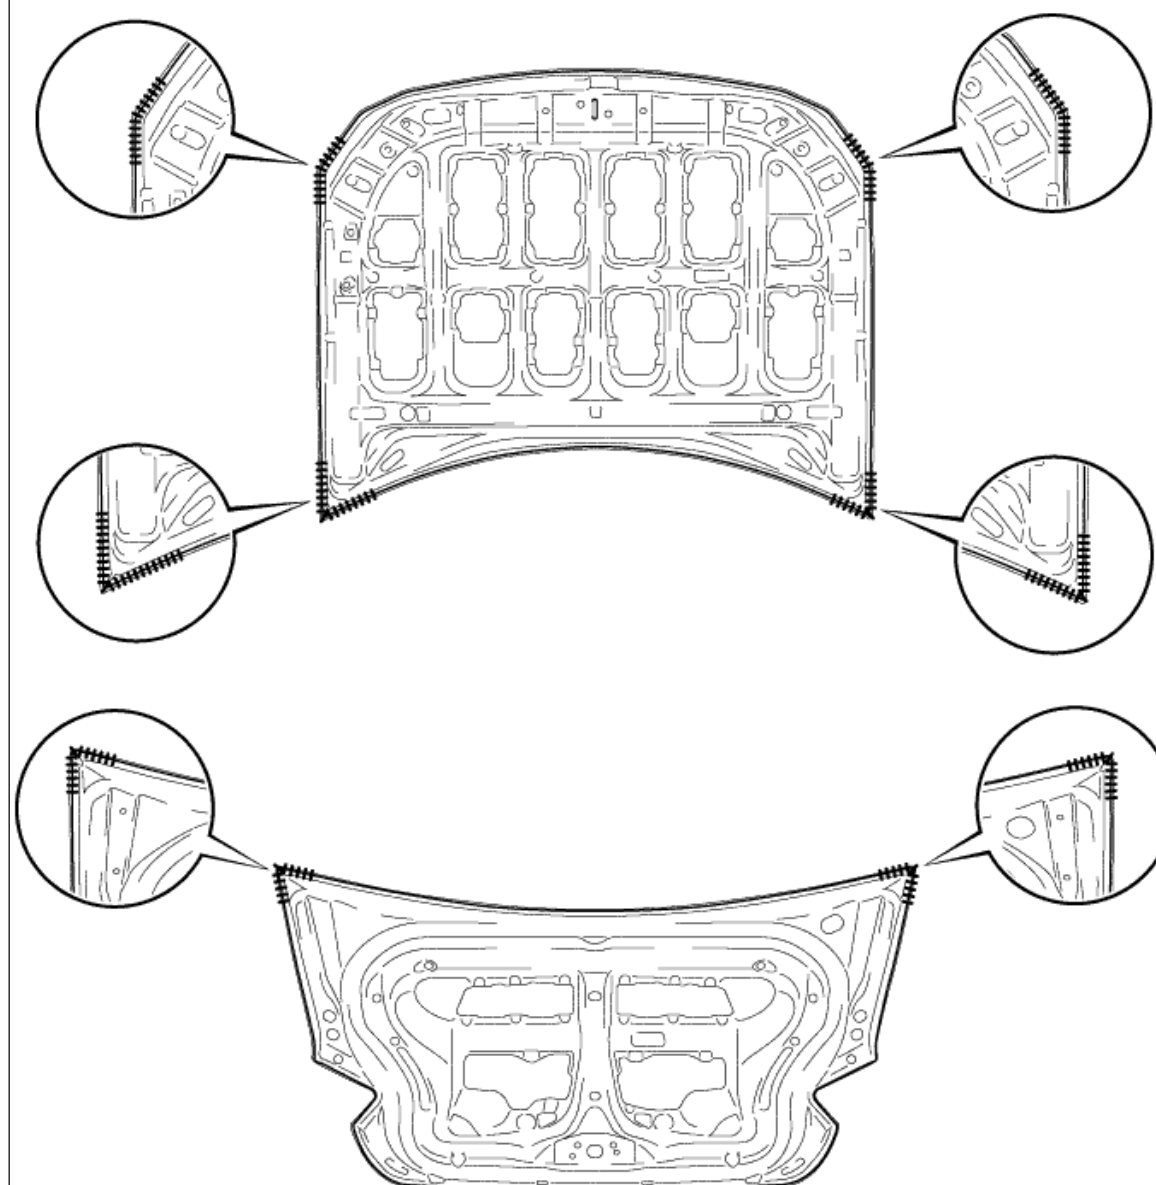

**BODY PANEL
UNDERCOATING >
APPLICATION AREAS****BODY PANEL UNDERCOATING > APPLICATION AREAS****CAUTION:**

Work must be performed while wearing the appropriate protective gear and in a well-ventilated area.


NOTICE:

Do not coat high temperature areas, such as the tailpipe, or moving parts, such as the drive shaft.



1. Apply undercoating to the chassis, floor underside, sheet metal fitting weld points of the body, and inside of the wheel house to prevent rust and noise, as well as protect the body from gravel.

HINT:



- Apply degreasing agent to a clean cloth and clean any dirt and oil from the application areas.
- Cover the surrounding areas of the application areas with masking paper to avoid coating unnecessary areas.
- Do not leave any gaps between the panel joints.
- Apply body sealer to the panel joints in advance.
- Referring to the notes above, undercoating should be applied according to the specifications for your country.

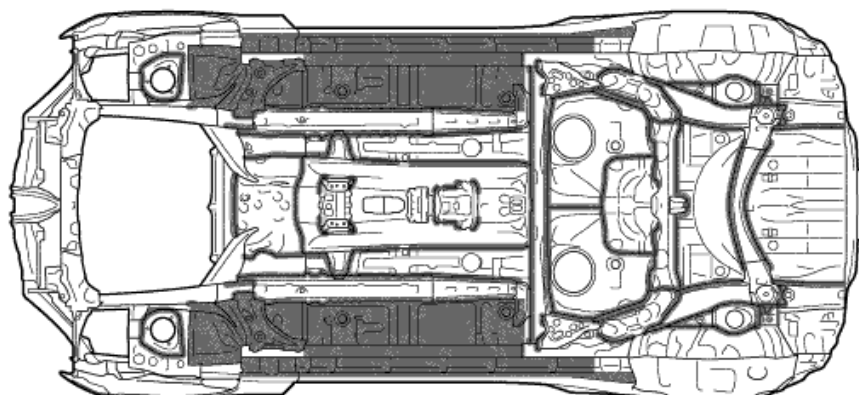

LH:

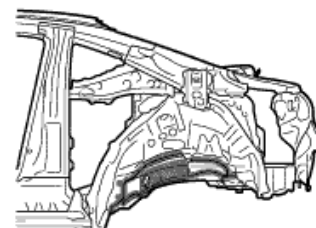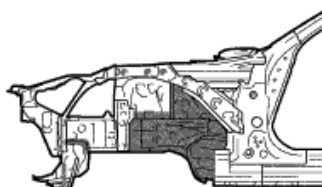


RH:

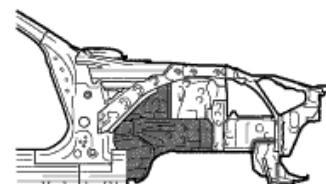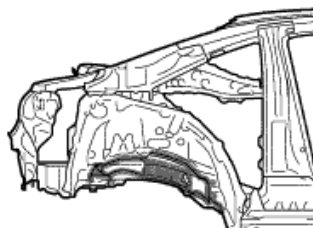



SILENCER SHEET > INSTALLATION AREAS

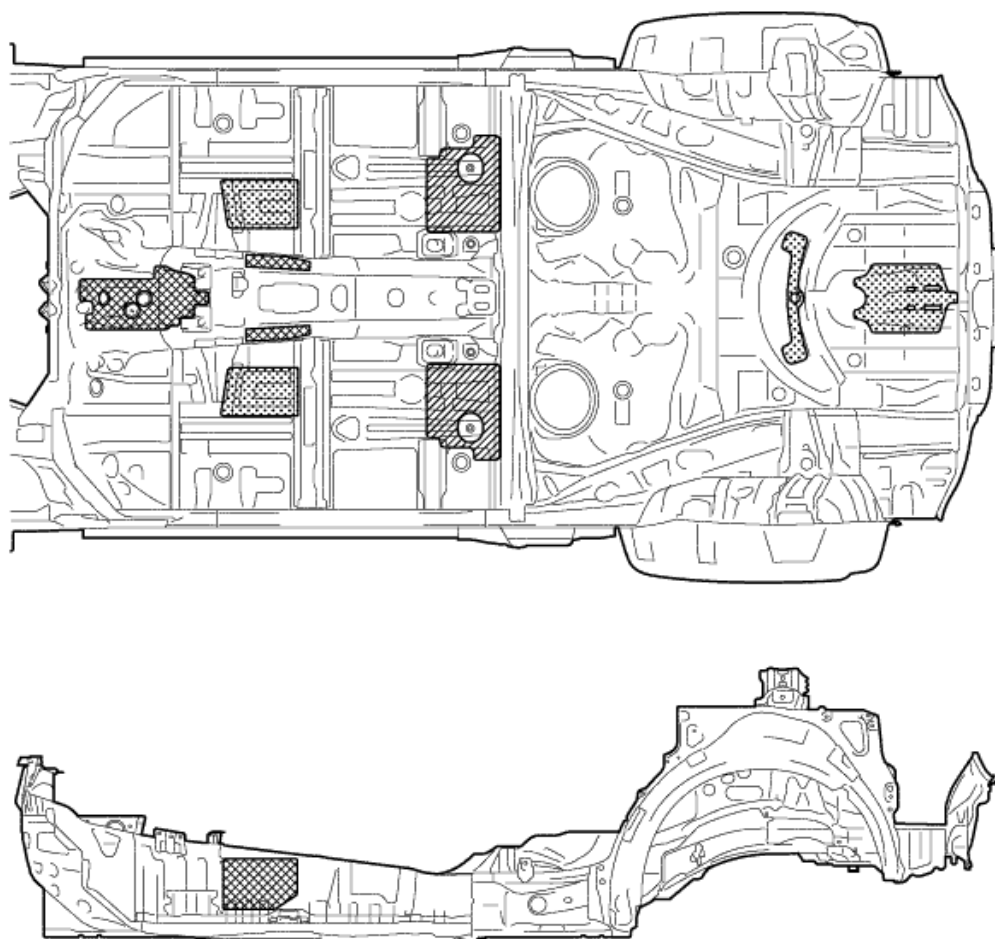SILENCER SHEET > INSTALLATION AREAS



Thickness of Silencer Sheet mm (in.)

-  . . . 3.0 (0.118)
-  . . . 3.5 (0.138)
-  . . . 4.0 (0.157)

