



Engine Control


- * 2 : Before Aug. 2008 Production
- * 3 : From Aug. 2008 Production
- * 6 : Before Aug. 2012 Production
- * 7 : From Aug. 2012 Production

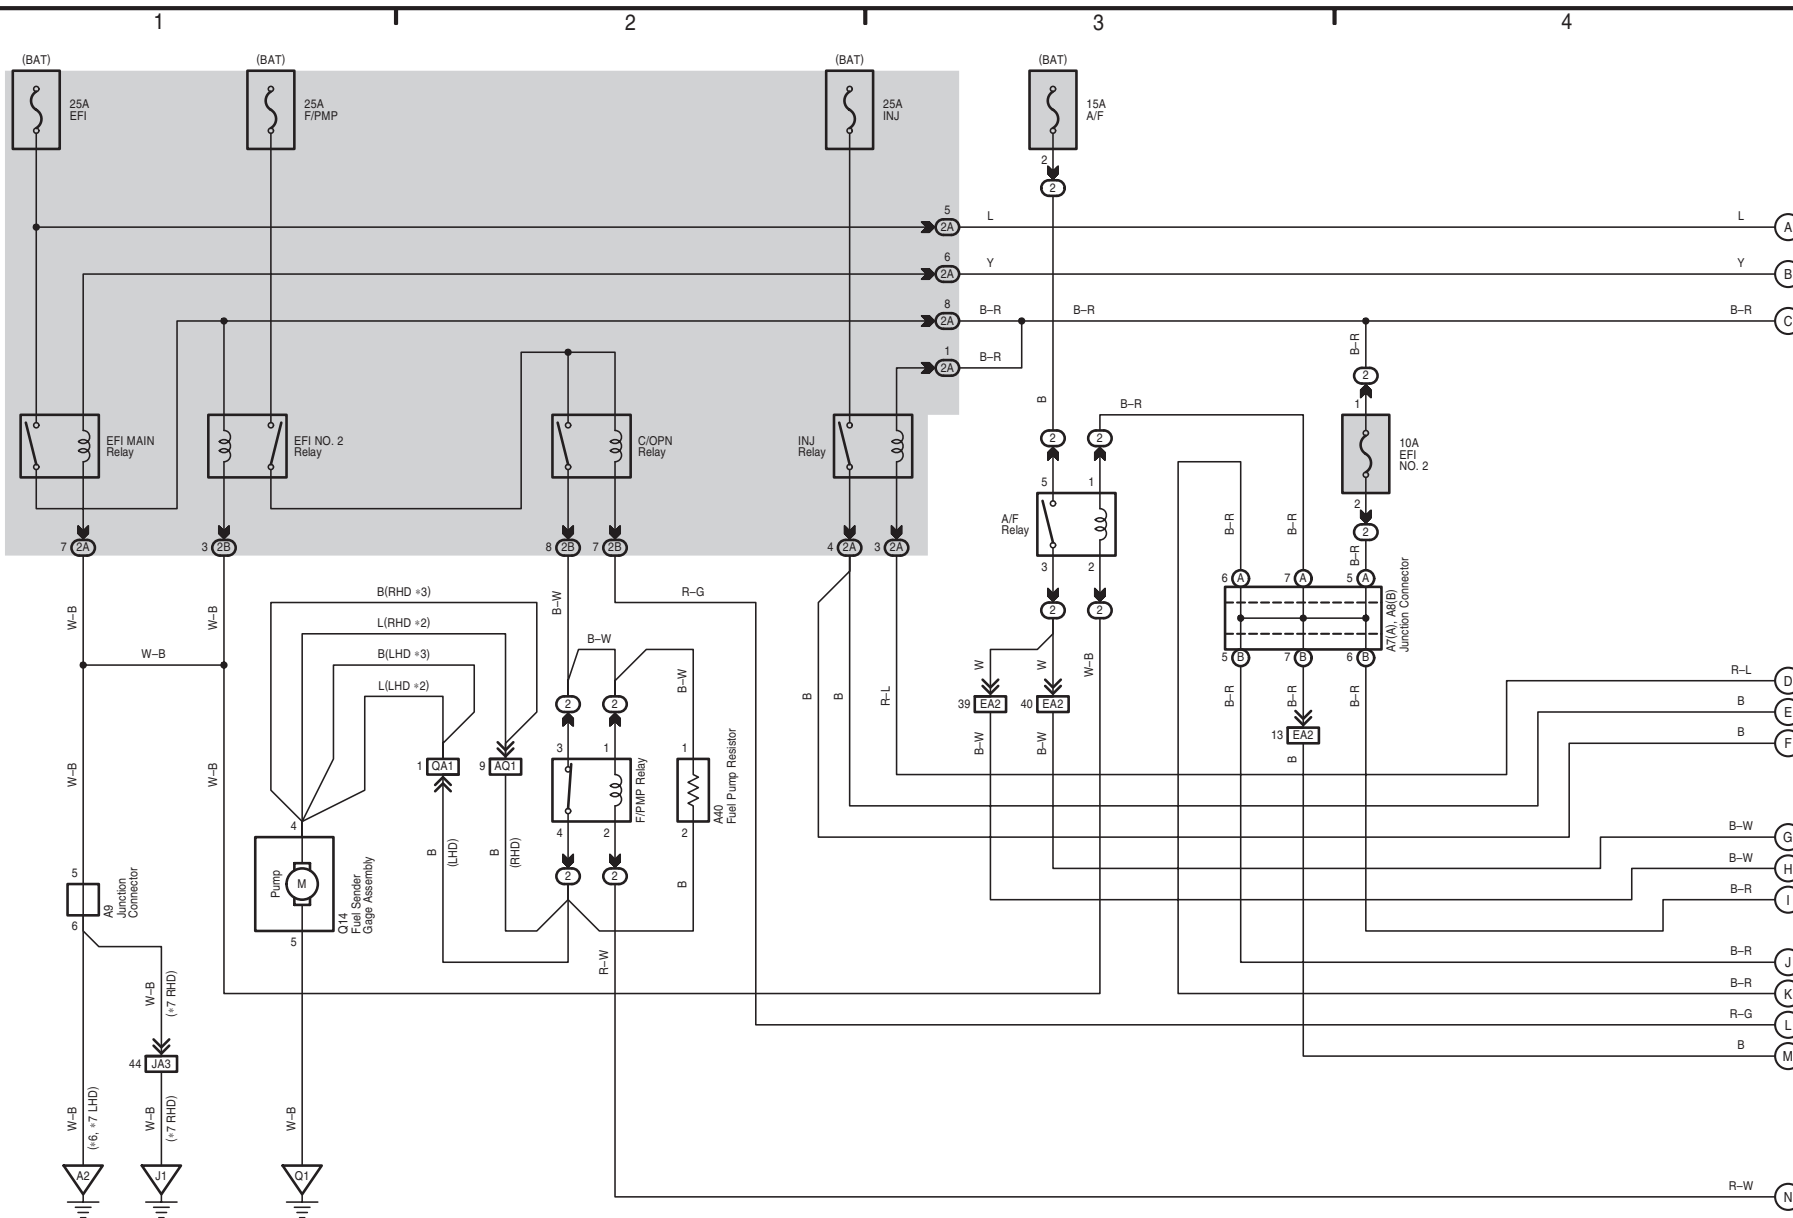


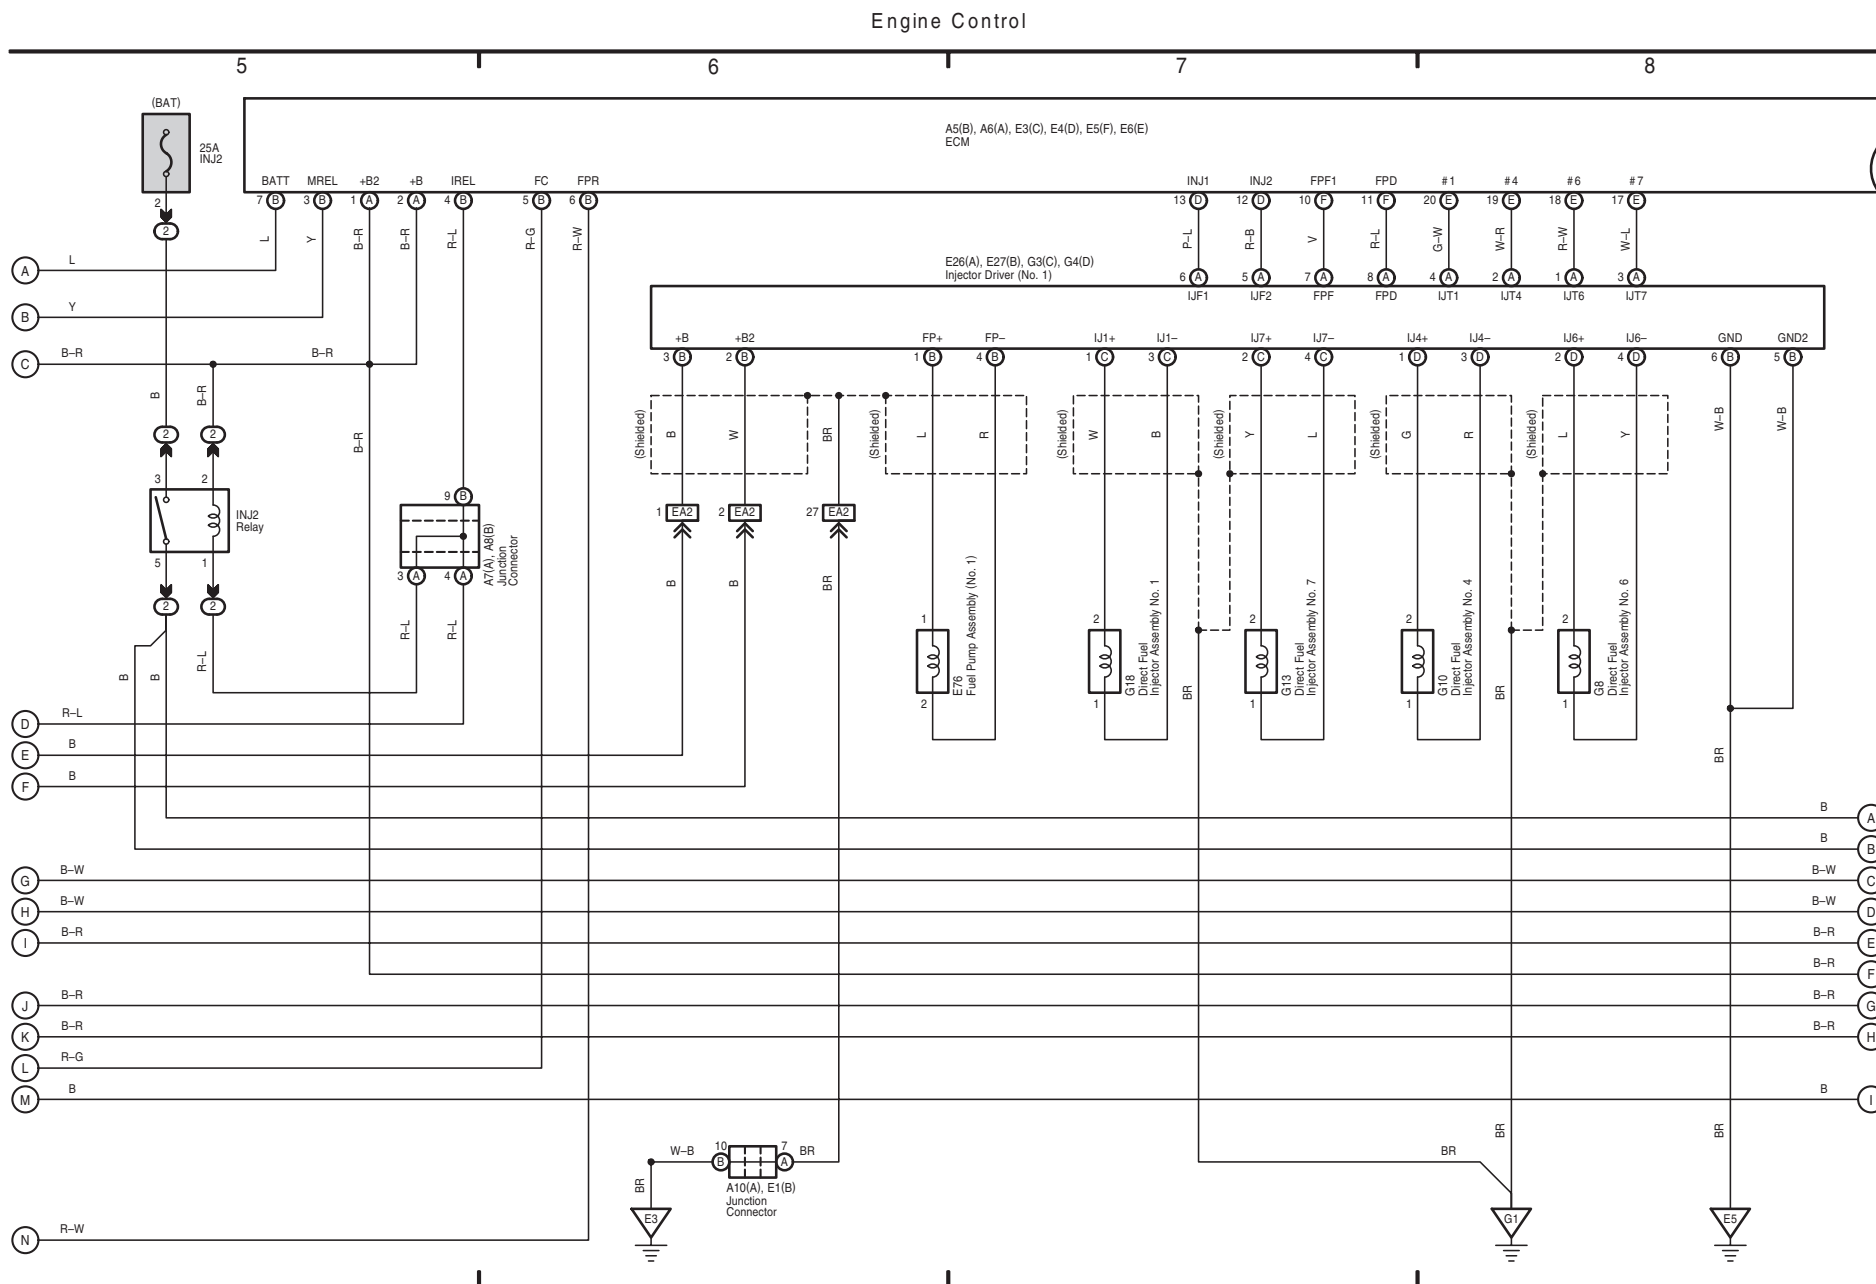


Engine Control

* 6 : Before Aug. 2012 Production
 * 7 : From Aug. 2012 Production

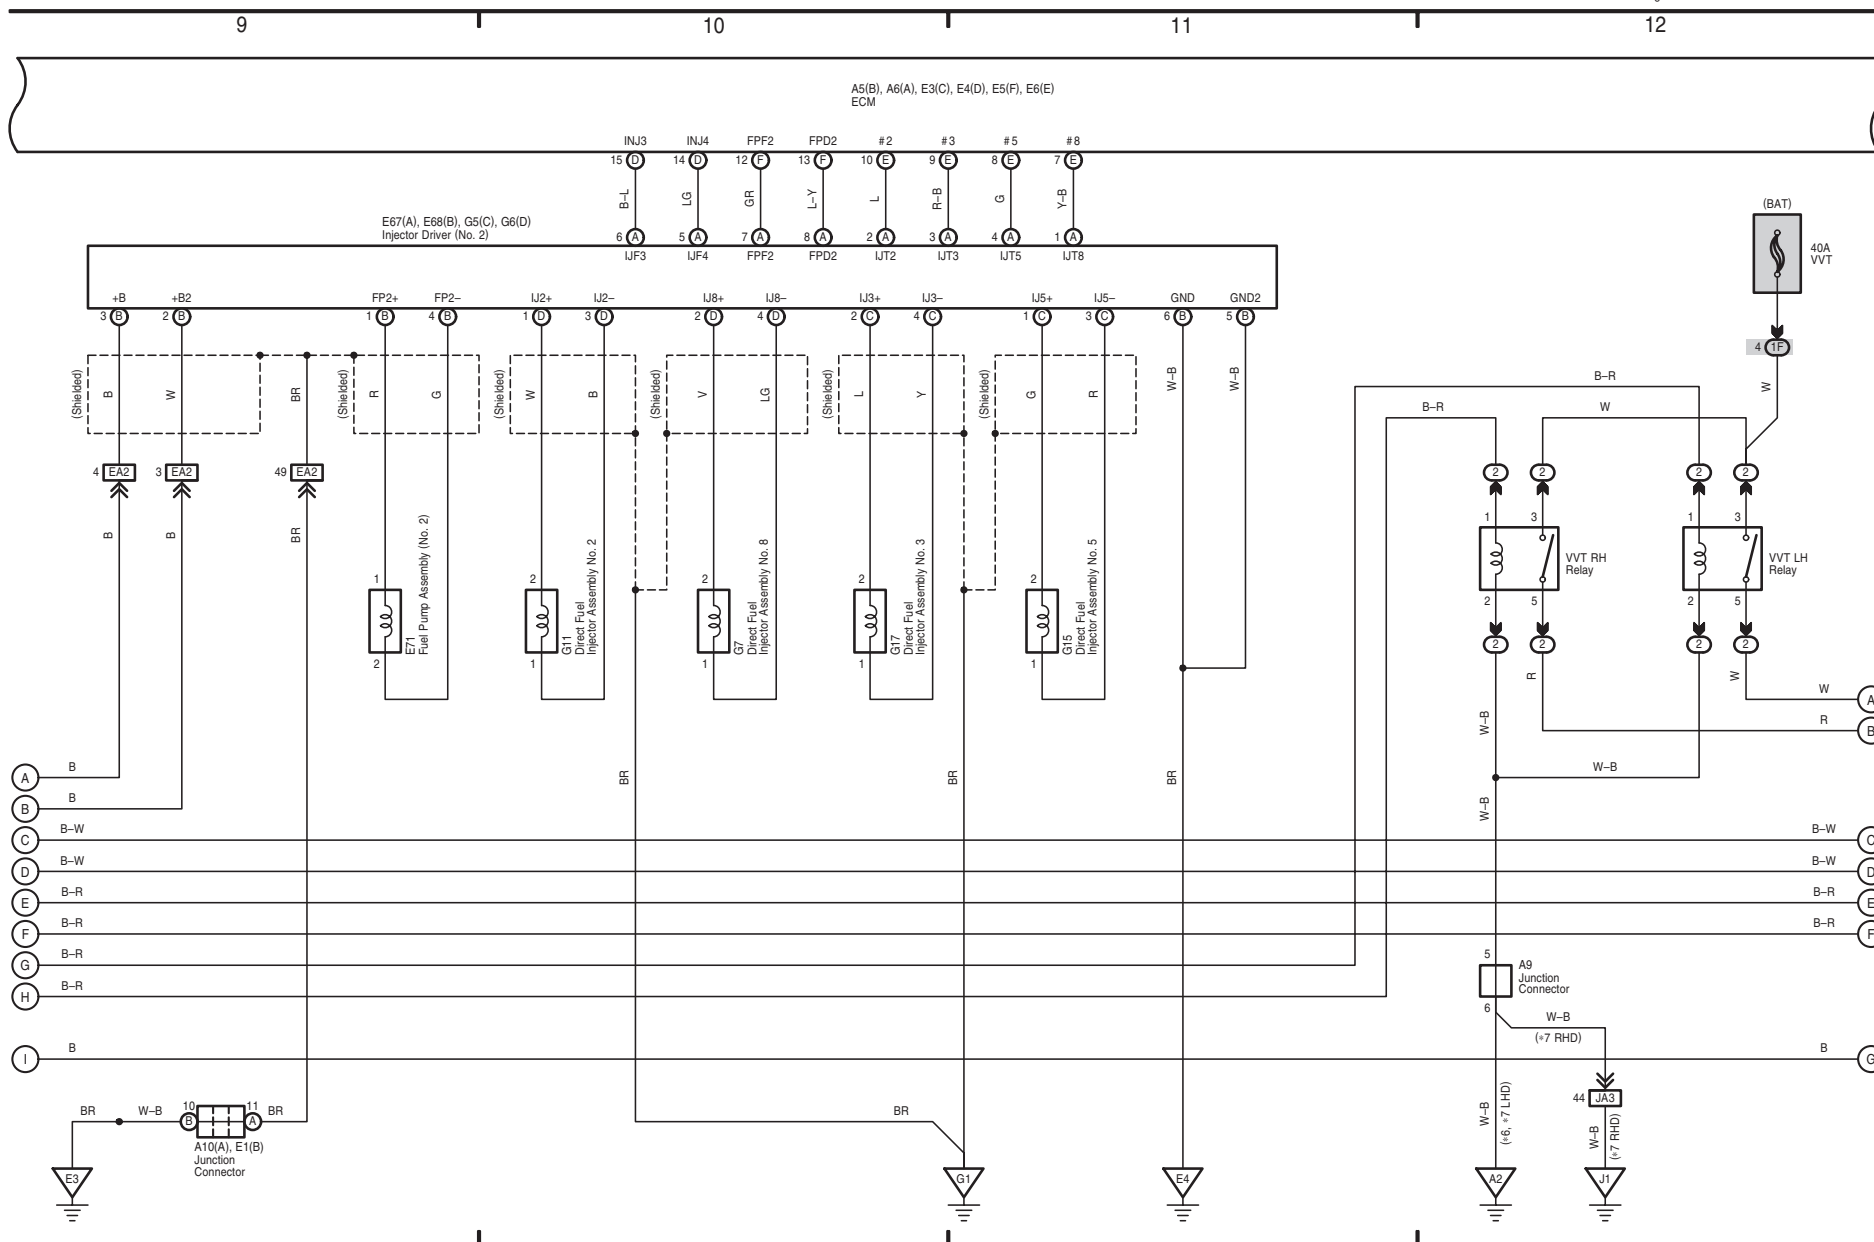


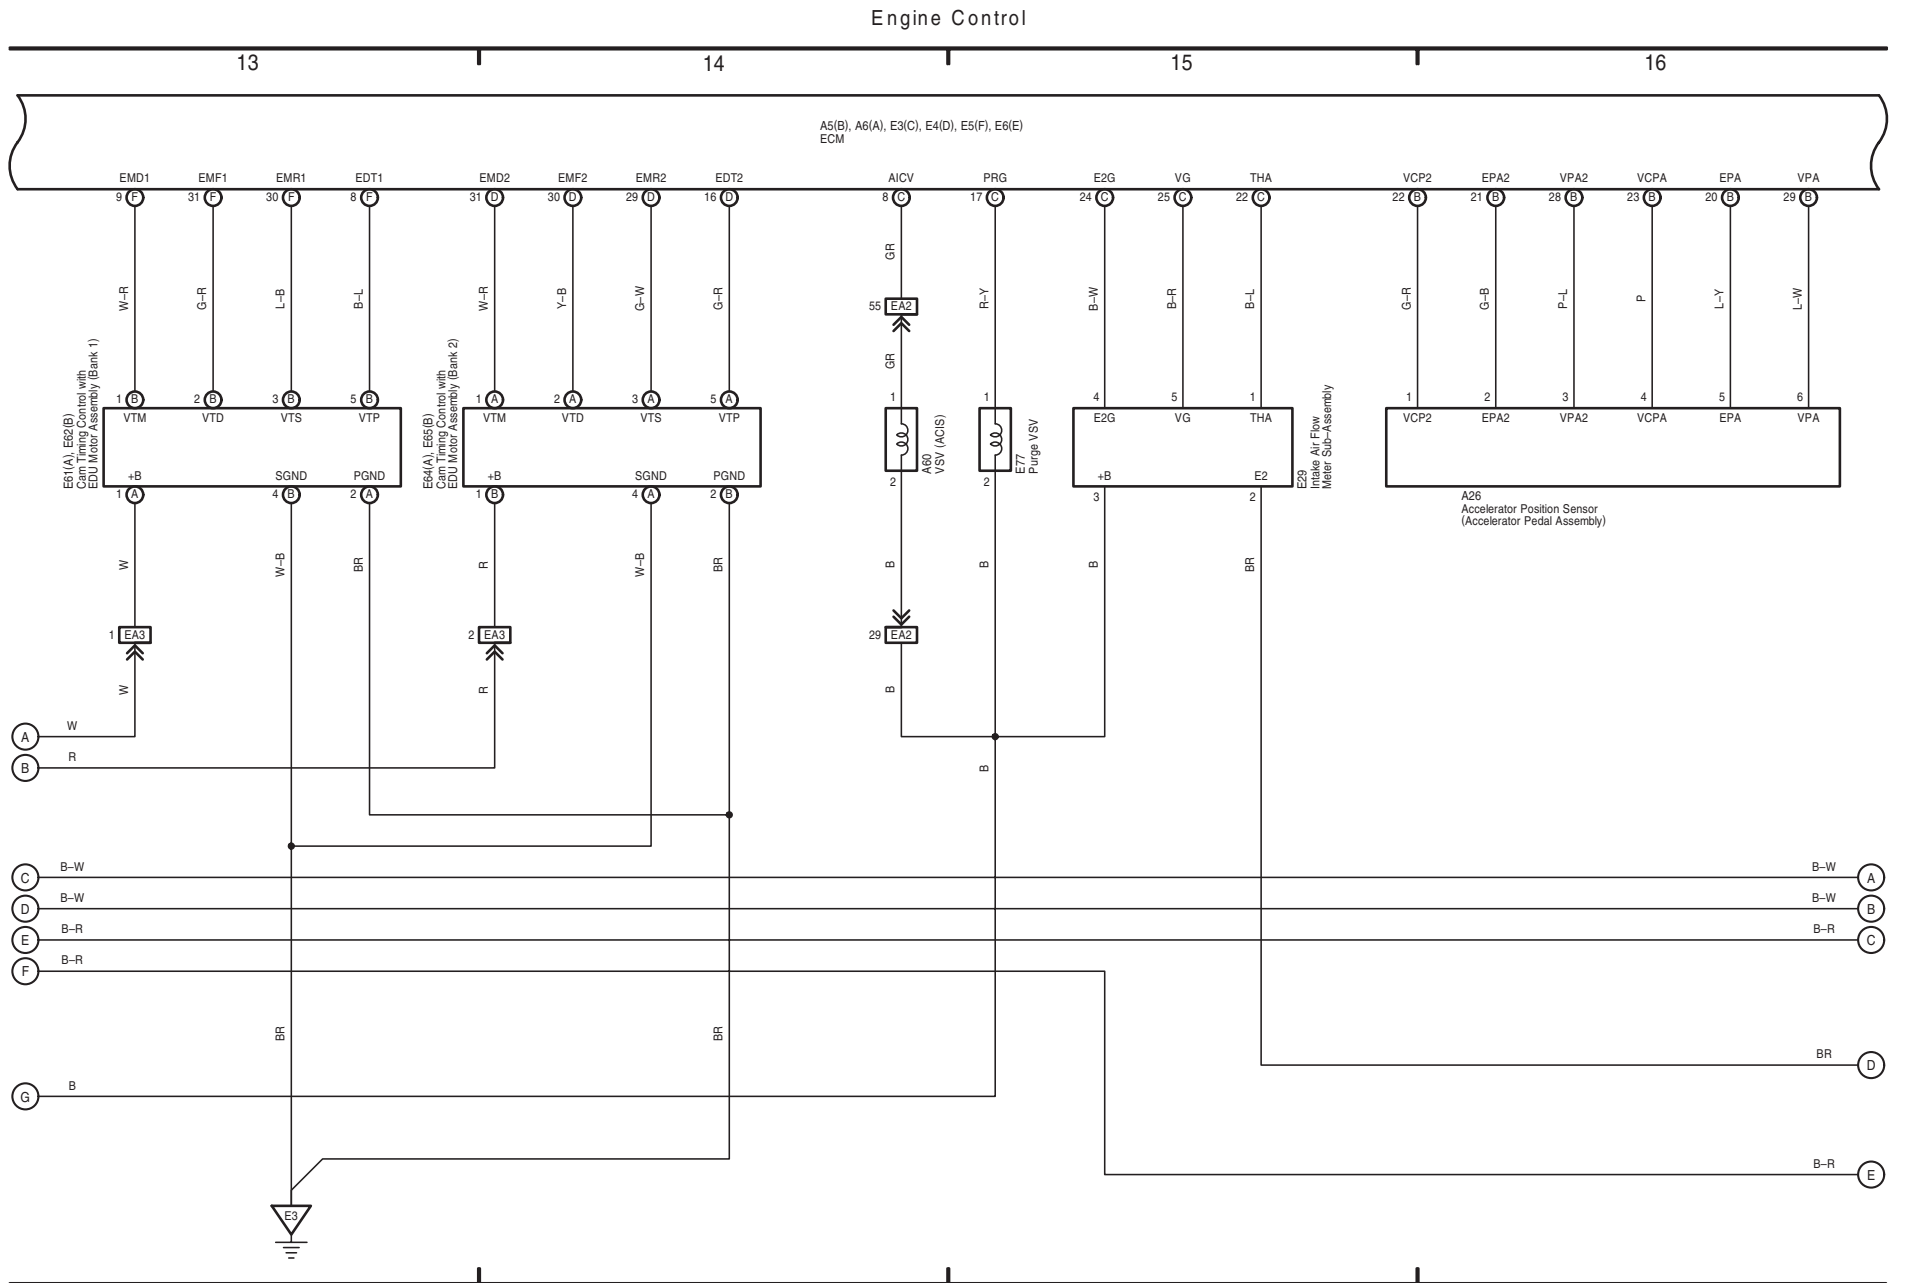

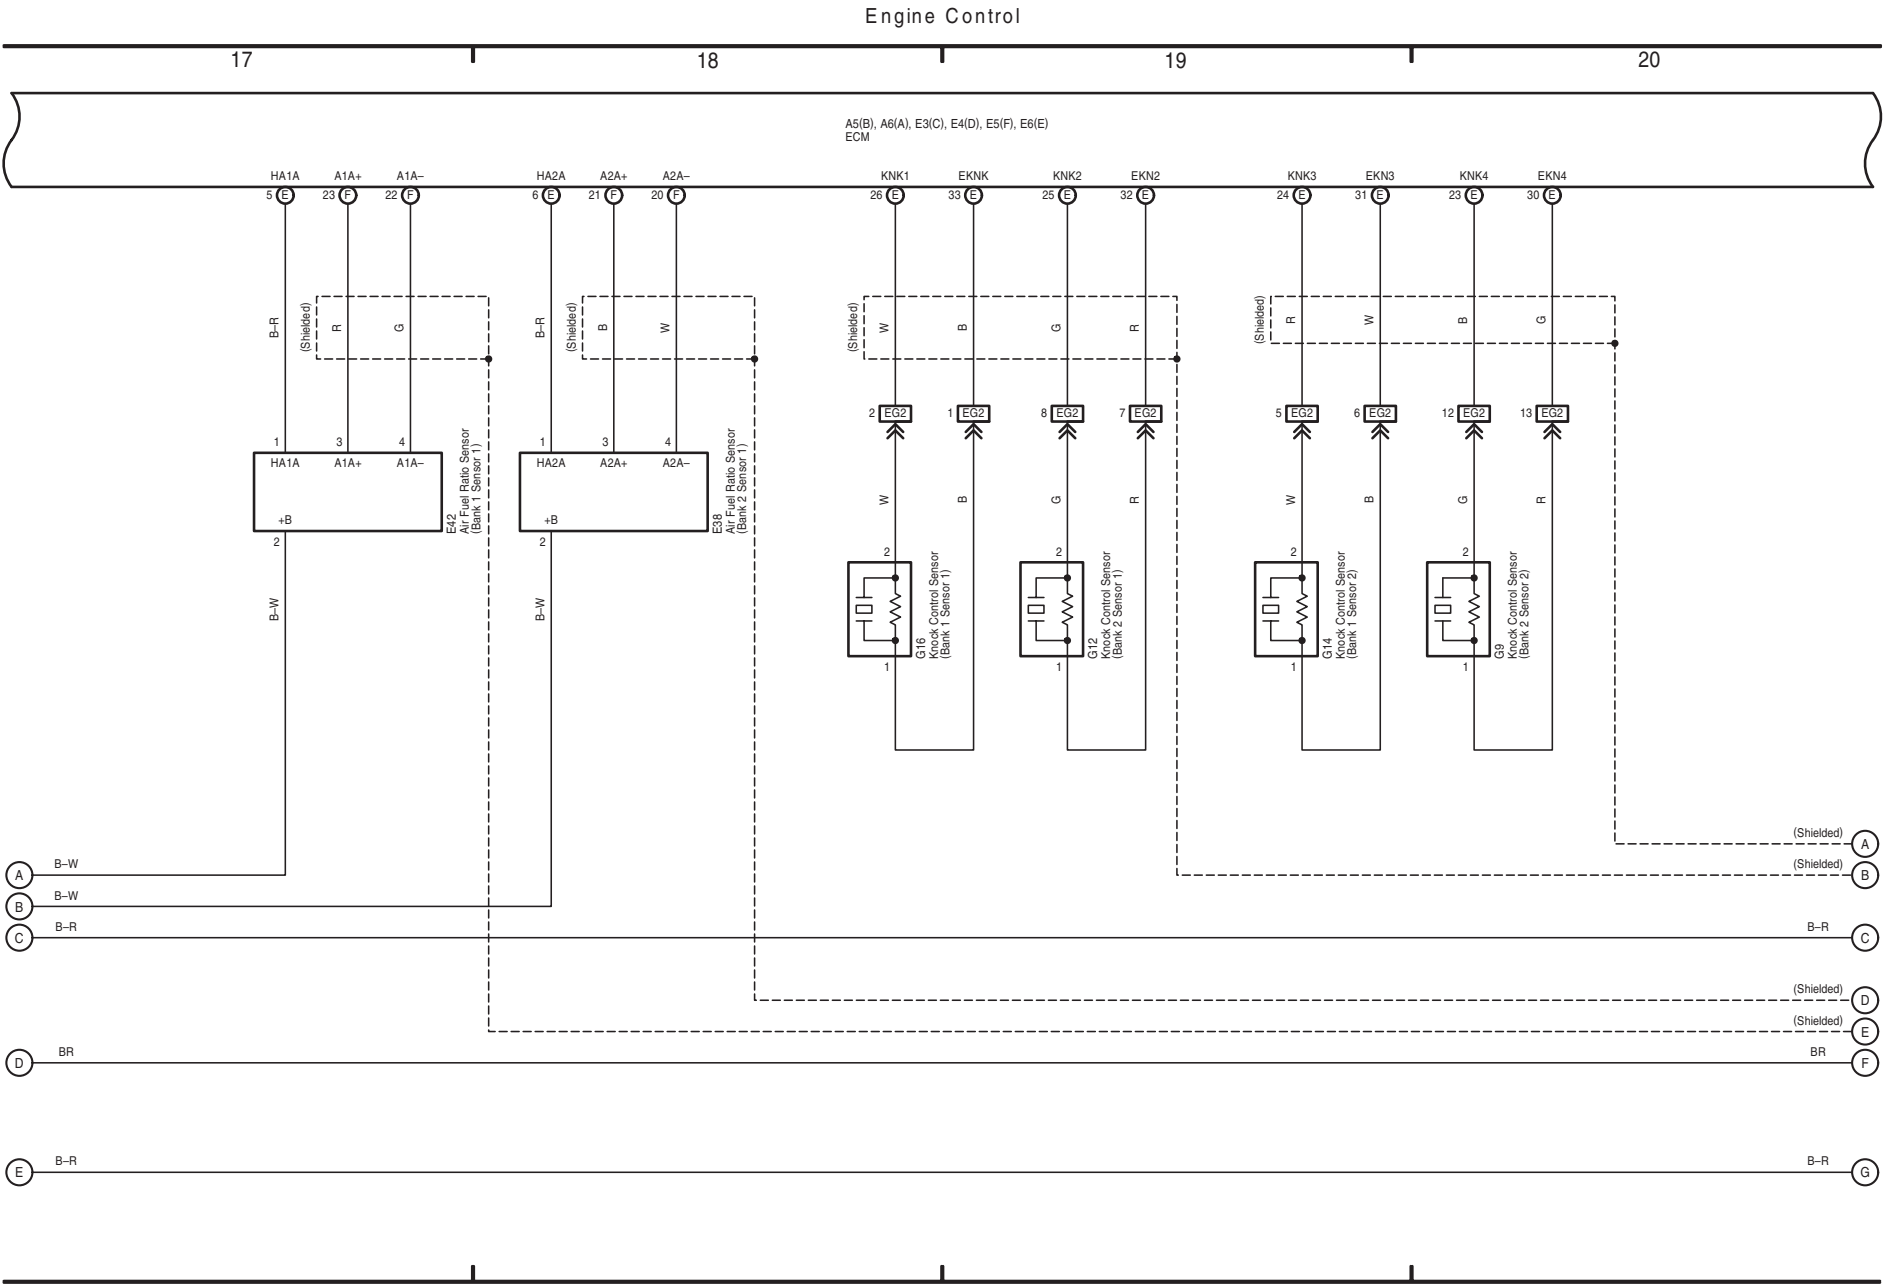


LEXUS IS F (EM08E5E)

Engine Control

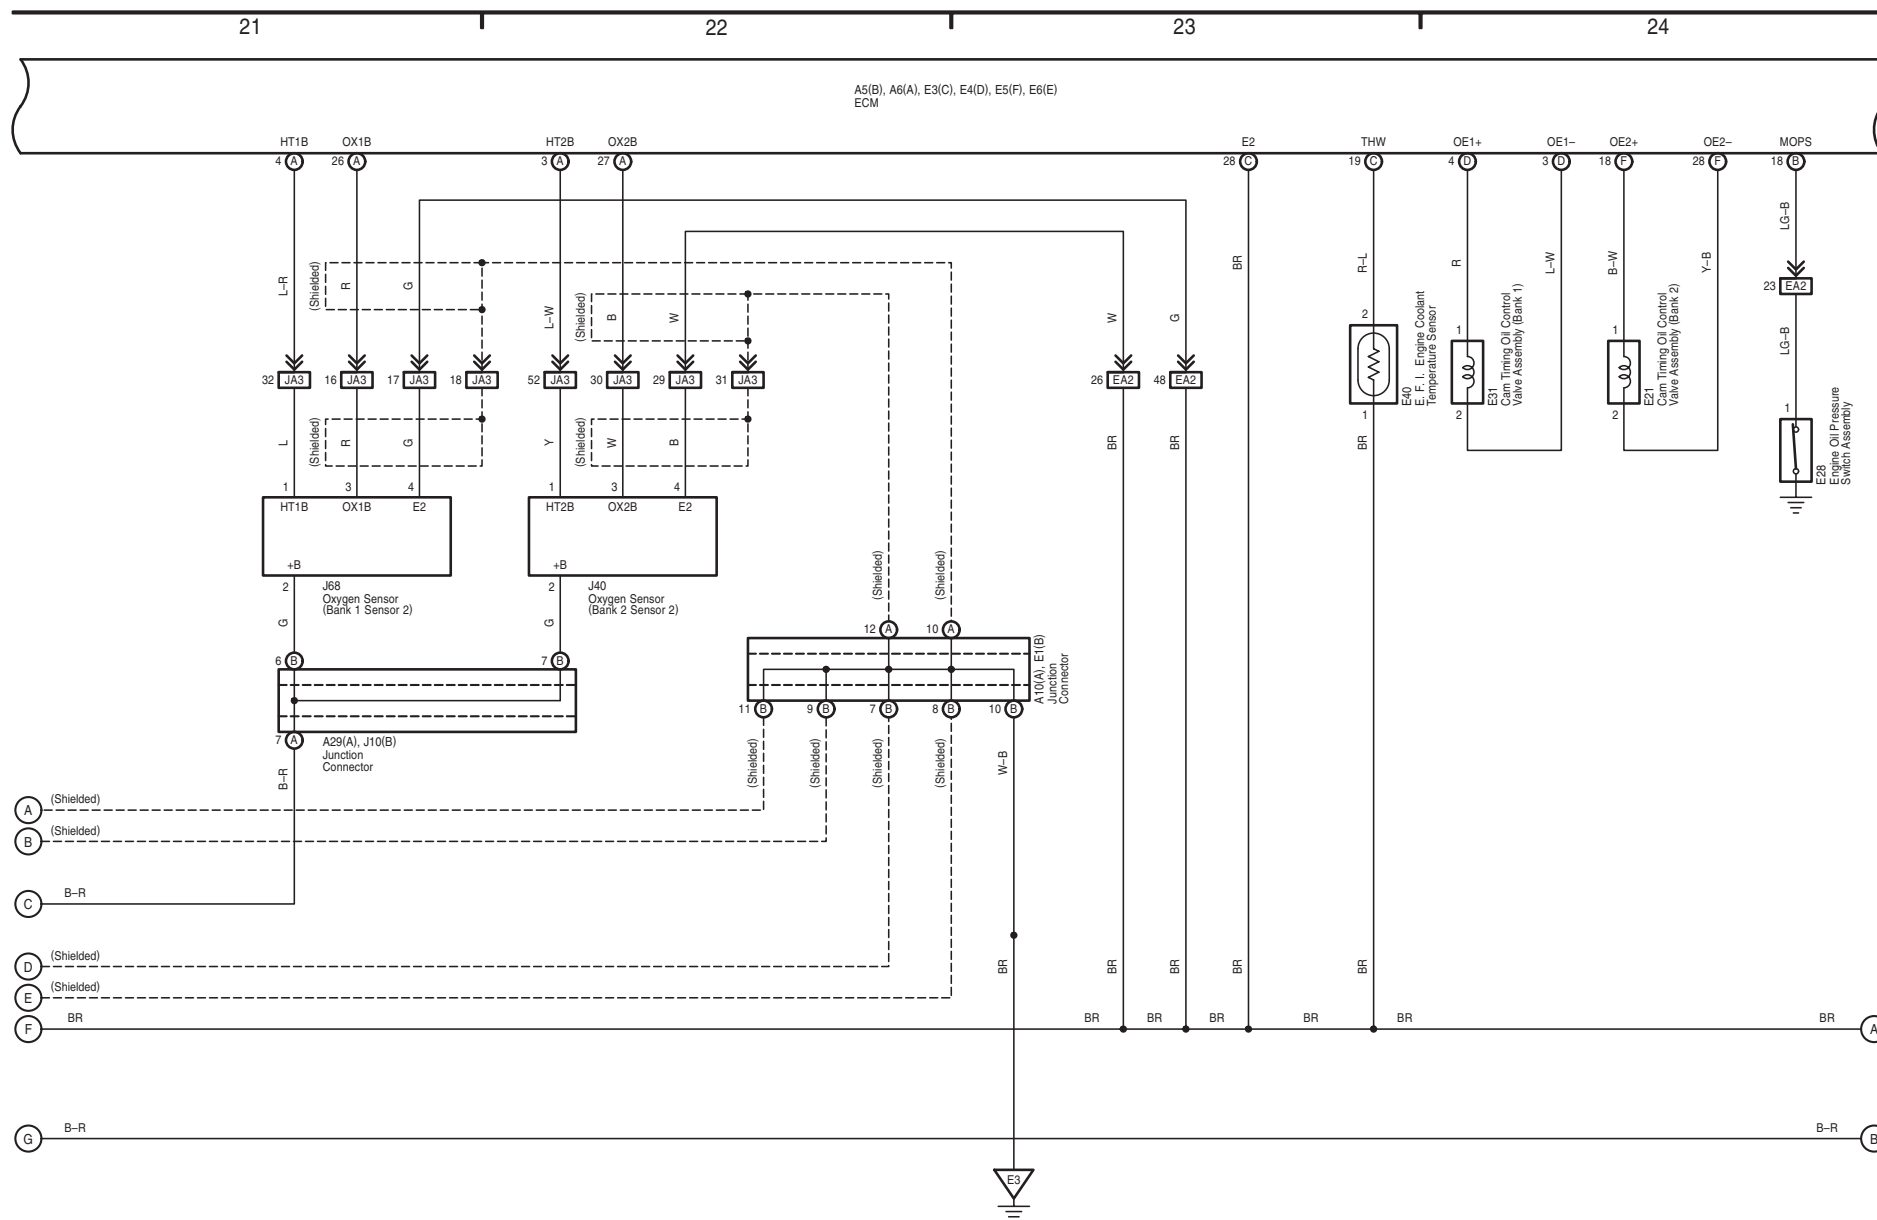



LEXUS IS F (EM08E5E)

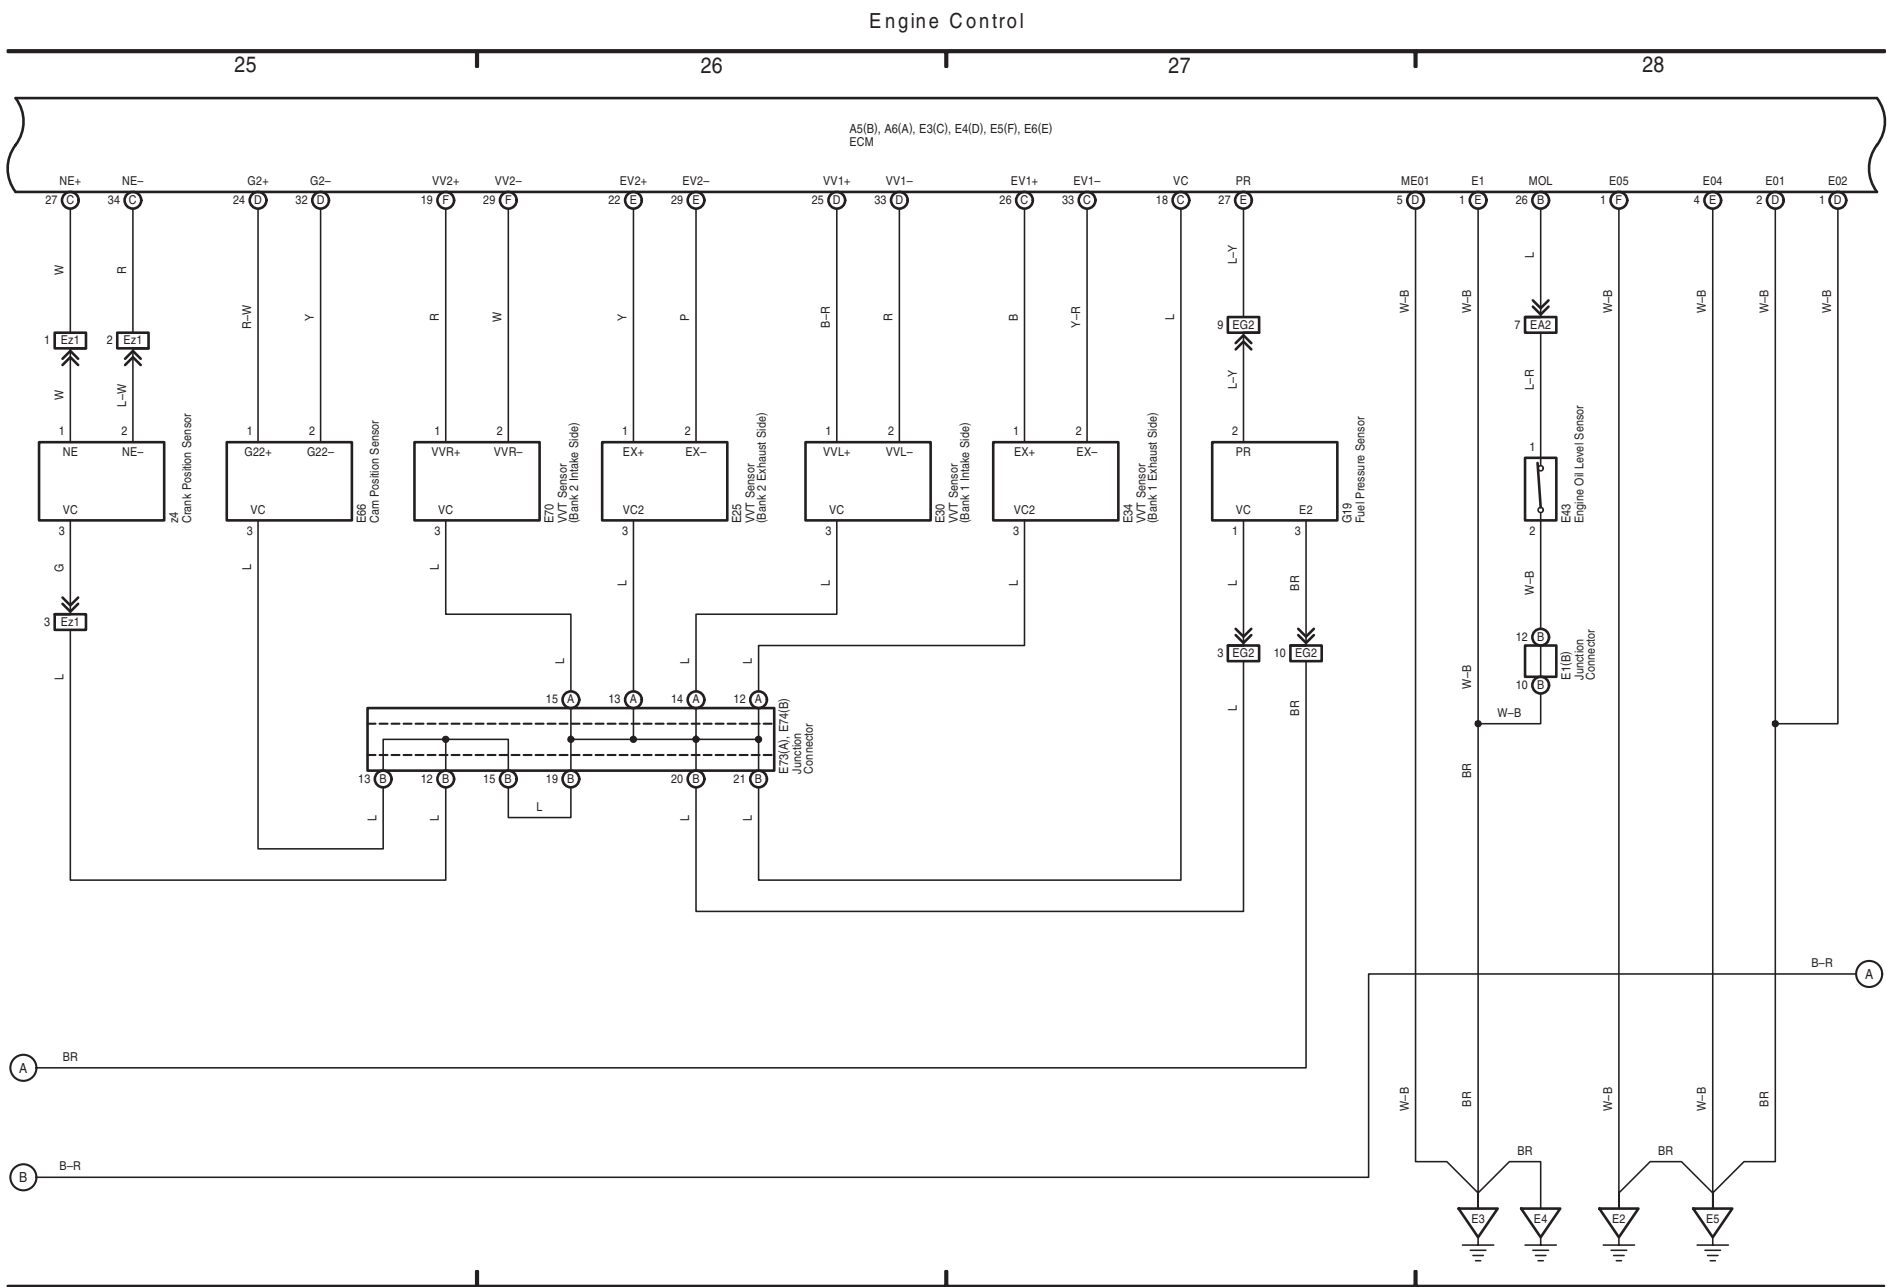

Engine Control

- * 2 : Before Aug. 2008 Production
- * 3 : From Aug. 2008 Production
- * 6 : Before Aug. 2012 Production
- * 7 : From Aug. 2012 Production

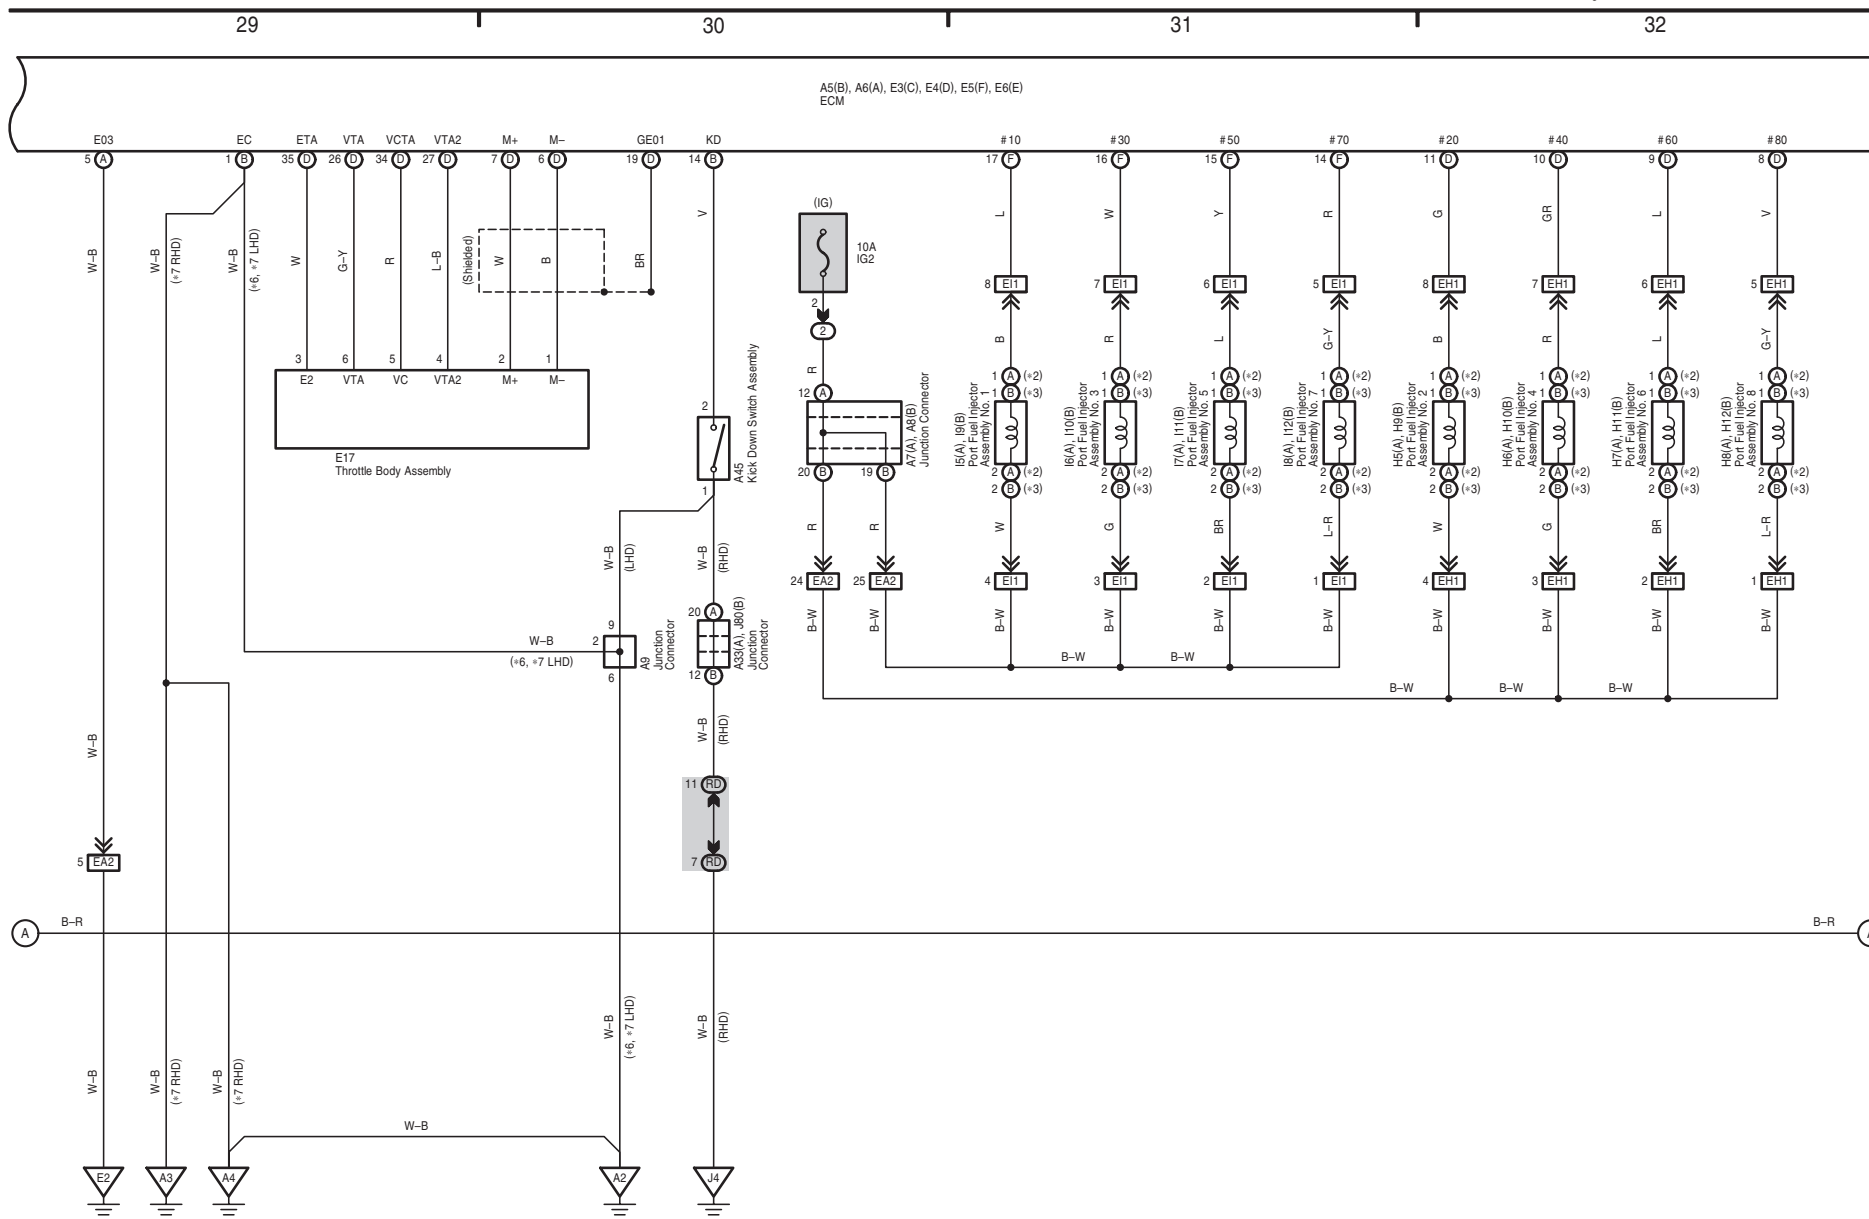

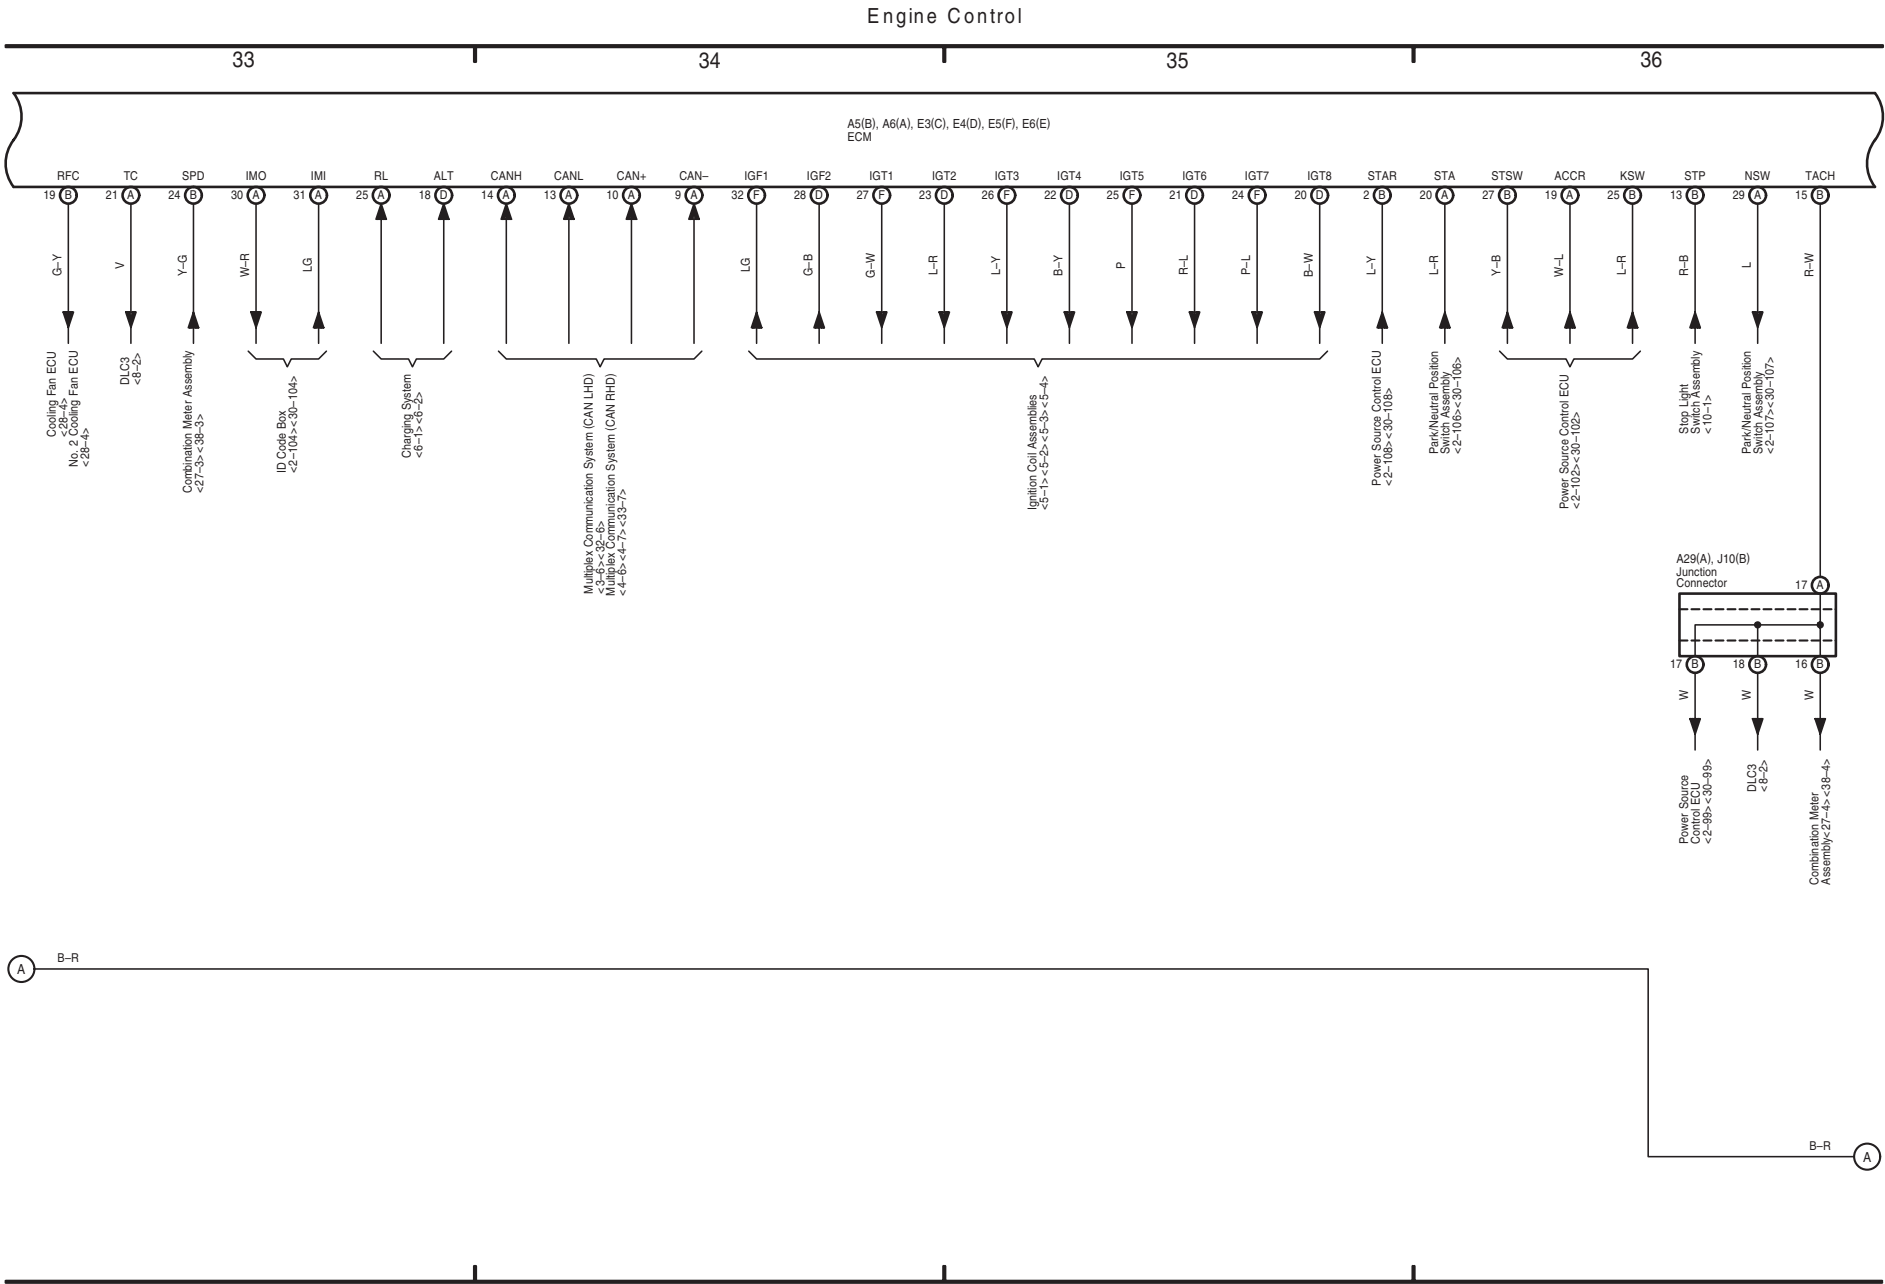


37

38


39

40

- A5(B), A6(A), E3(C), E4(D), E5(F), E6(E)
ECM

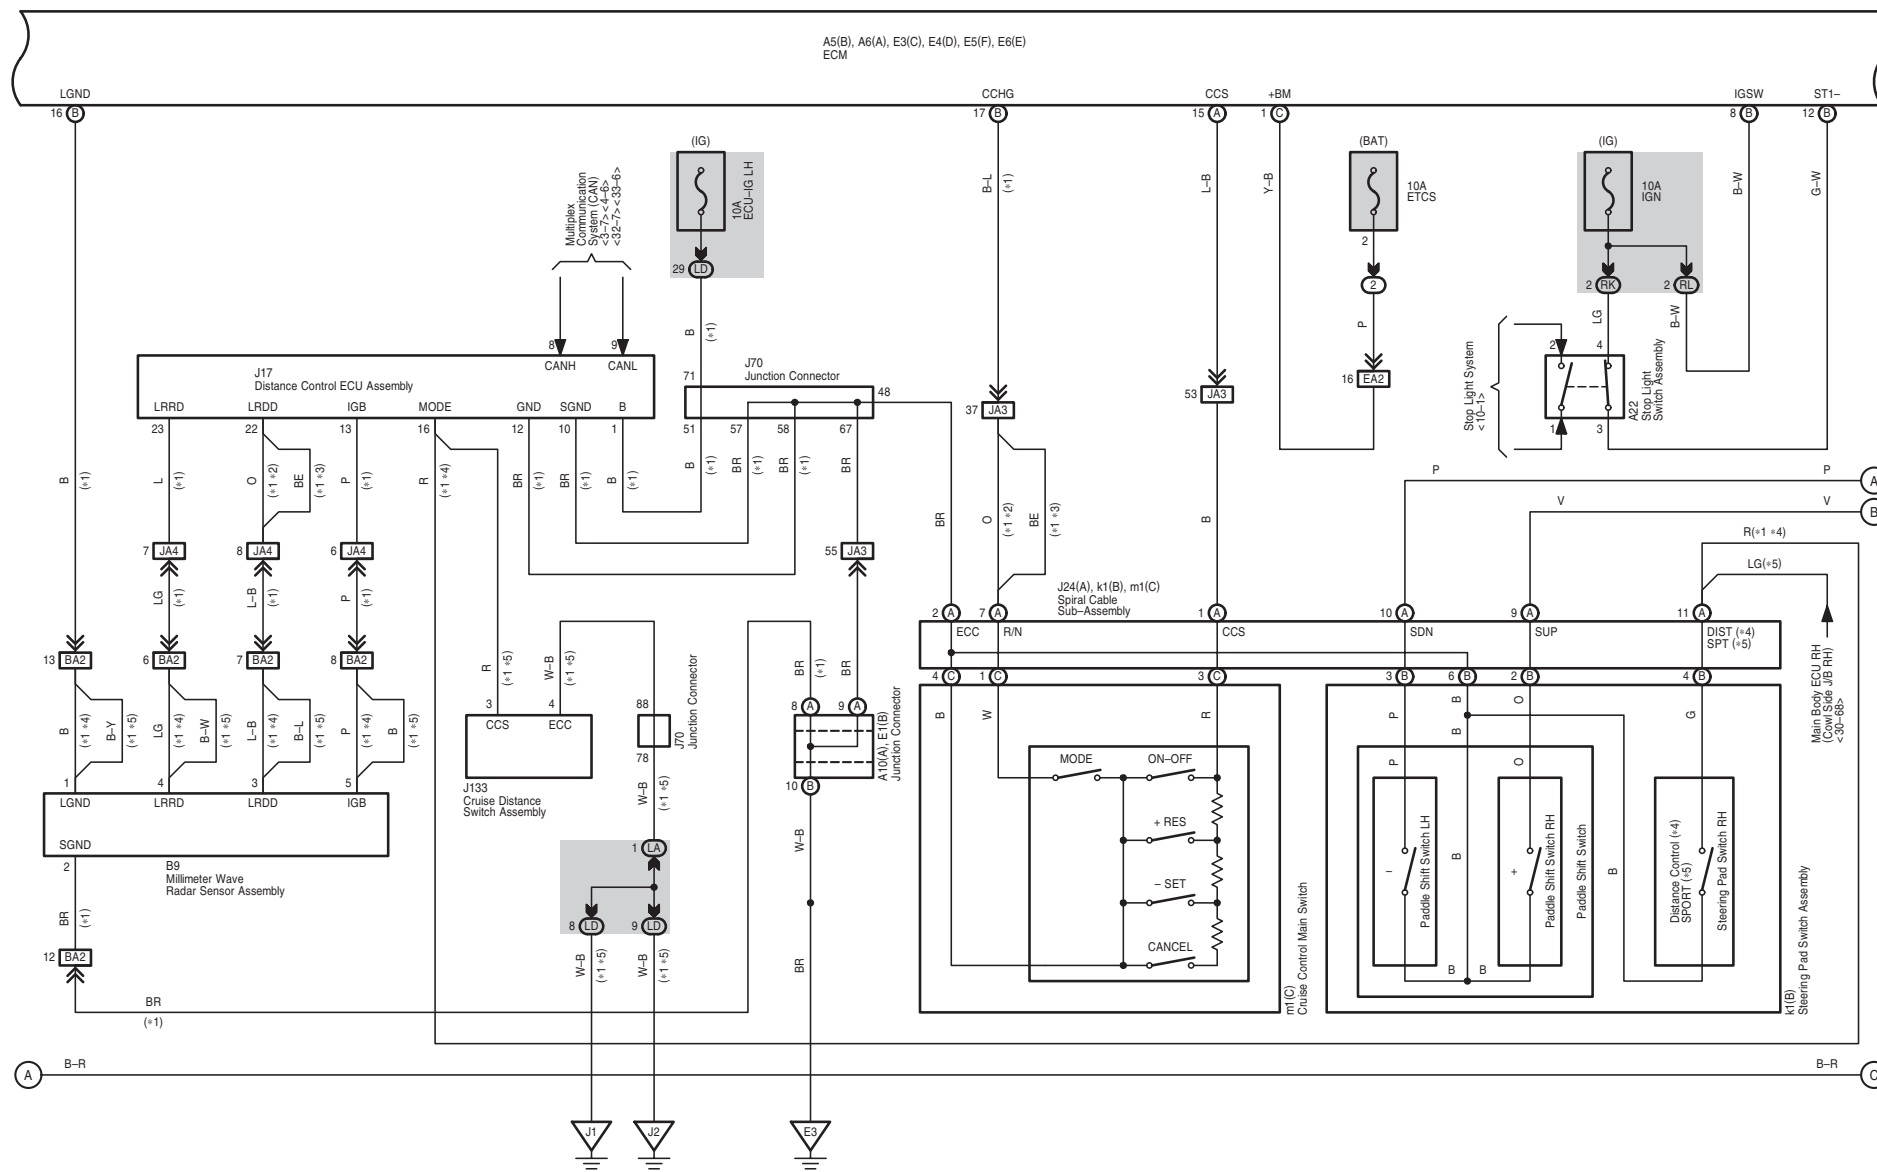

ECT and A/T Indicator

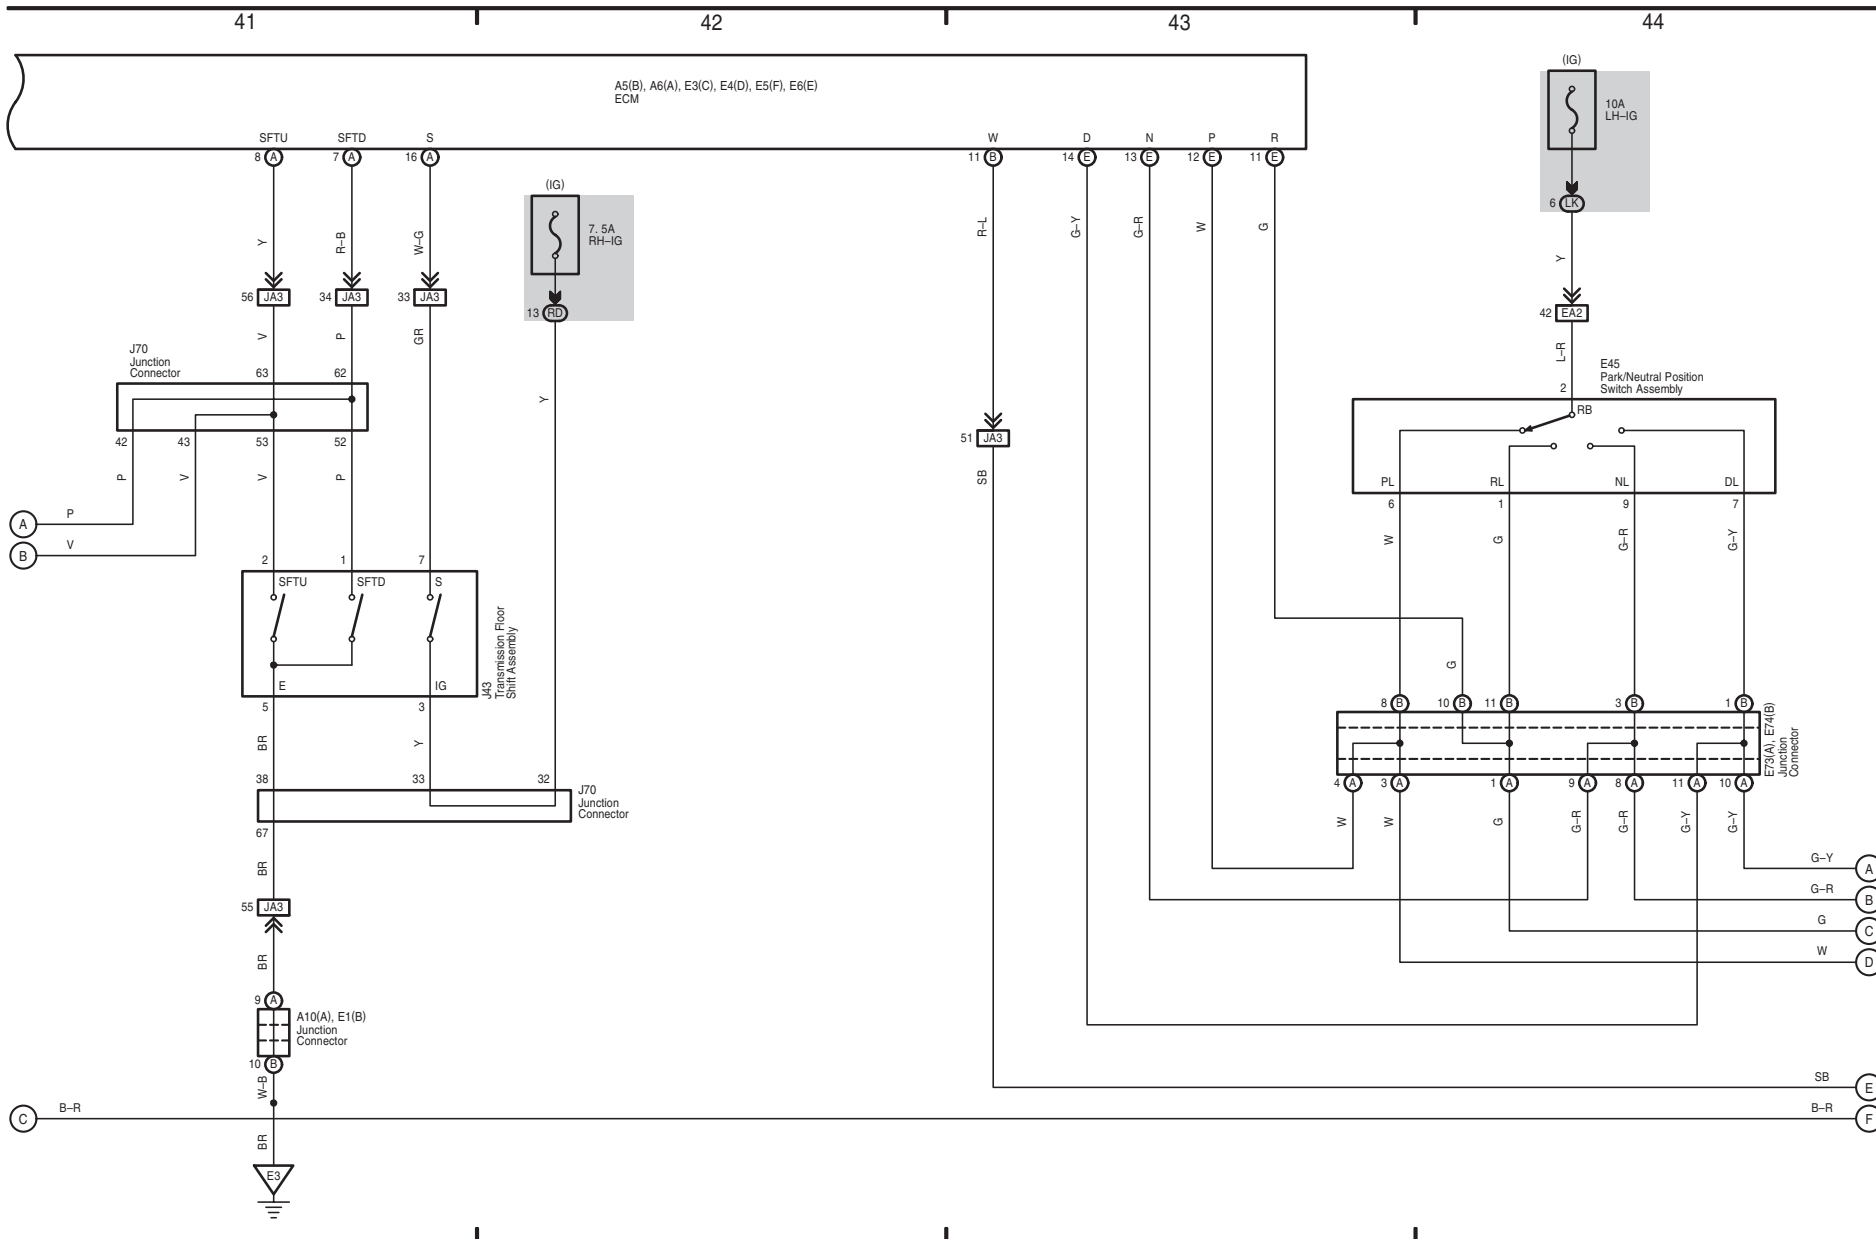

LEXUS IS F (EM08E5E)

ECT and A/T Indicator



7 IS F (Cont' d)

ECT and A/T Indicator

