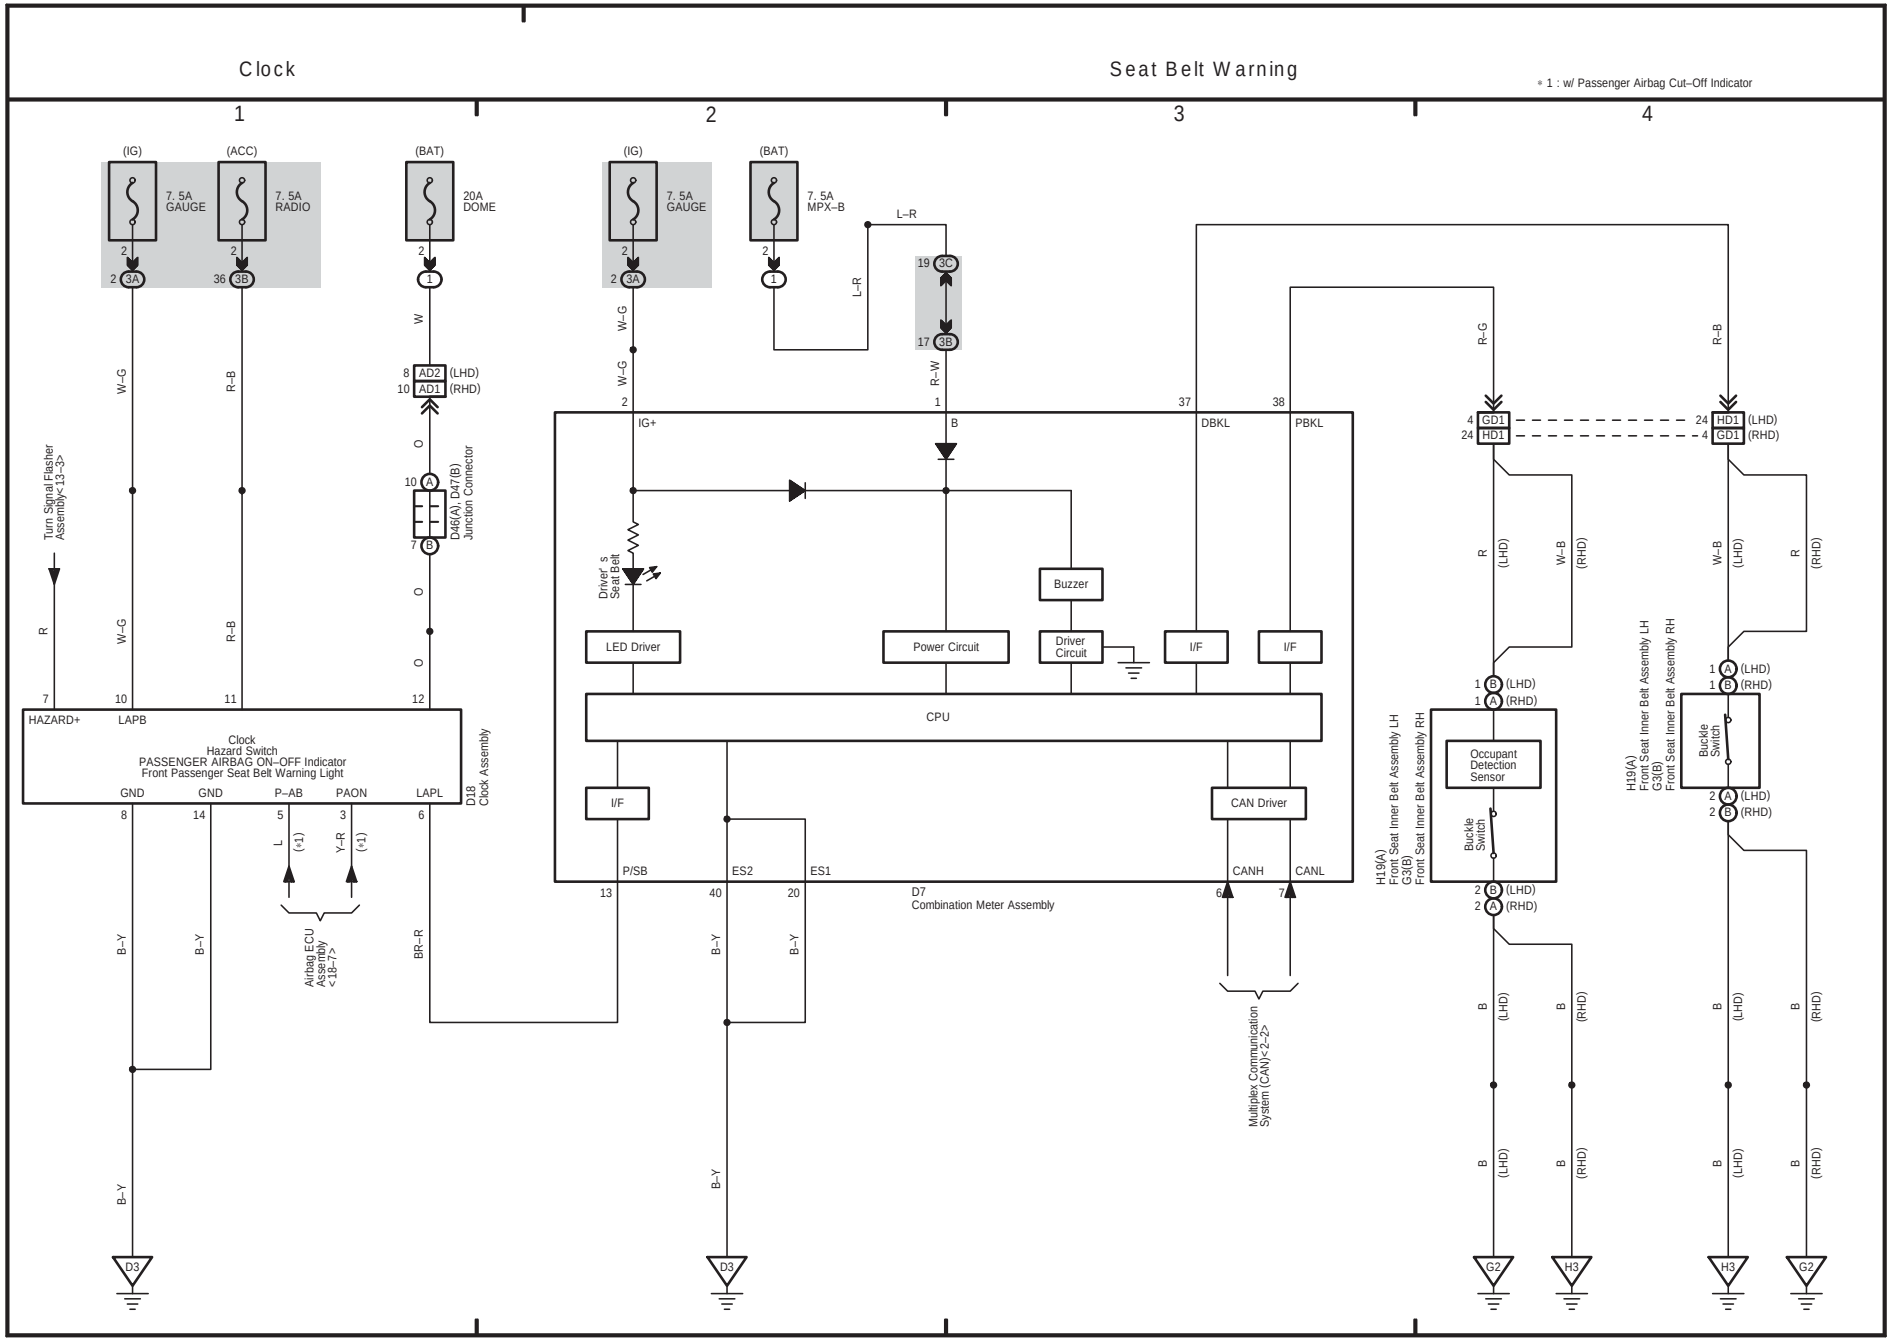
Clock
Seat Belt Warning
* 1 : w/ Passenger Airbag Cut–Off Indicator
1
2
3
4
(IG)
(ACC)
(BAT)
7. 5A GAUGE
7. 5A RADIO
20A DOME
7. 5A MPX–B
Turn Signal Flasher Assembly<13–3>
D46(A), D47(B) Junction Connector
Driver's Seat Belt
LED Driver
Power Circuit
Buzzer
Driver Circuit
I/F
CPU
CAN Driver
HAZARD+
LAPB
GND
P–AB
PAON
LAPL
Clock
Hazard Switch
PASSENGER AIRBAG ON–OFF Indicator
Front Passenger Seat Belt Warning Light
D18 Clock Assembly
Airbag ECU Assembly <18–7>
IG+
B
DBKL
PBKL
P/SB
ES2
ES1
CANH
CANL
D7
Combination Meter Assembly
Multiplex Communication System (CAN)<2–2>
H19(A) Front Seat Inner Belt Assembly LH G3(B) Front Seat Inner Belt Assembly RH
Occupant Detection Sensor
Buckle Switch
(LHD)
(RHD)
D3
G2
H3