


FRONT FENDER APRON (ASSY)

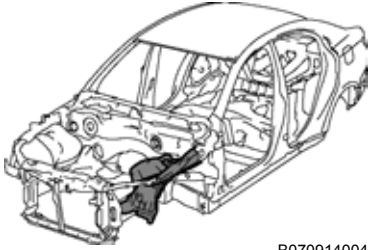

B0709140047

With the radiator support and front body pillar lower gusset removed.

Symbol meaning


 : Remove Weld Points

REMOVAL



 : Cut with Disc Sander etc.

INSTALLATION



O I M : MIG Plug Weld : Tack Weld

 : Tack Weld

REMOVAL-INSTALLATION

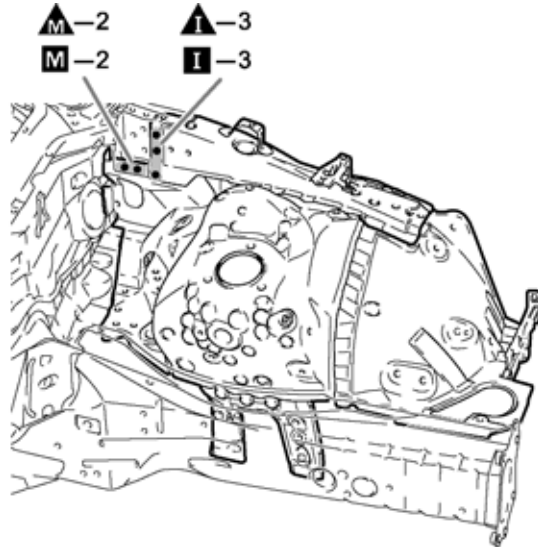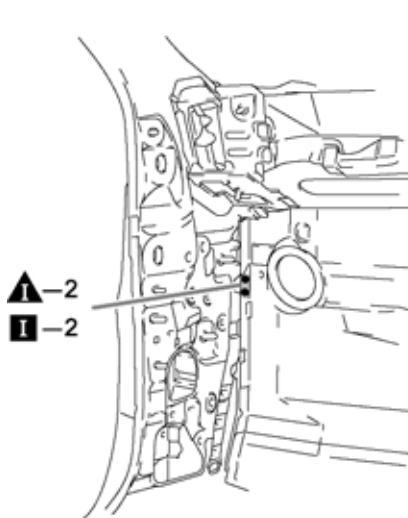

B0709140048

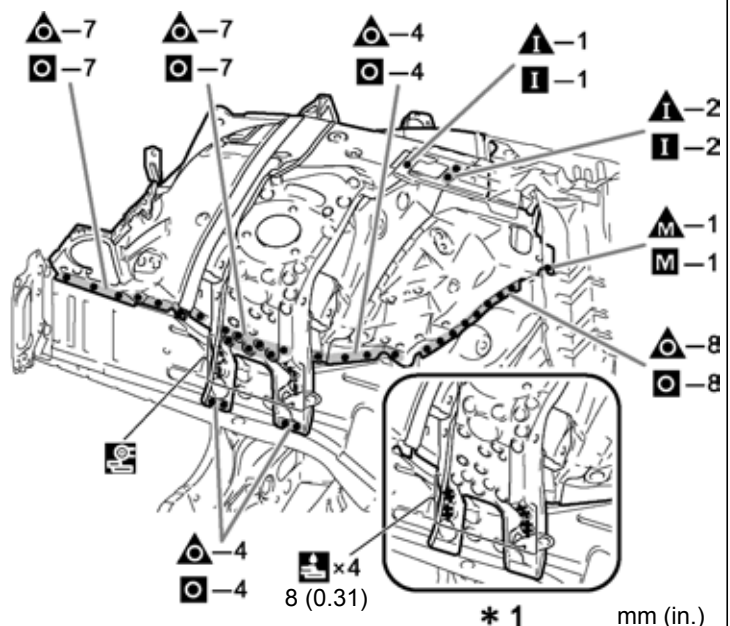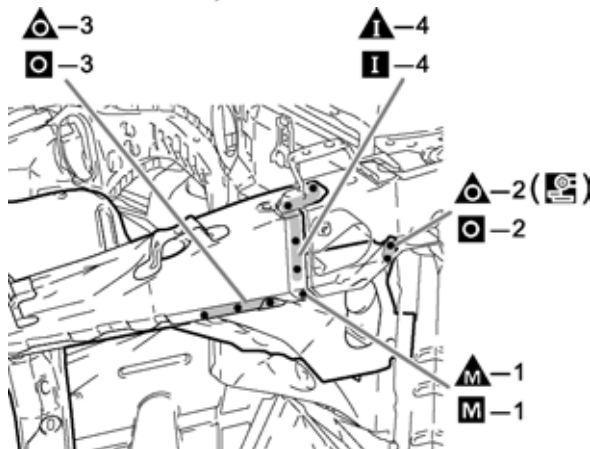

mm (in.)

B0709140050

CAUTION

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

INSTALLATION POINT

- 1 *1 shows installation work.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 Inspect the fitting related around the new parts before welding. This affects the appearance of the finish.
- 4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.