
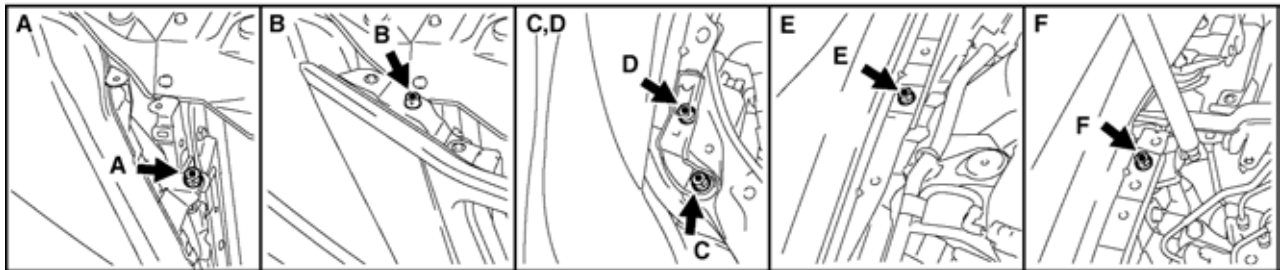


REFERENCE VALUE ENGINE COMPARTMENT

(Three-Dimensional Distance)

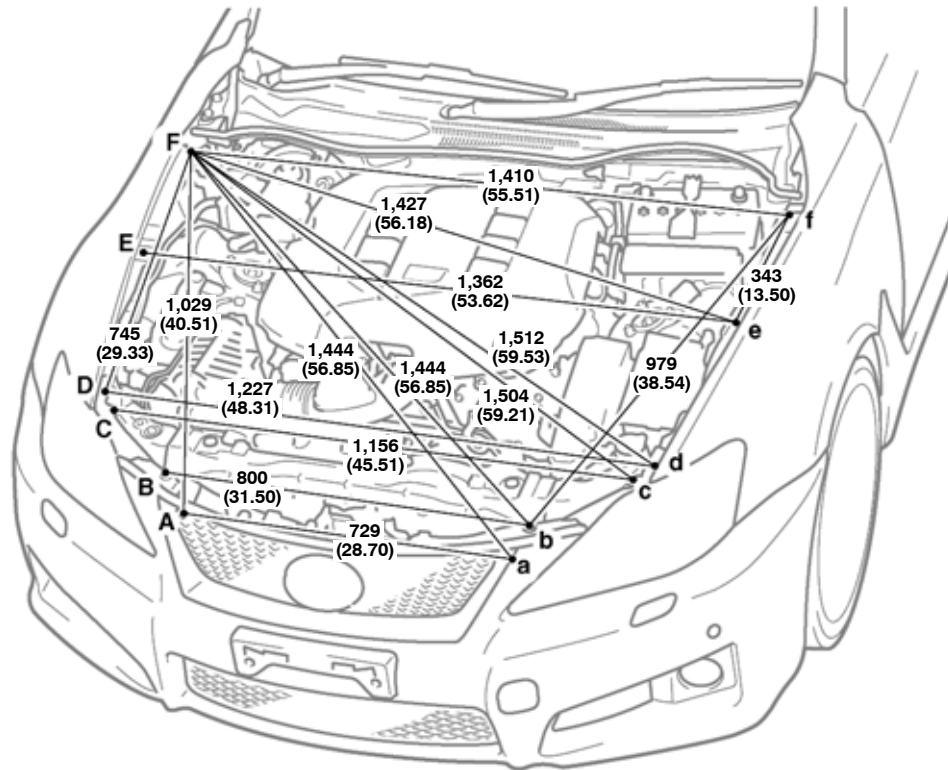

HINT:


- 1) For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).
- 2) These values are actual measurements made on model. Use these reference values.
- 3) Measure points with the Cool air intake duct seal, Front fender upper protector, Engine room side cover and Front bumper cover removed.

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Headlight installation bolt	—	D, d	Front fender installation bolt	—
B, b	Front bumper cover installation bolt	—	E, e	Front fender installation bolt	—
C, c	Headlight installation bolt	—	F, f	Front fender installation bolt	—


UNDER BODY

(Three-Dimensional Distance)

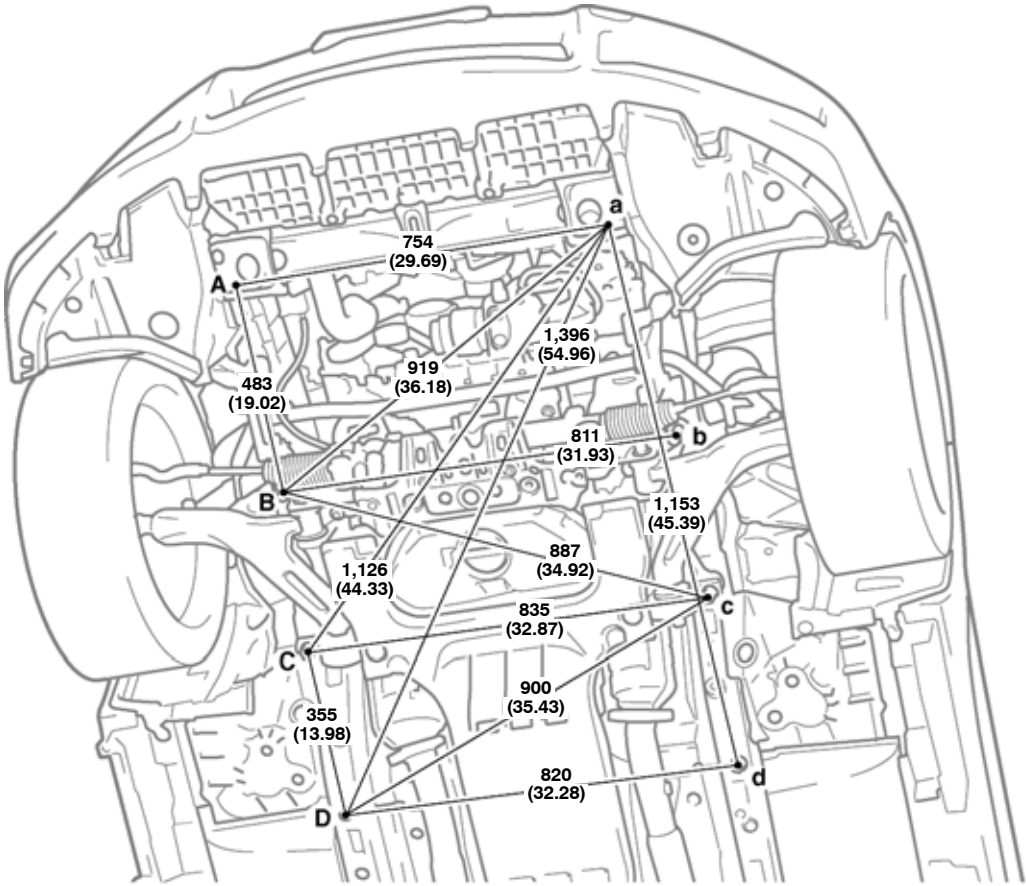

Vehicle Dimensions

B - C or b - c
331 (13.03)

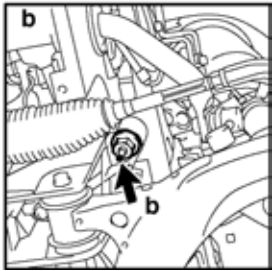

HINT:

- 1) For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).
- 2) These values are actual measurements made on model. Use these reference values.
- 3) Measure points with the Engine under cover removed.





mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember No. 1 reinforcement standard hole	ø10 (0.39)	C, c	Front suspension member installation bolt	—
B, b	Front suspension member installation bolt	—	D, d	Front side member standard hole	ø25 (0.98)


UNDER BODY

(Two-Dimensional Distance)


Front suspension support

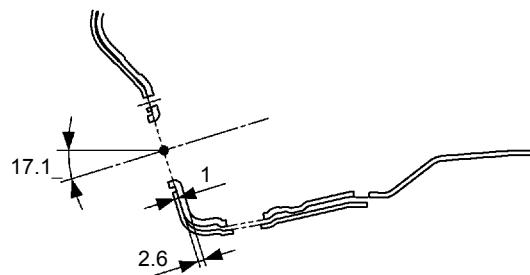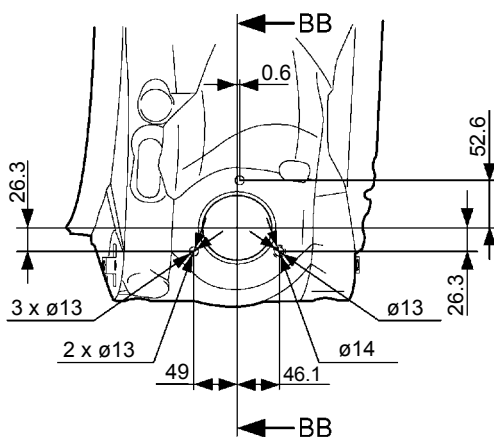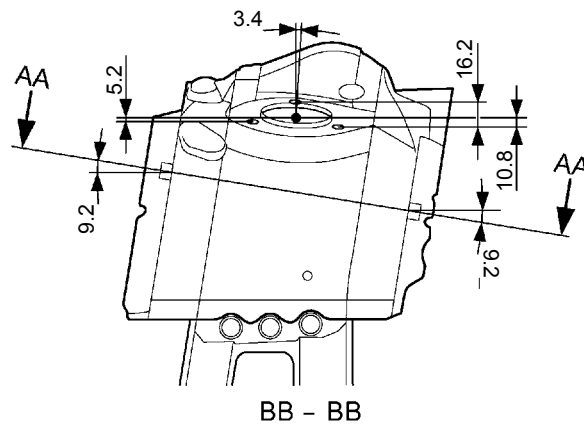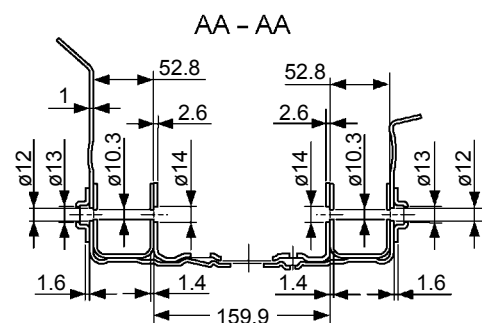


Rear suspension support

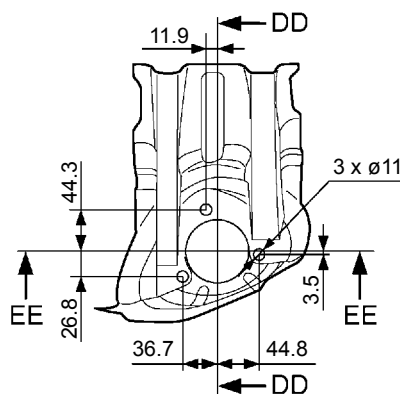



DD - DD

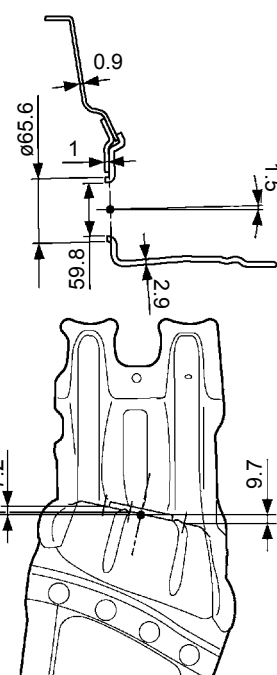

EE - EE

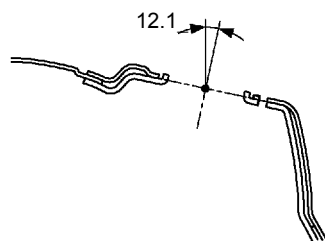

Front bumper reinforcement

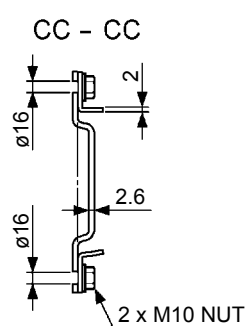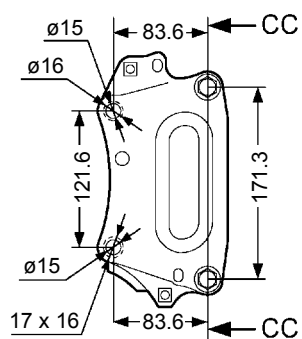

Unit: mm