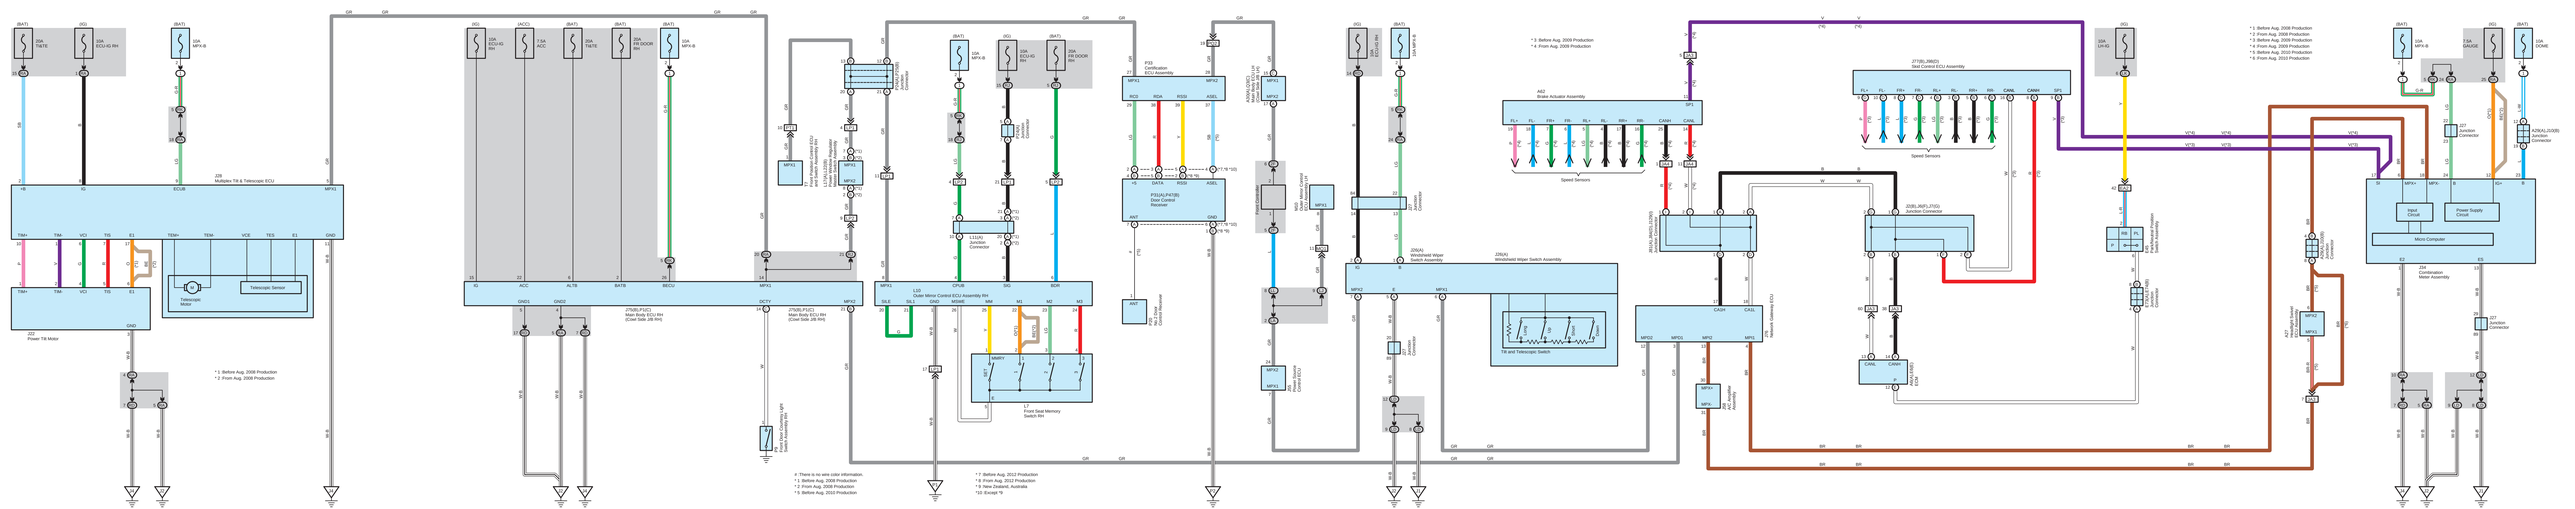
(BAT) 10A TAILE
(IG) 10A ECU-IG RH
(BAT) 10A MPX-B
(IG) 10A ECU-IG RH
(ACC) 7.5A ACC
(BAT) 10A TAILE
(BAT) 10A FR DOOR RH
(BAT) 10A MPX-B
J28 Multiplex Tilt & Telescopic ECU
TIM+ TIM- VCI TIS E1 TEM+ TEM- VCE TES E1 GND
ID ACC ALTB BATB BECU
MPX1 MPX2 OCTV
Telescopic Motor
Telescopic Sensor
J22 Power Tilt Motor
GND1 GND2
27500-P1FC0 Door Mirror ECU RH (Cover Side J28 RH)
27500-P1FC0 Door Mirror ECU RH (Cover Side J28 RH)
Door Mirror Connecting Unit Switch Assembly RH
Rear Window Defogger and Switch Assembly RH
Rear Window Defogger Relay Assembly
L11(A) Junction Connector
L10 Outer Mirror Control ECU Assembly RH
DILE SILT GND MIRE MIRE M1 M2 M3 OCTV MPX2 LIS
MMRY
L7 Front Seat Memory Switch RH
P33 Certification ECU Assembly
MPX1 MPX2 RCD RDA RSSI ASEL
P31(A)/P4(B) Door Control Receiver
HS DATA RSSI ASEL ANT GND
ANT
Roof Antenna
Front Connector
M60 Power Control Unit (PCU) Assembly
MPX1
Power Door Control ECU
(IG) ECU-IG RH
(BAT) 10A MPX-B
J2 Junction Connector
J26(A) Windshield Wiper Switch Assembly
J26(A) Windshield Wiper Switch Assembly
Tilt and Telescopic Switch
Down Up Seat Down
* 3: Before Aug. 2009 Production
* 4: From Aug. 2009 Production
A62 Brake Actuator Assembly
FL+ FL- FR+ FR- RL+ RL- RR+ RR- CAN4 CAN5
Speed Sensors
Speed Sensors
J2(B),J9(A),J12(B) Junction Connector
J2(B),J9(P),J7(G) Junction Connector
CAH CAL
MPC1 MPC2 MPS1 MPS2
J9 Junction Connector
J7 Junction Connector
CAN1 CAN4
Gateway ECU
(IG) 10A LH-IG
27700-JW6D0 Seat Control ECU Assembly
FL+ FL- FR+ FR- RL+ RL- RR+ RR- CAN5 CAN4 MS
Speed Sensors
Front Passenger Seat Switch Assembly
Front Passenger Seat Switch Assembly
Air Suspension Assembly
* 1: Before Aug. 2008 Production
* 2: From Aug. 2008 Production
* 3: Before Aug. 2009 Production
* 4: From Aug. 2009 Production
* 5: Before Aug. 2010 Production
* 6: From Aug. 2010 Production
(BAT) 10A MPX-B
(IG) 15A GAUGE
(BAT) 10A DOME
J27 Junction Connector
A(29)/L(10)(B) Junction Connector
MPX+ MPX- B IG+ B
Input Circuit
Power Supply Circuit
Micro Computer
Combination Meter Sensor
J24 Combination Meter Assembly
E2 ES
J27 Junction Connector
J27 Junction Connector
: There is no wire color information.
* 1: Before Aug. 2008 Production
* 2: From Aug. 2008 Production
* 5: Before Aug. 2010 Production
* 7: Before Aug. 2012 Production
* 8: From Aug. 2012 Production
* 9: New Zealand, Australia
*10: Except *9